ahead RC Crawler Bog 406 Crew Cab Assembly Manual



Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

Electronics

- 5mm Warm White LED x4
- 3mm Orange LED x2

Hardware

Hardware	Quantity	Check √
M2*5 Socket head	24	
M2*8 Socket head	6	
M2*10 Socket head	12	
M2*15 Socket head	2	
M2*20 Socket head	1	
M3*10 Socket head	8	
M3*15 Socket head	9	
M3*15 Button head (BH)	5	
M3*20 Socket head	2	
M3*25 Button head (BH)	1	
M3*10 Grub Screw (GS)	1	
M3*20 Grub Screw (GS)	8	


Before you begin

- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling


Tip: It will help to paint all of the parts before final assembly


Assembling the cab



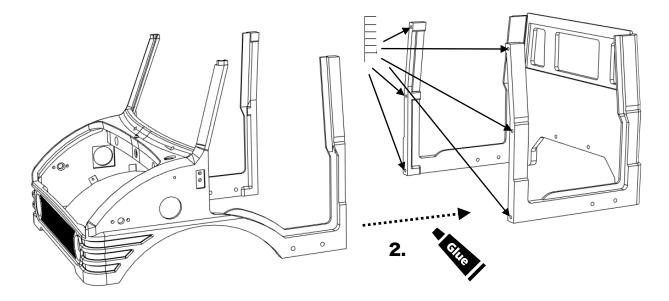


Installing the headlight buckets

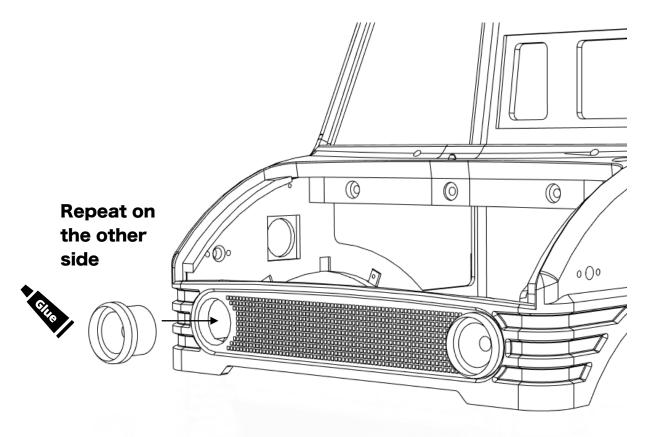


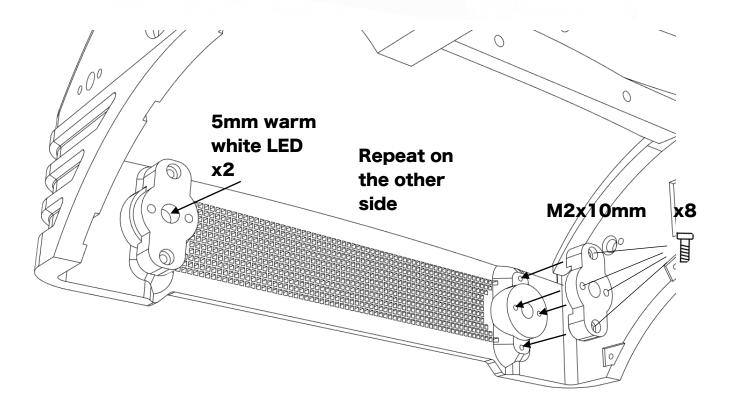


Installing the fenders

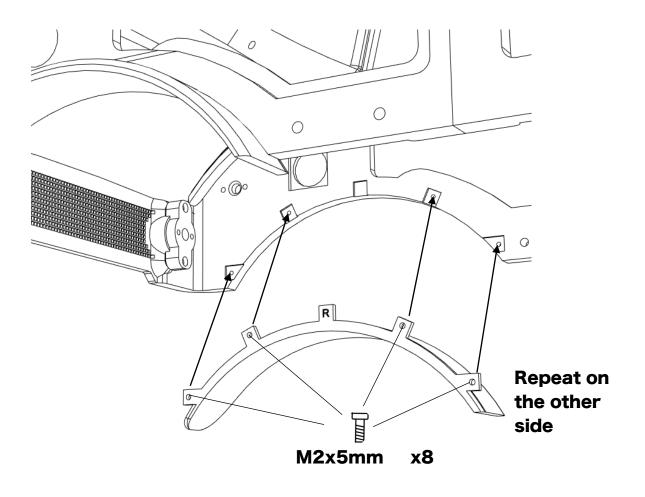



Assembling the Mirrors

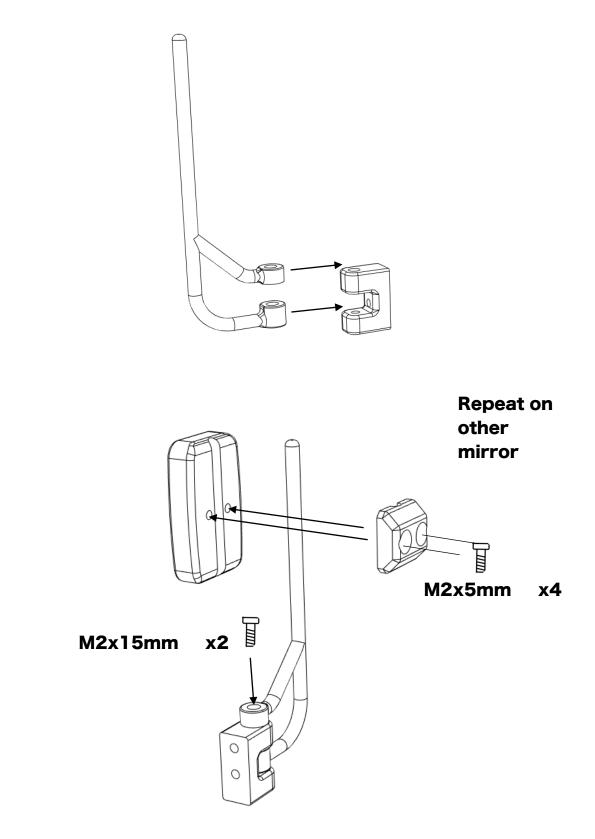


Installing the mirrors and snorkel

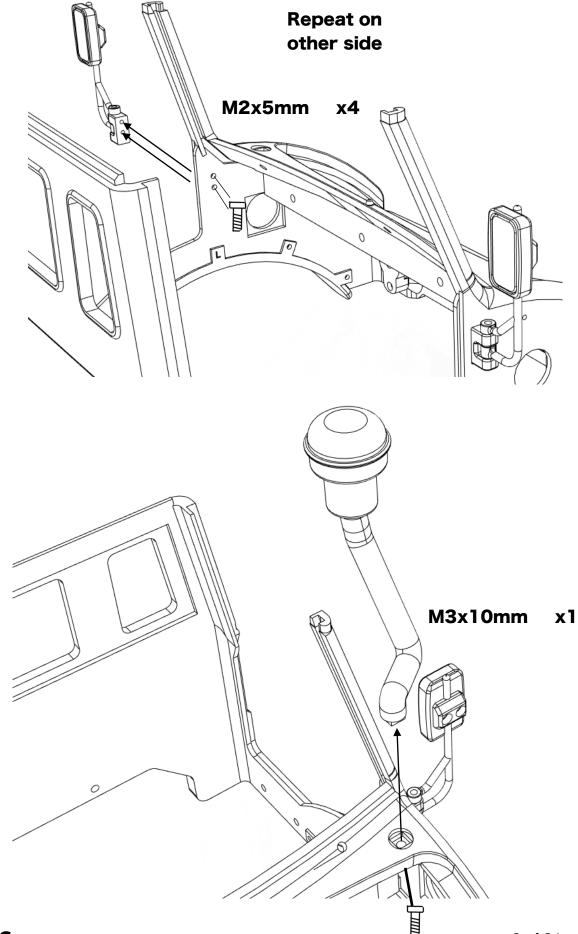

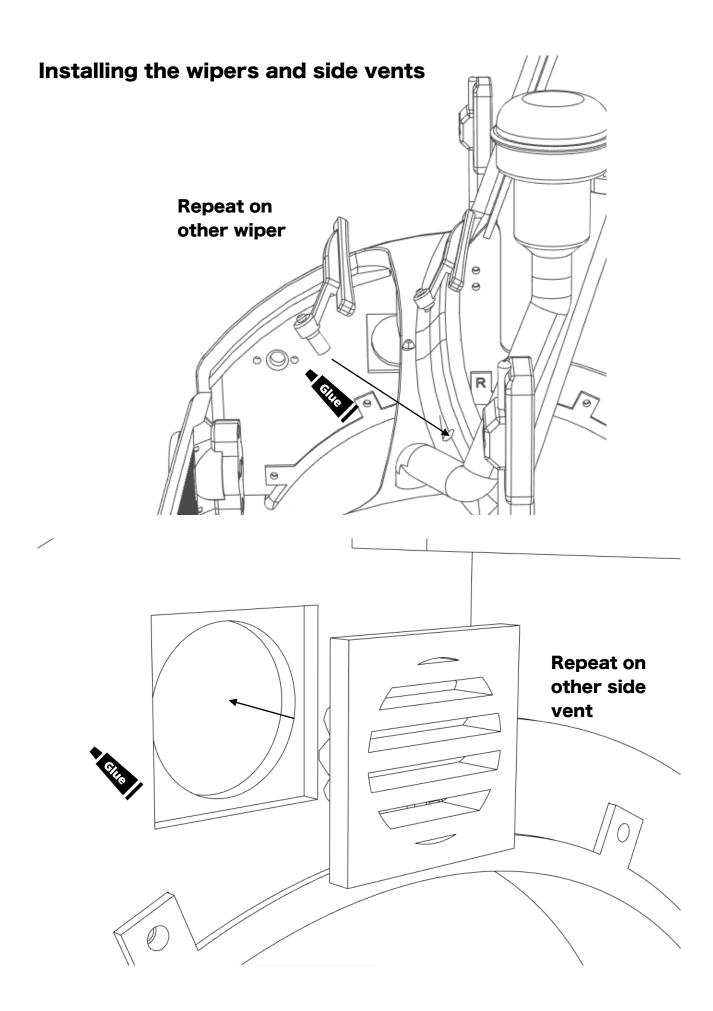


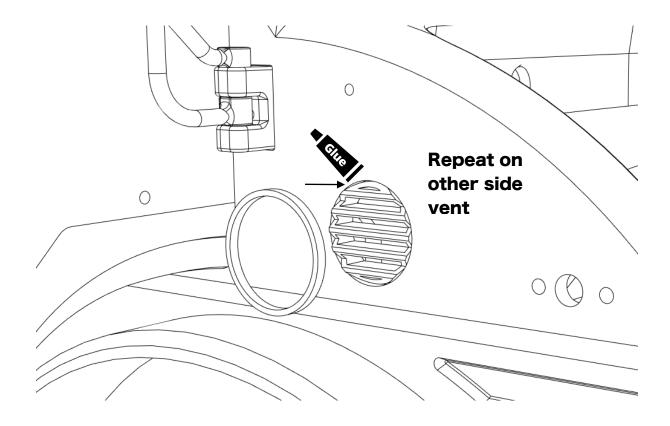

Assembling the exhaust

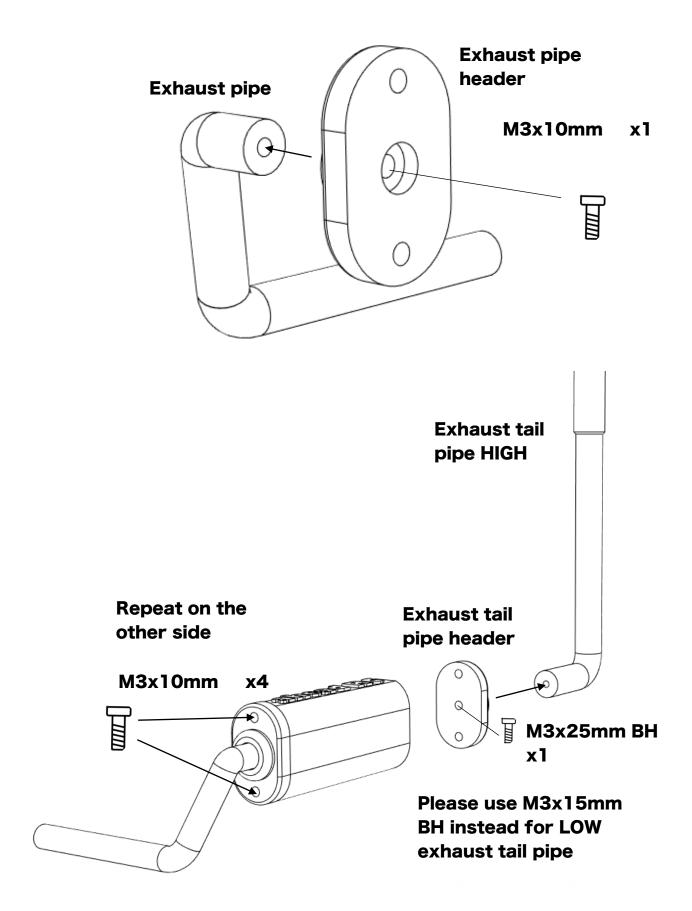


Installing the vertical mounted exhaust

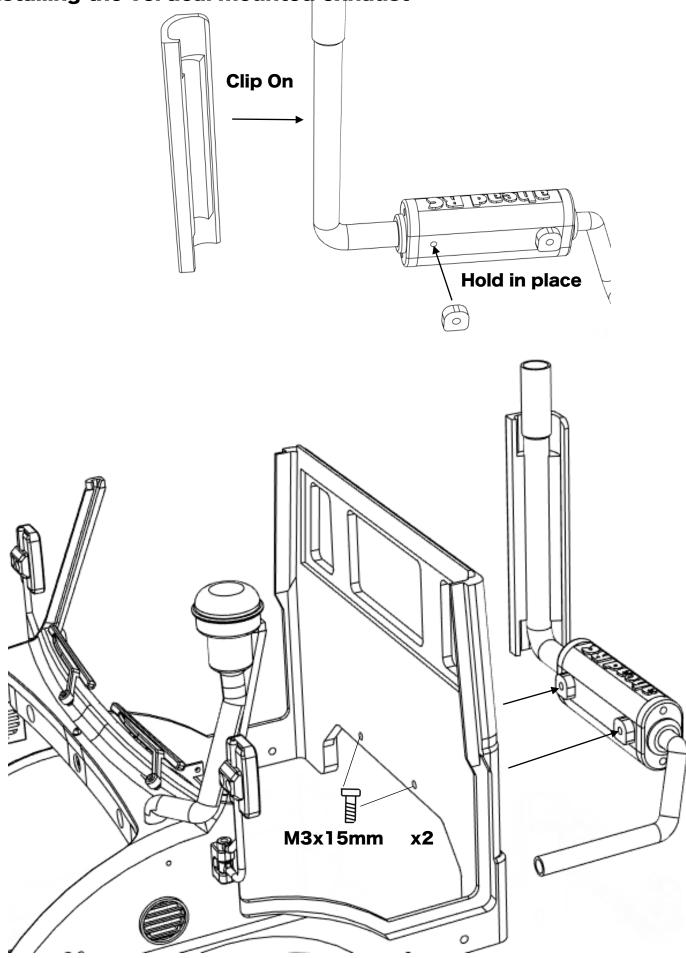



ahead RC

Installing the horizontal mounted exhaust

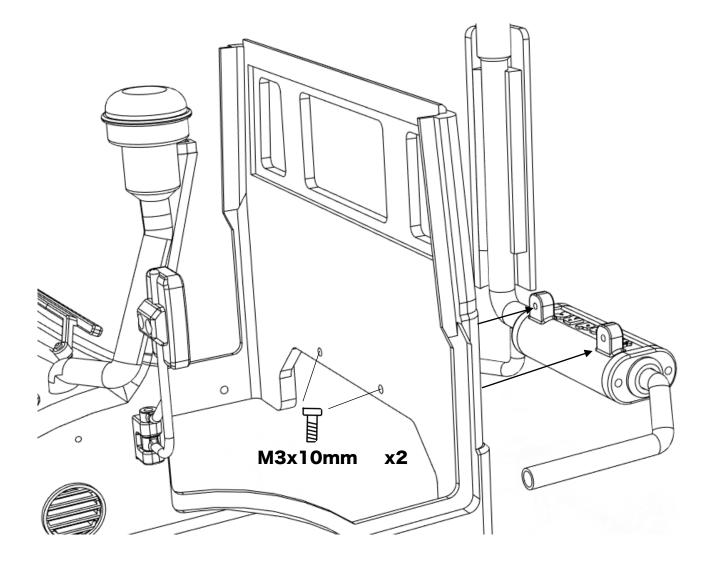


M2x20mm x1

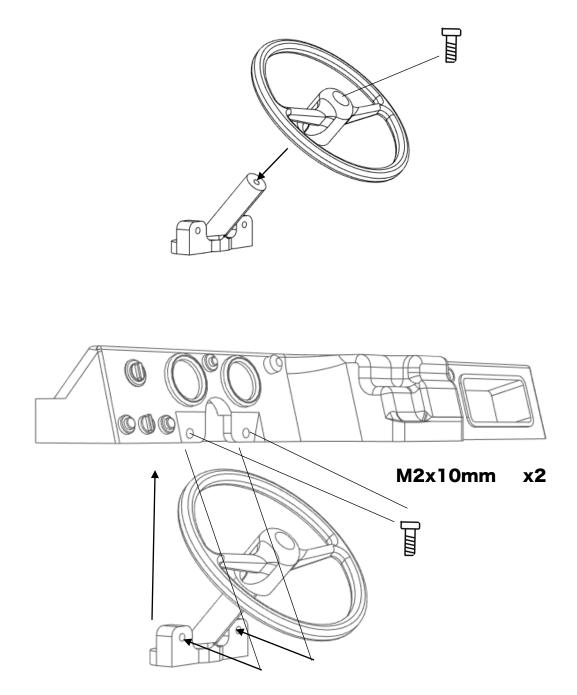


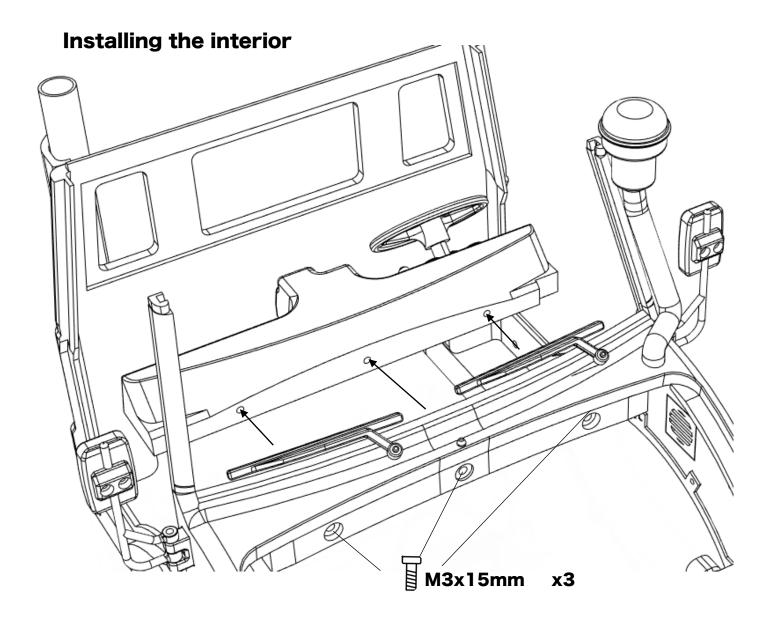


Installing the roof

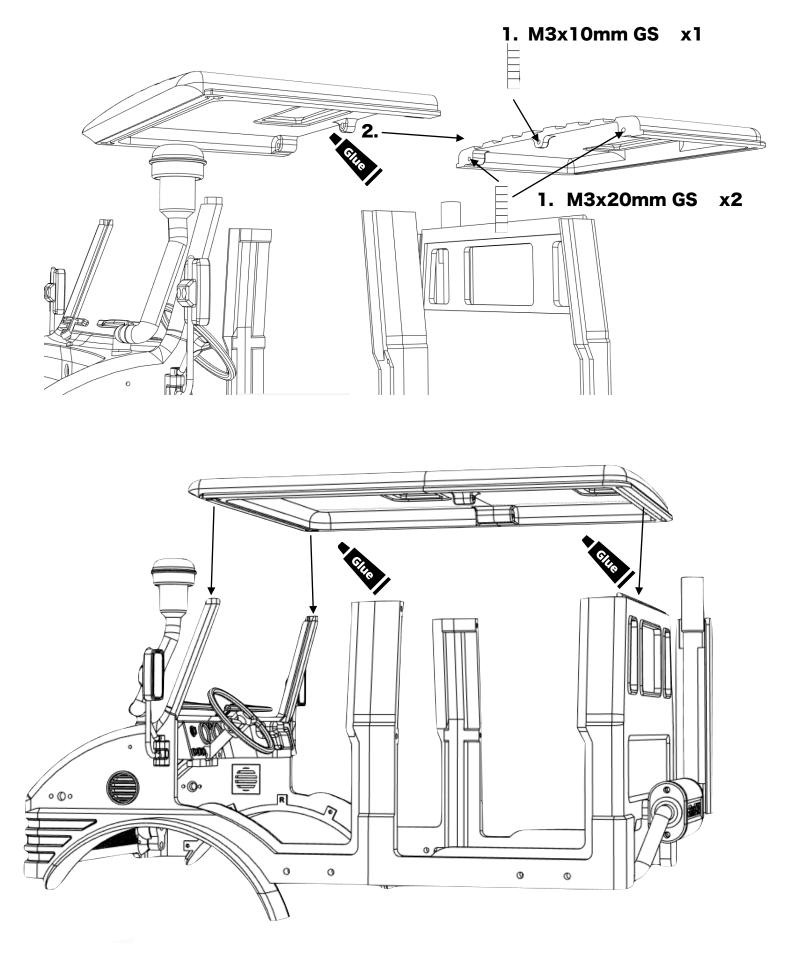



Assembling and installing the doors

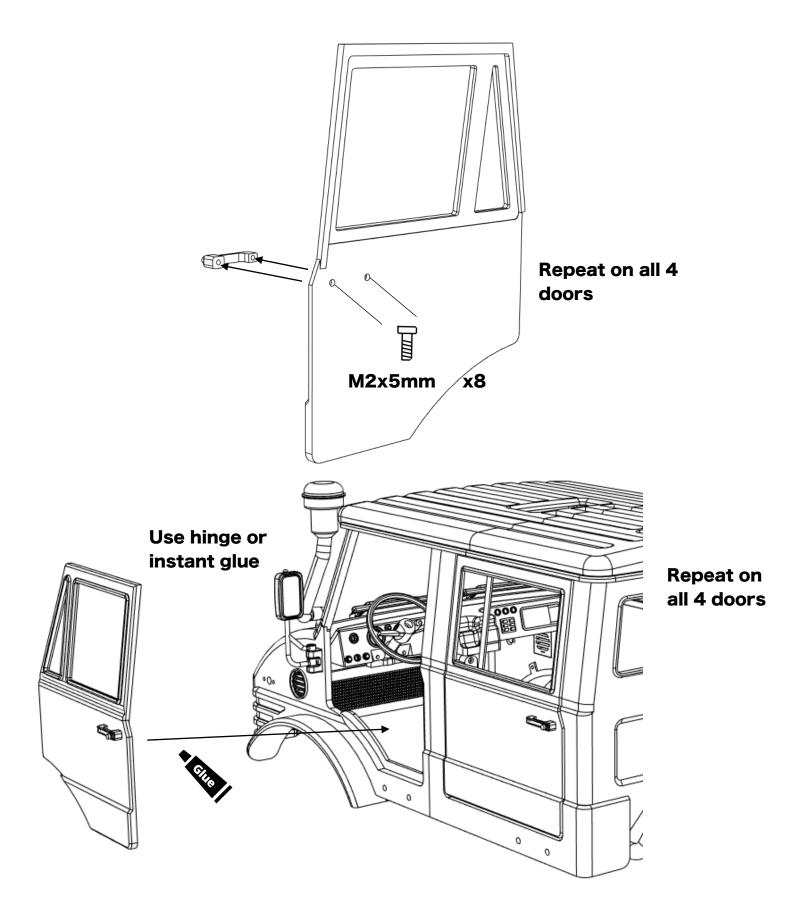



Installing the lights

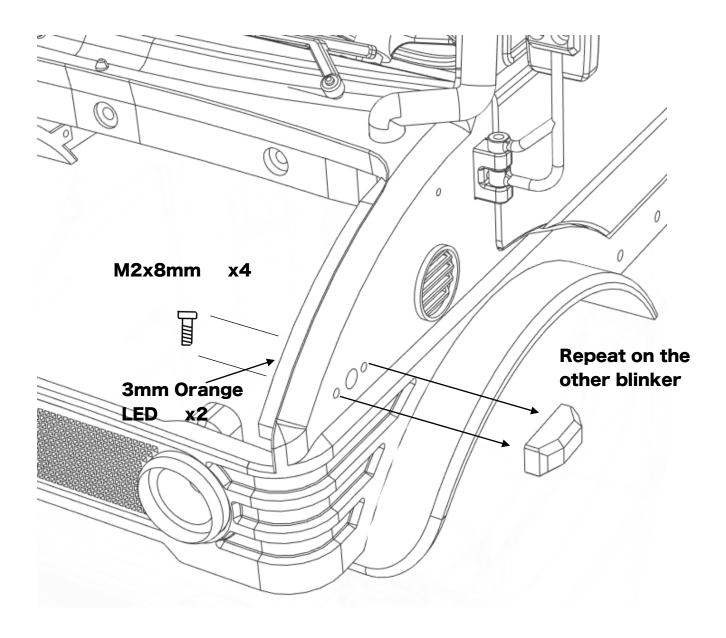

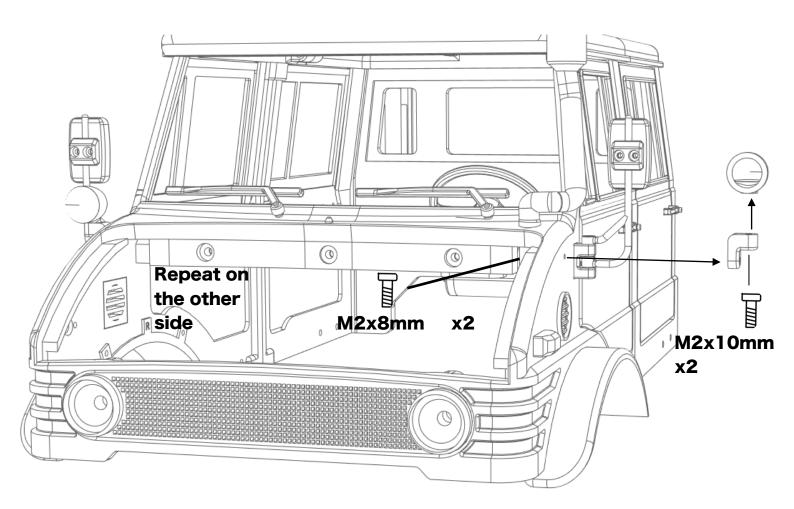


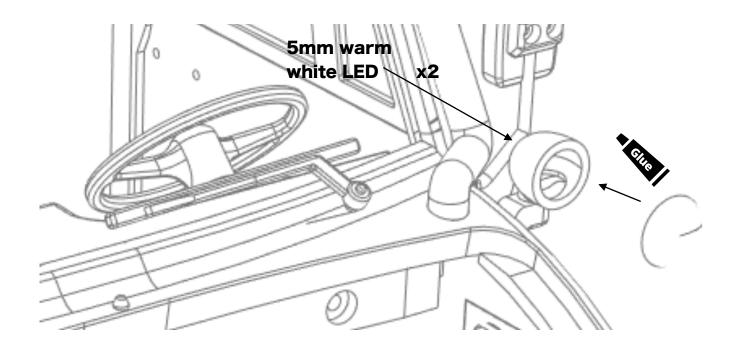


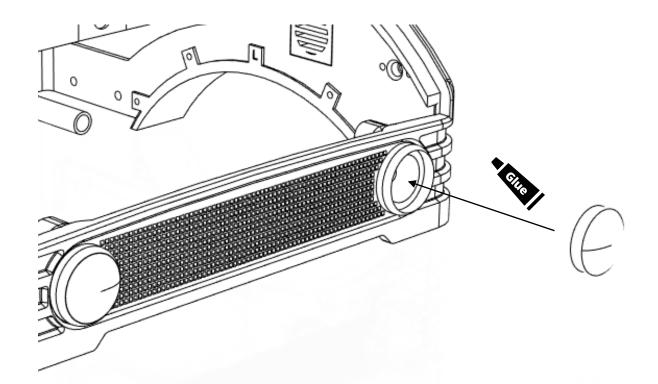

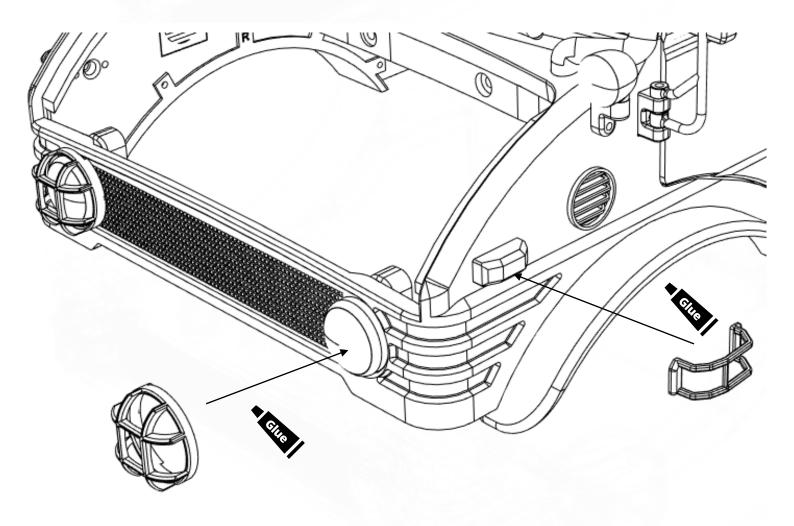



Installing the grille ornaments

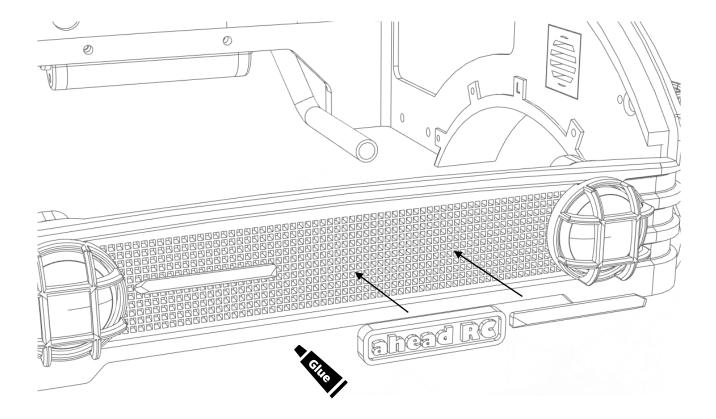

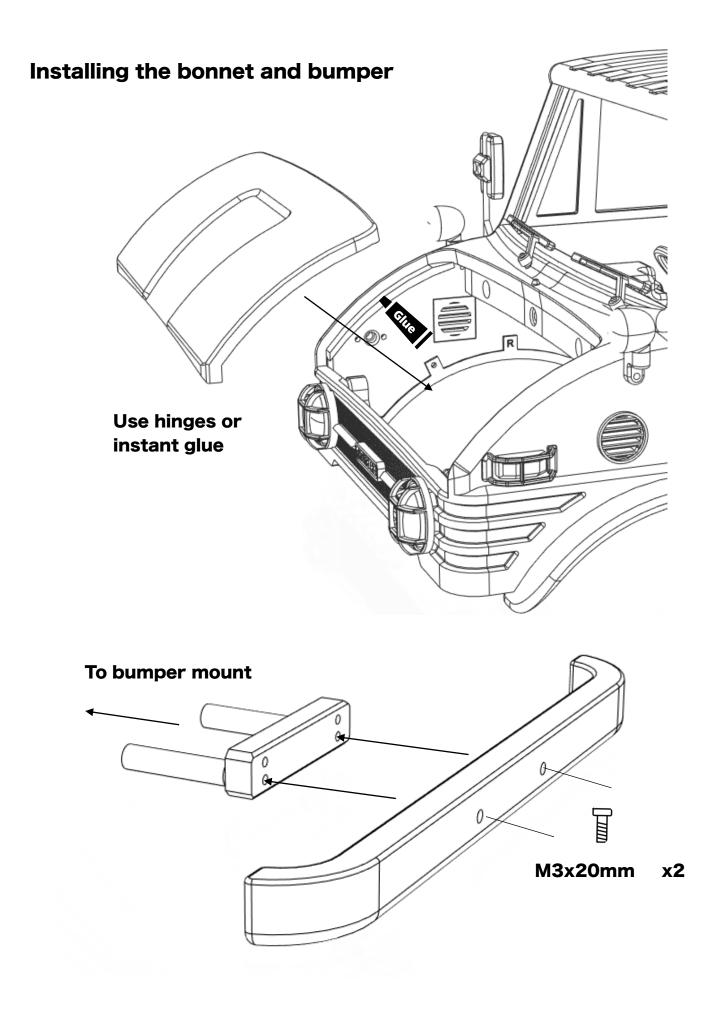

Installing the mounts

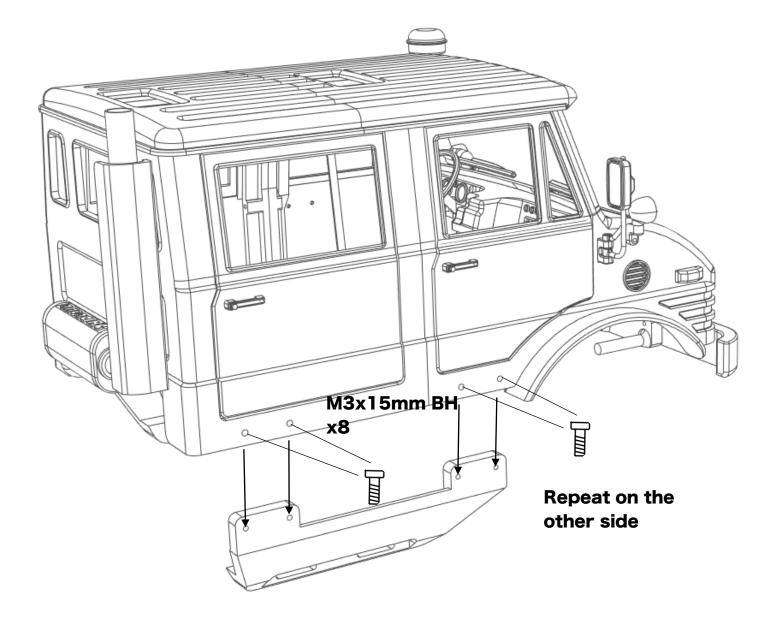

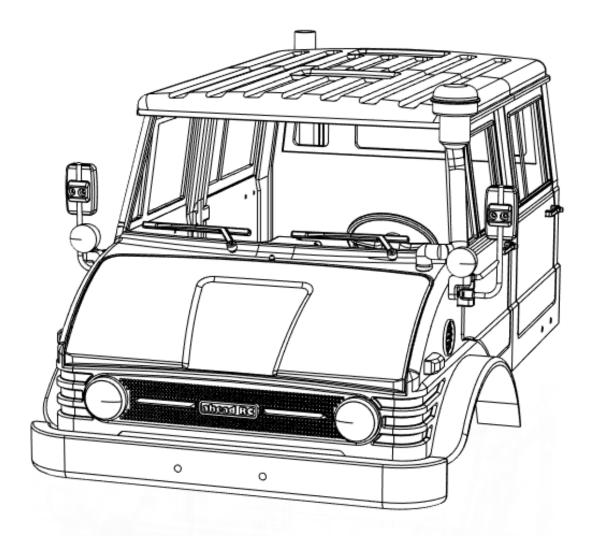

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at: <u>aheadrc@gmail.com</u> or visit us at: <u>www.aheadrc.com</u>

Best of luck with your build!