

# **ahead RC** Crawler

## M939 Sideboard Flatbed

### TRX6

## Assembly Manual



## Required tools and hardware

### Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- 1.5mm L shaped hex wrench
- 2.5mm L shaped hex wrench
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

### Electronics

- 3mm LED Orange x4
- 5mm LED White x2
- 5mm LED Red x2
- 5mm LED Orange x2


### Hardware




Hardware	Quantity	Hardware	Quantity
M2*5 Socket head	28	M3*20 Socket head	2
M2*8 Socket head	2	M3*25 Socket head	4
M2*10 Socket head	8	M3*12 Countersunk (CS)	12
M2*12 Socket head	6	M3*16 Countersunk (CS)	5
M3*10 Socket head	10	M3*20 Countersunk (CS)	20
M3*12 Socket head	11	10*2 magnet	4
M3*16 Socket head	8	M3 Washer	4




# Before you begin




- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling



Tip: It will help to paint all of the parts before final assembly


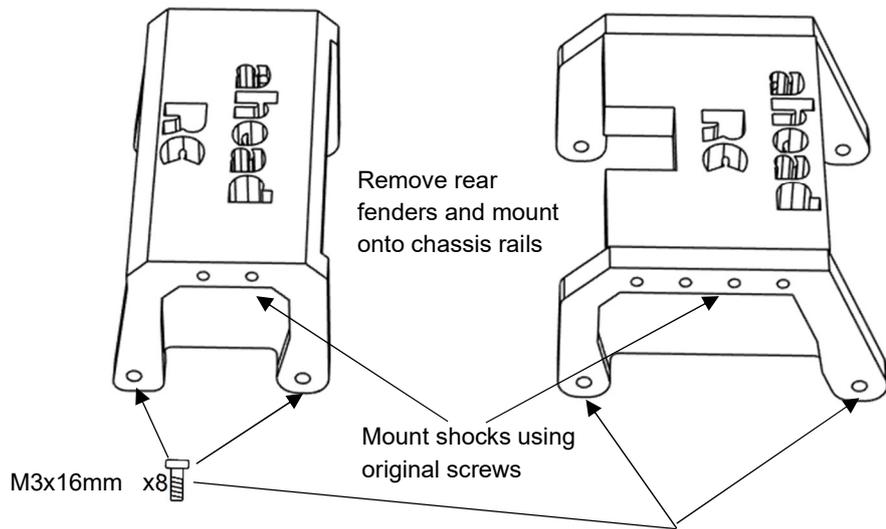


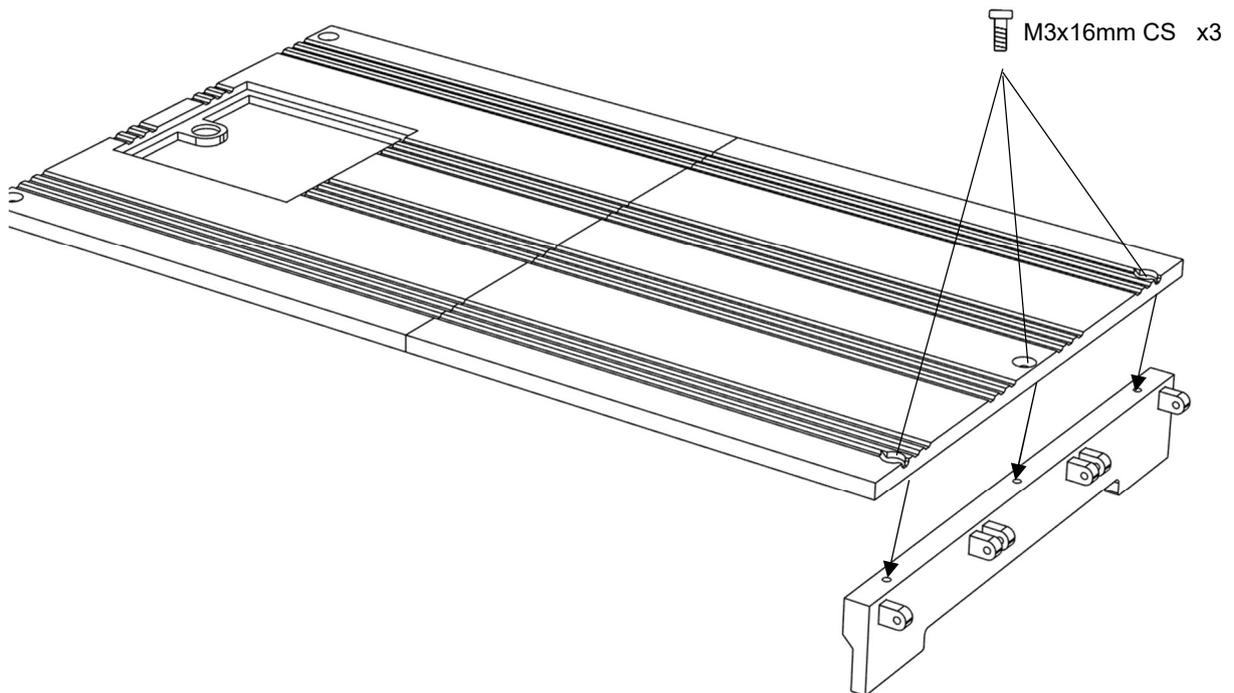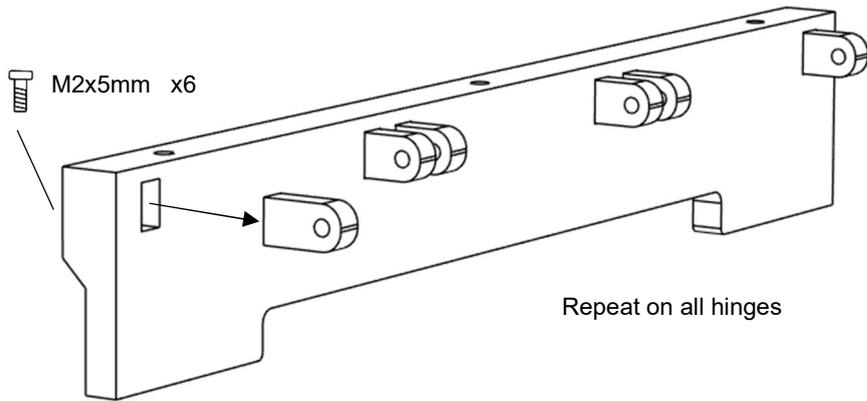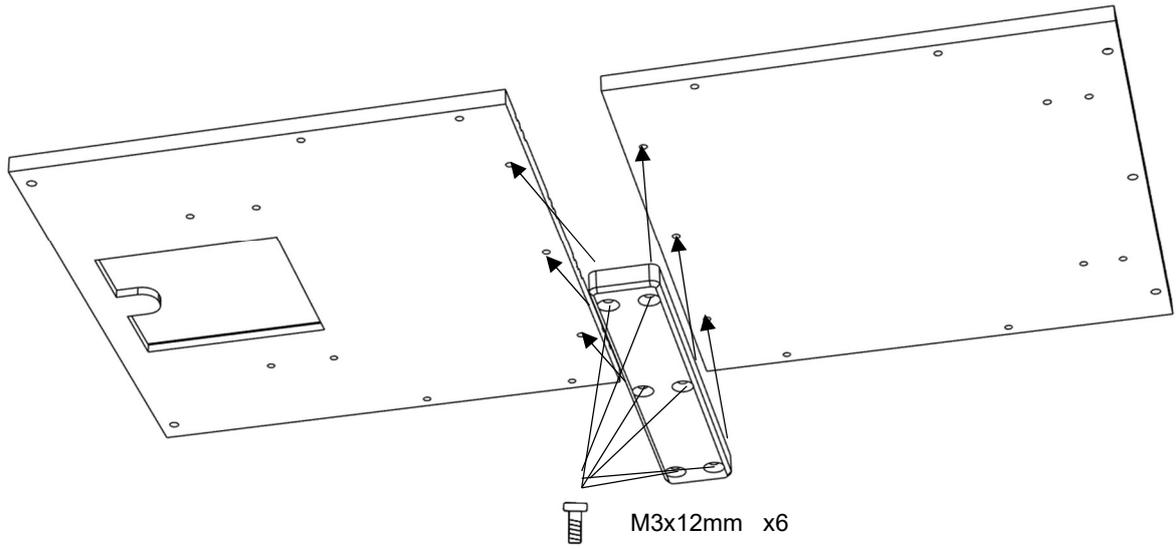

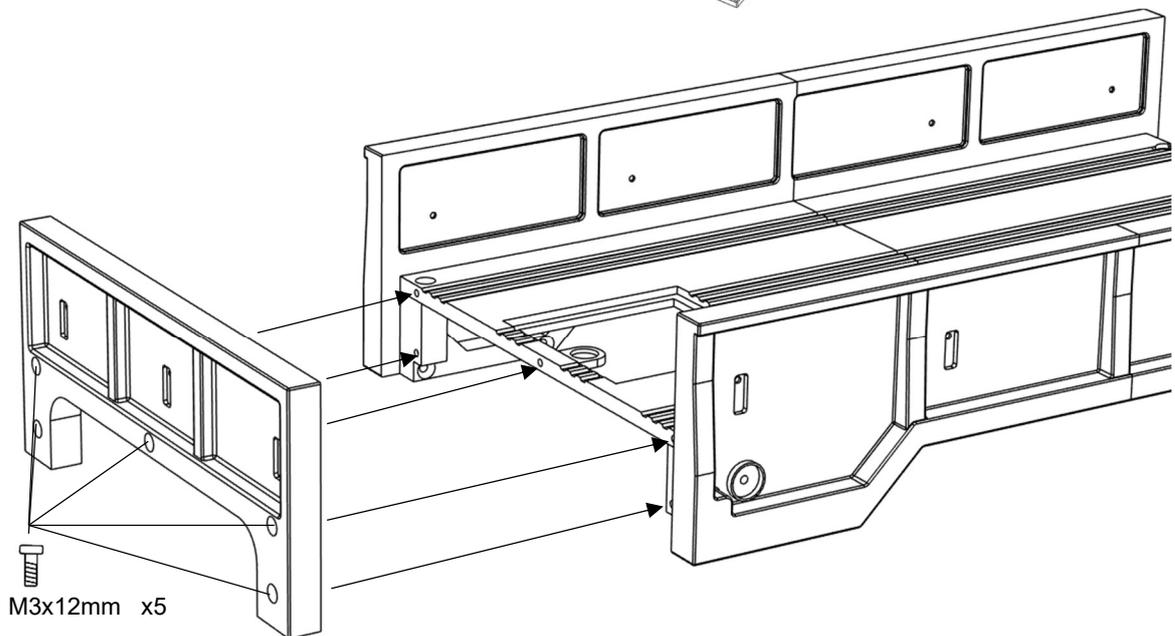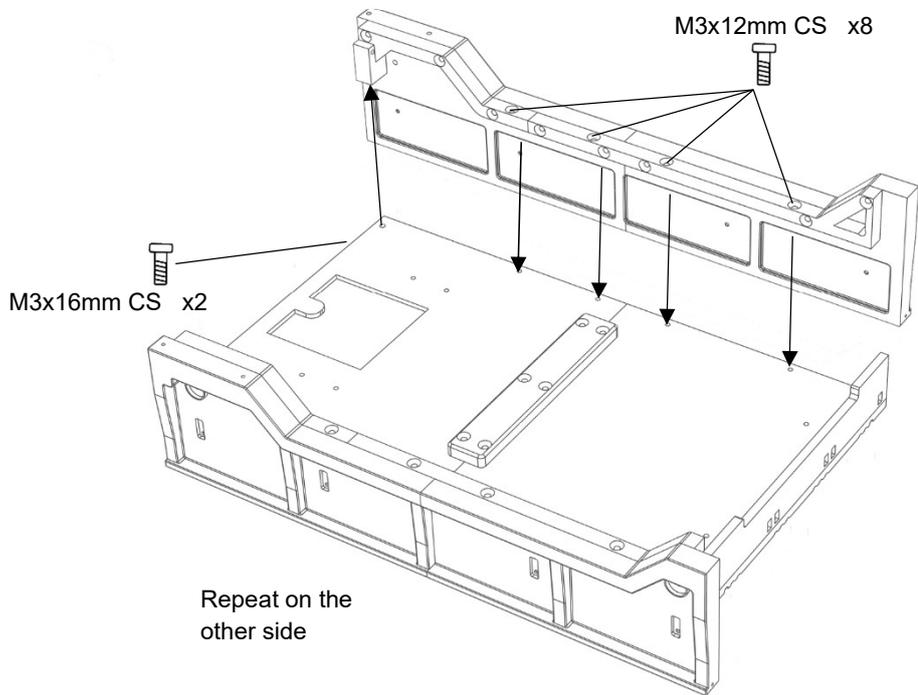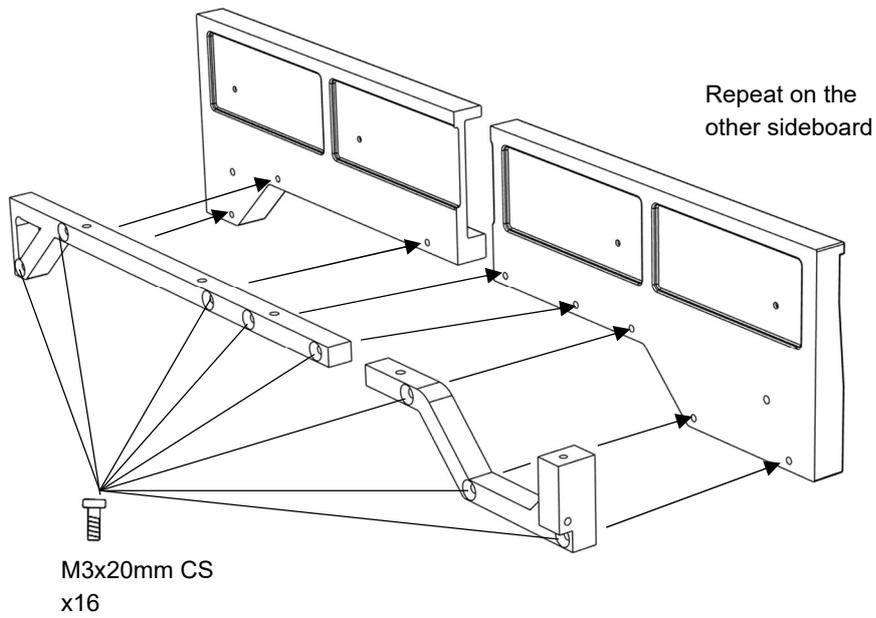


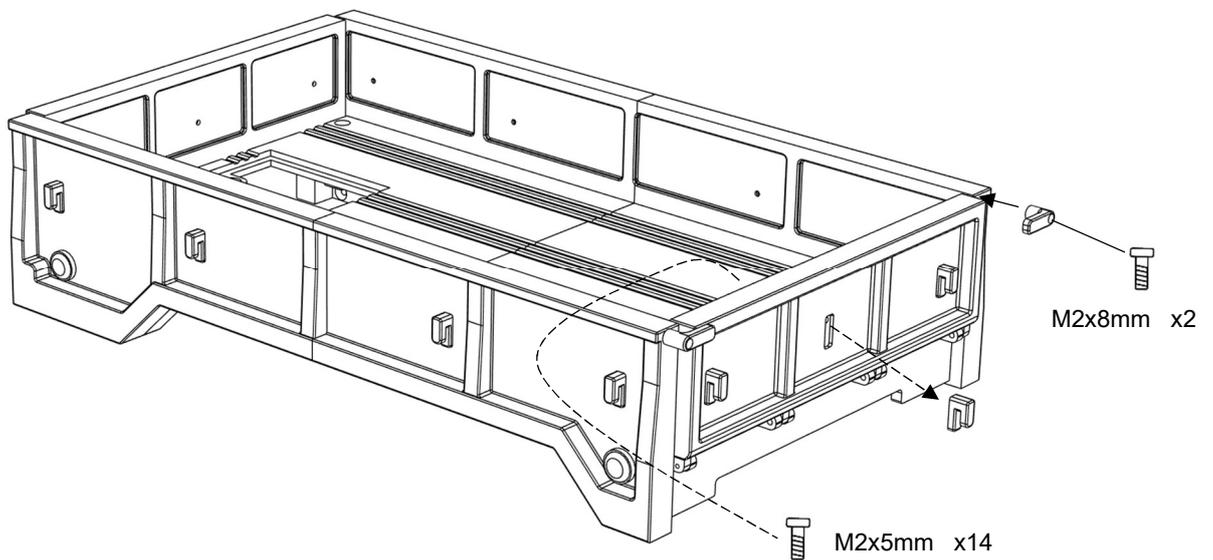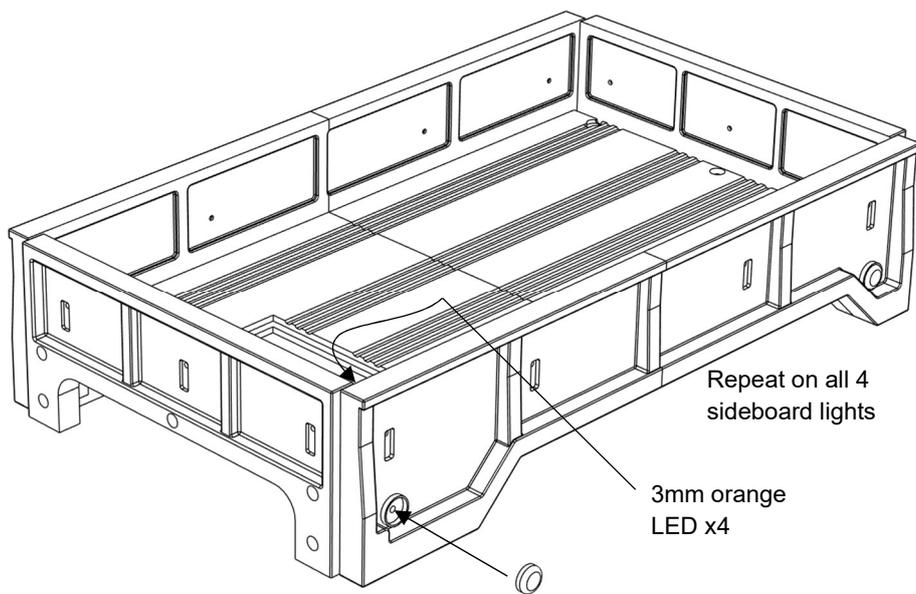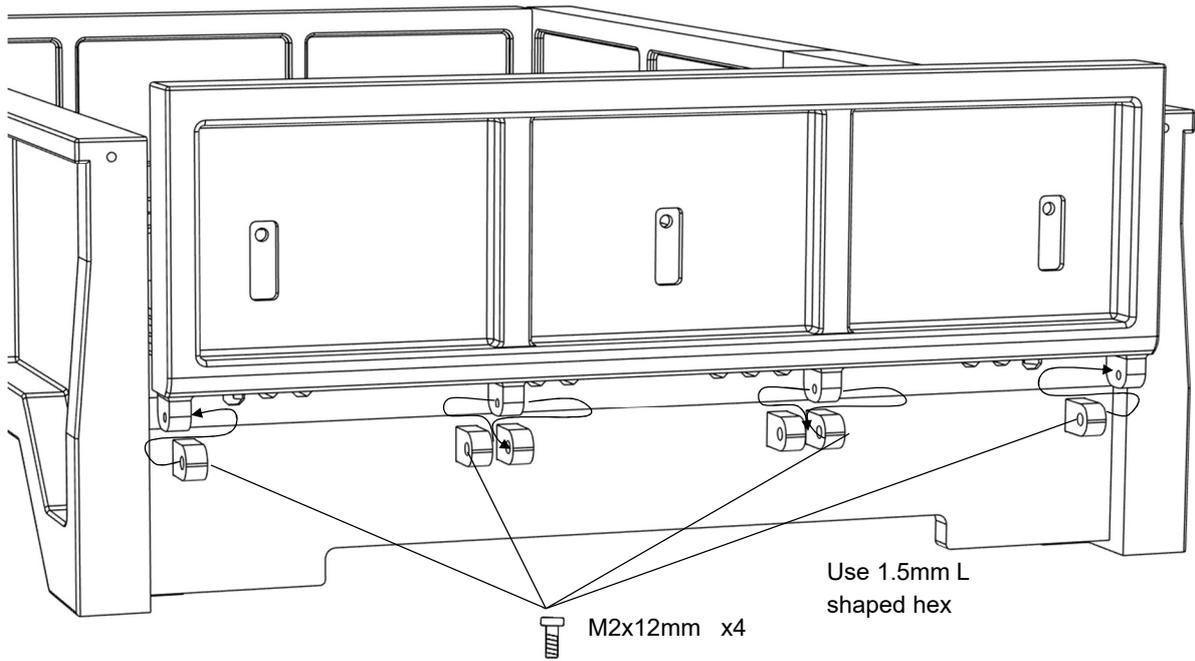

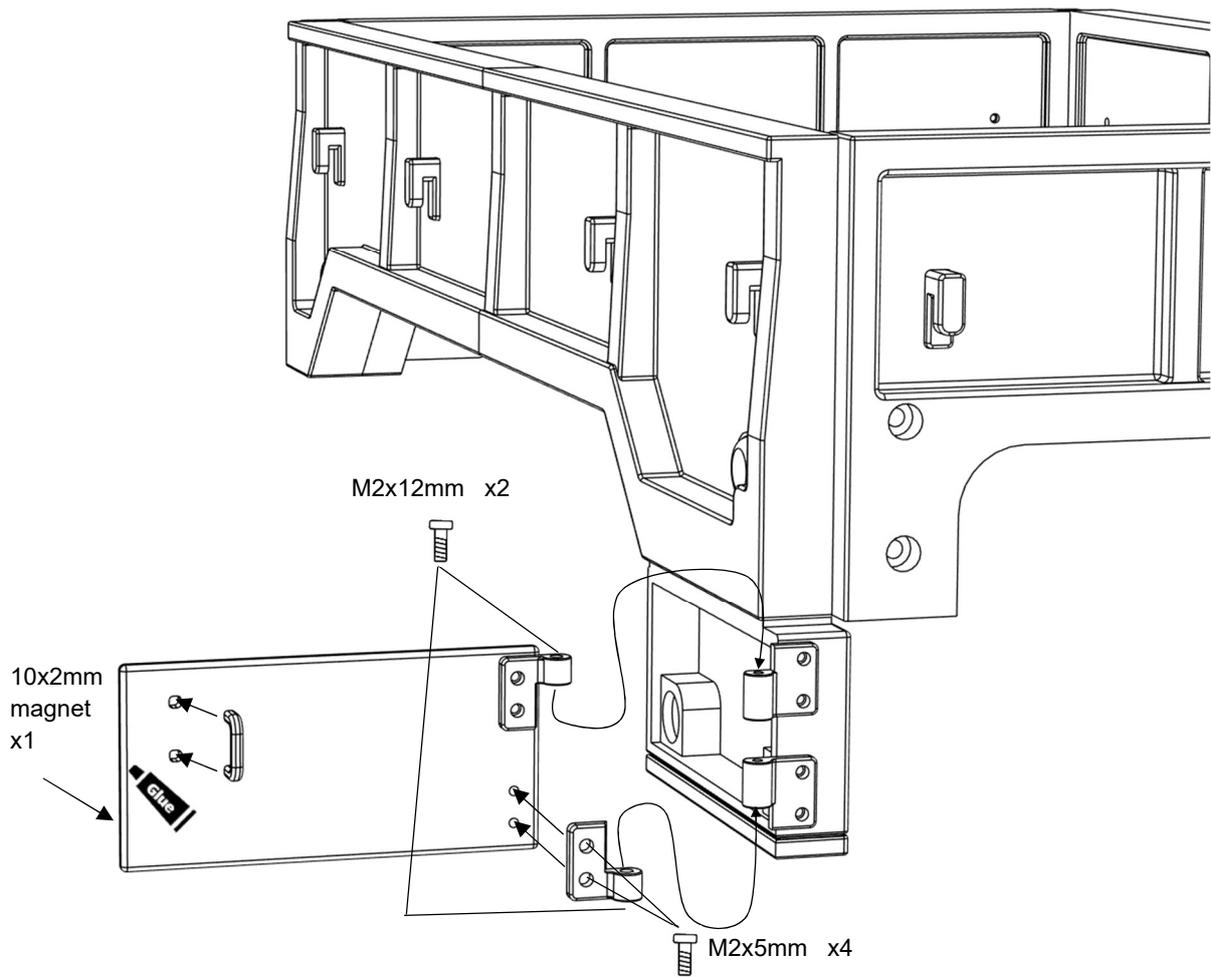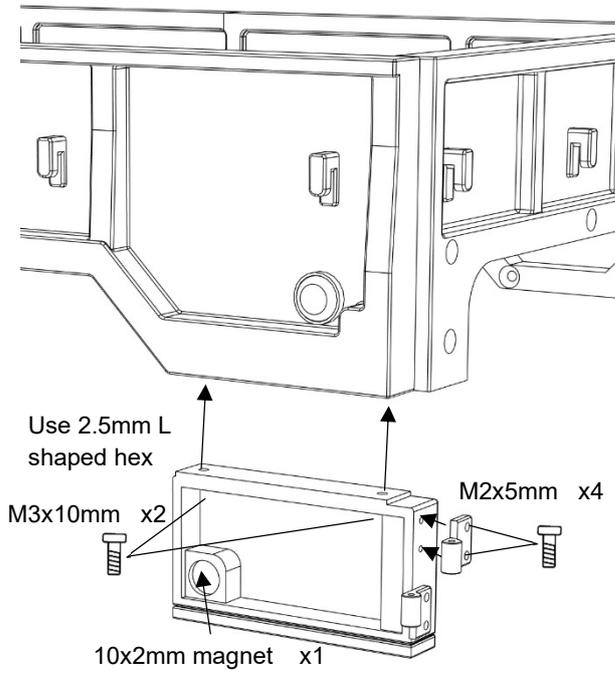


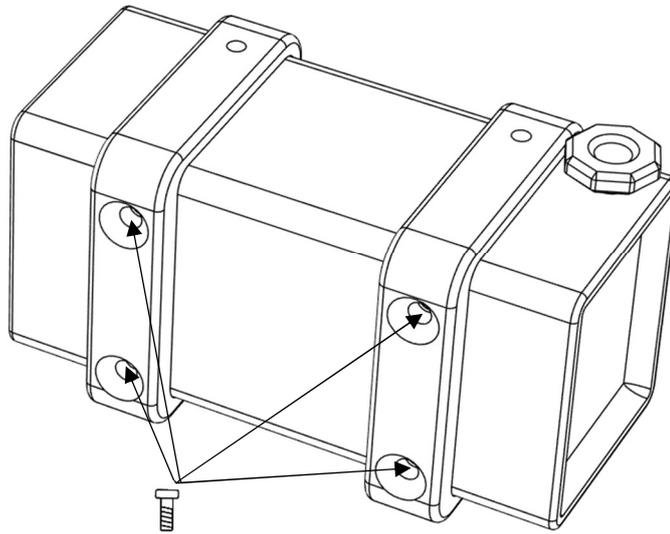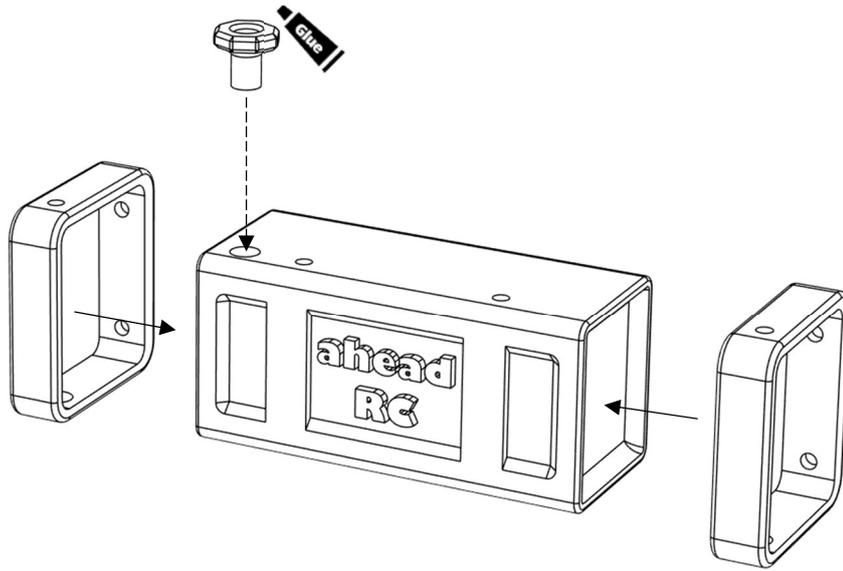

M3x12mm CS x4



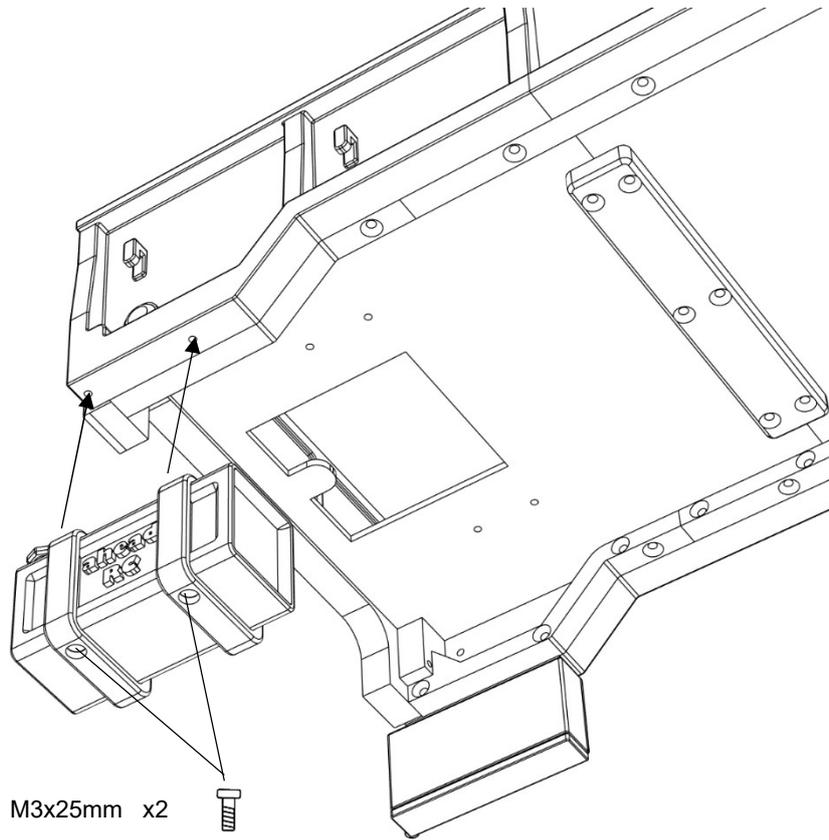



M3x25mm x2

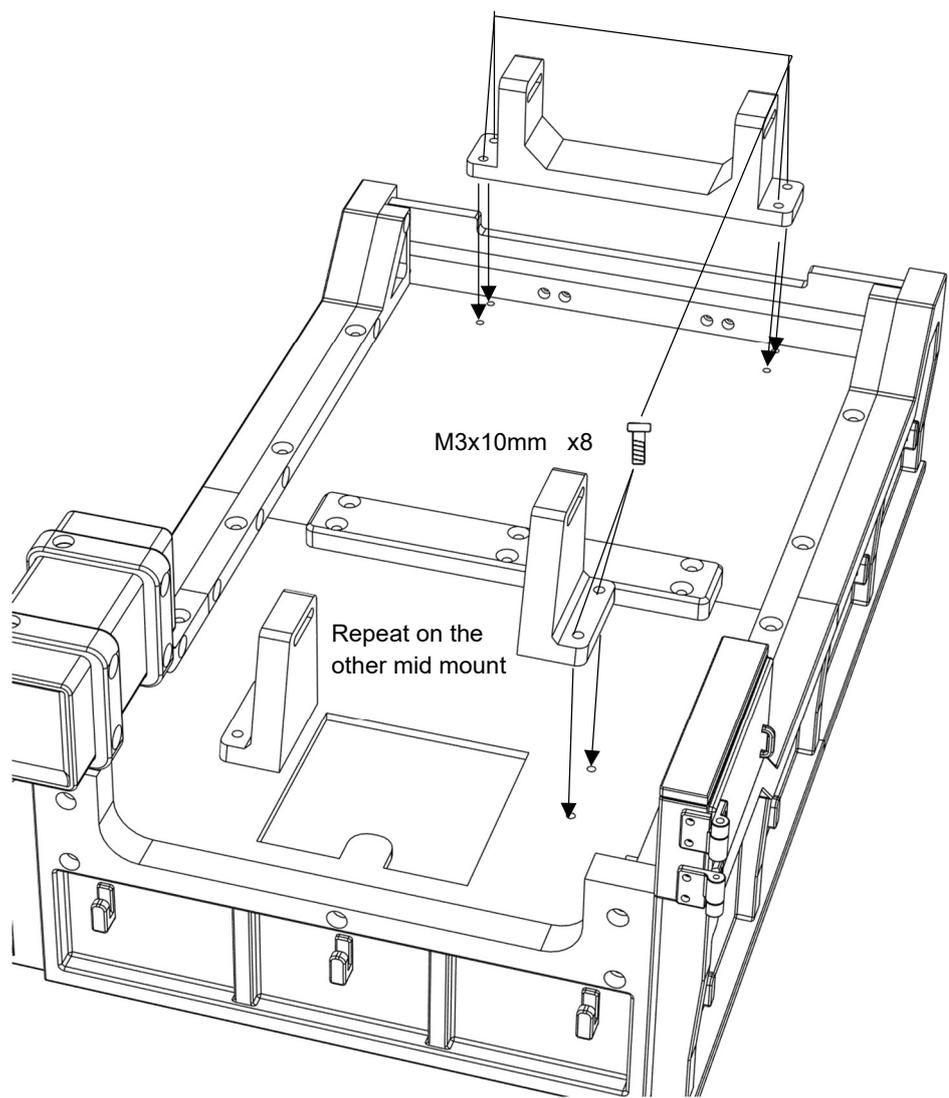


M3x10mm x8

Repeat on the other mid mount

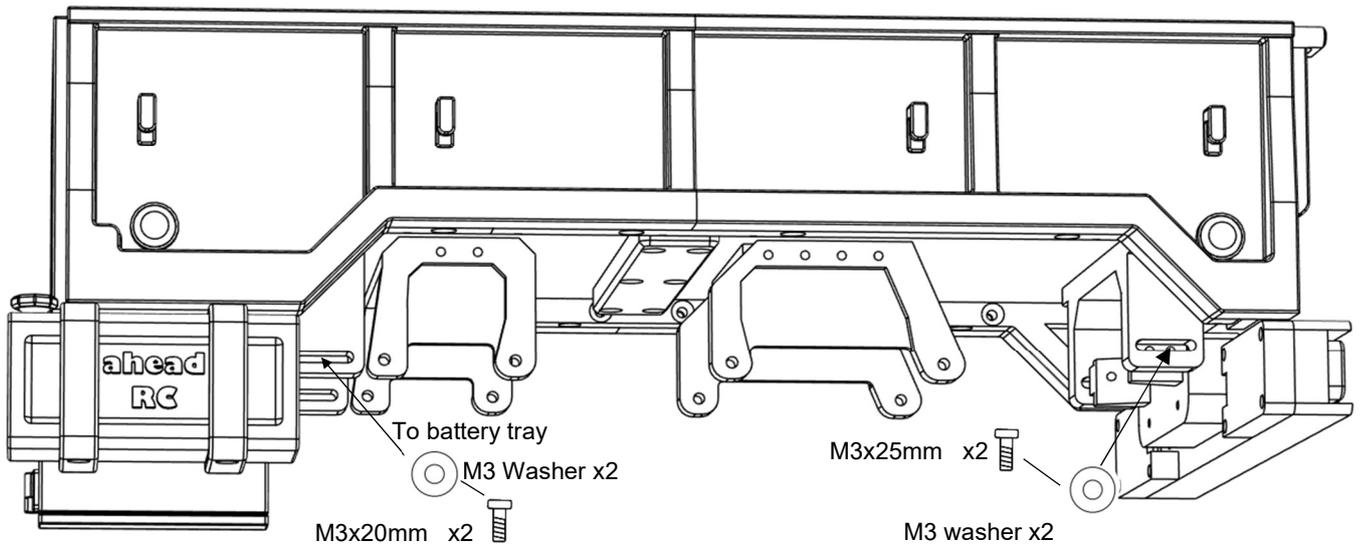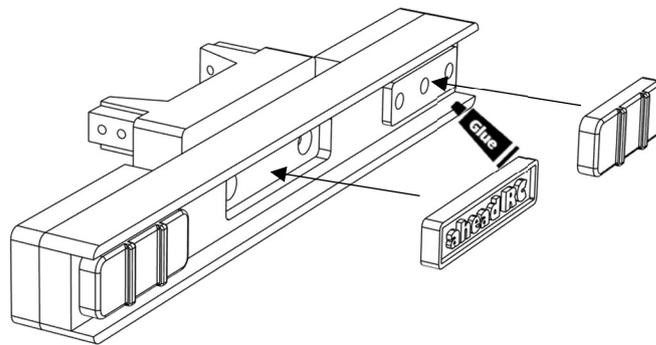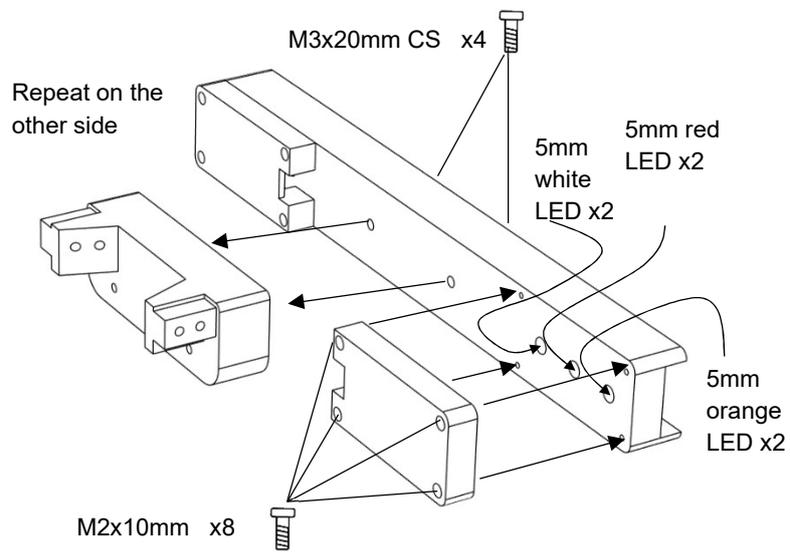

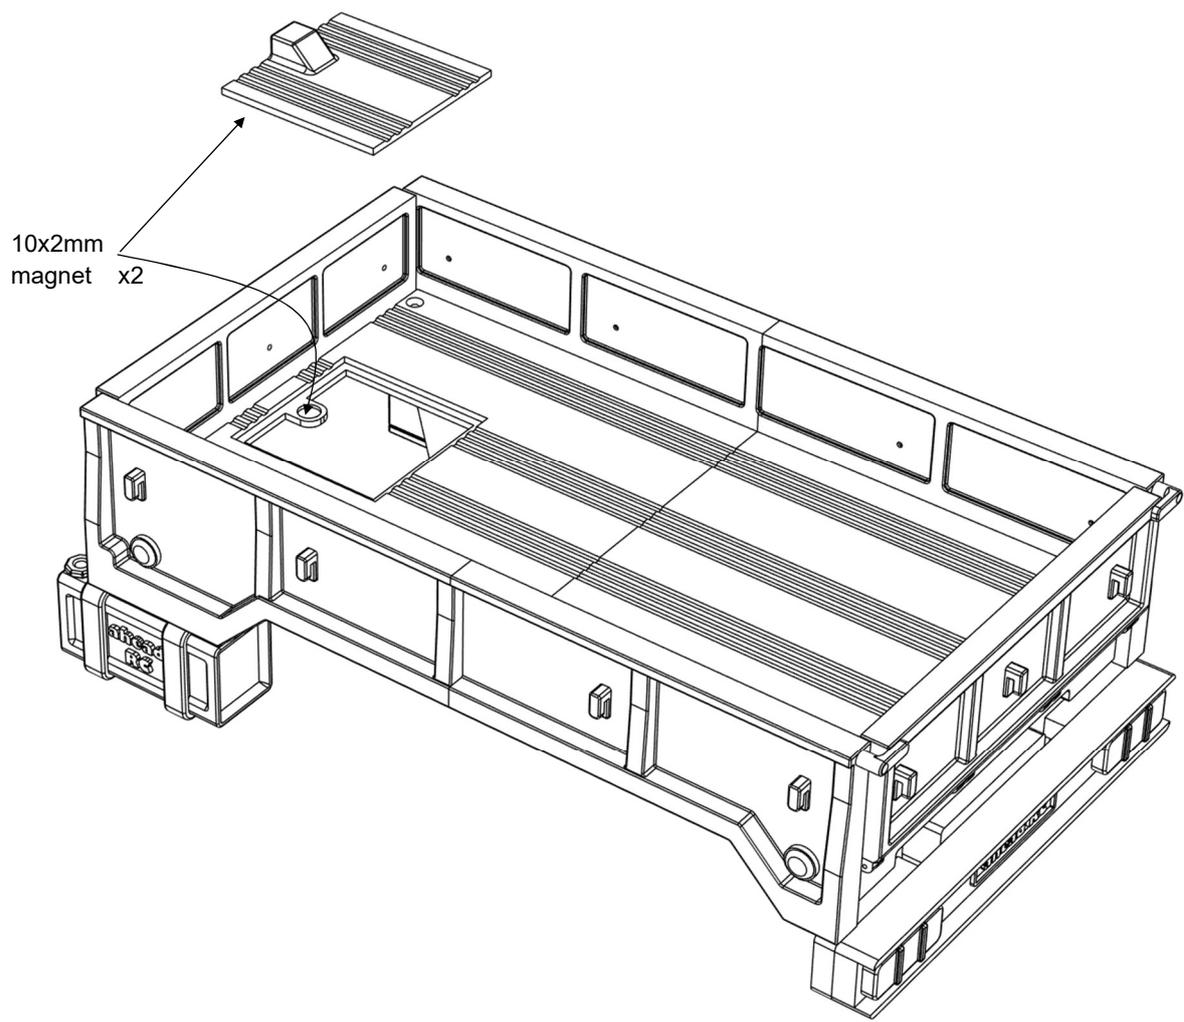

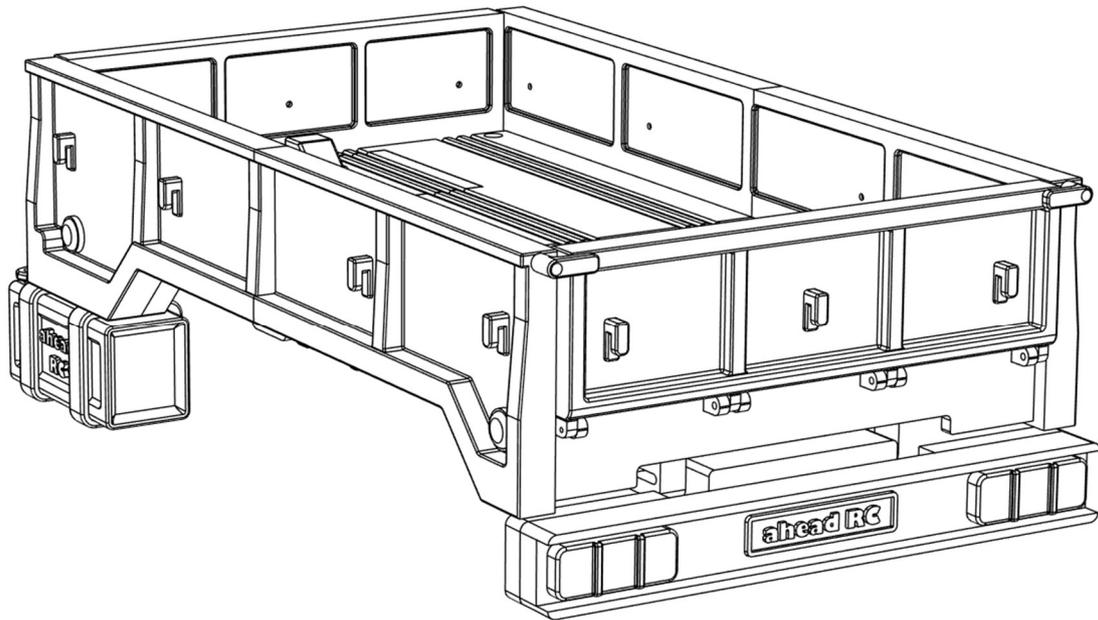

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

[aheadrc@gmail.com](mailto:aheadrc@gmail.com)

or visit us at:

[www.aheadrc.com](http://www.aheadrc.com)