

ahead RC Crawler U452

“Loaf”

Assembly Manual



Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

Electronics

- 5mm White LED x7
- 5mm Red LED x2
- 3mm Orange LED x6




Hardware



Hardware	Quantity	Hardware	Quantity
M2*5 Socket head	42	M3*15 Socket head	10
M2*8 Socket head	22	M3*20 Socket head	6
M2*10 Socket head	40	M3*5 Grub screw (GS)	1
M2*20 Socket head	2	M3*10 Grub screw (GS)	4
M3*8 Socket head	21	10x2mm magnet	6
M3*10 Socket head	17	Chassis mount screws: original length +10mm	4



Before you begin


- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling



Tip: It will help to paint all of the parts before final assembly

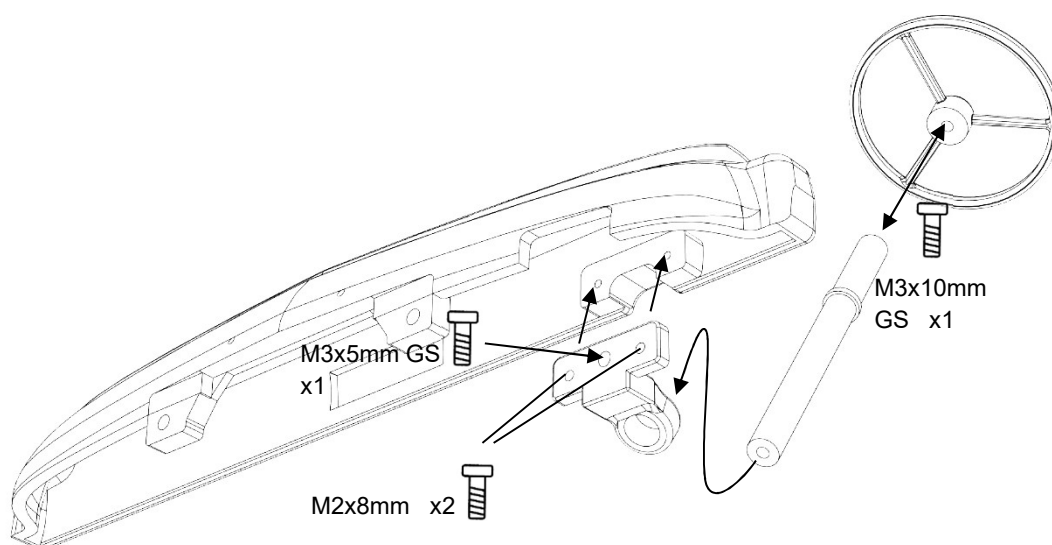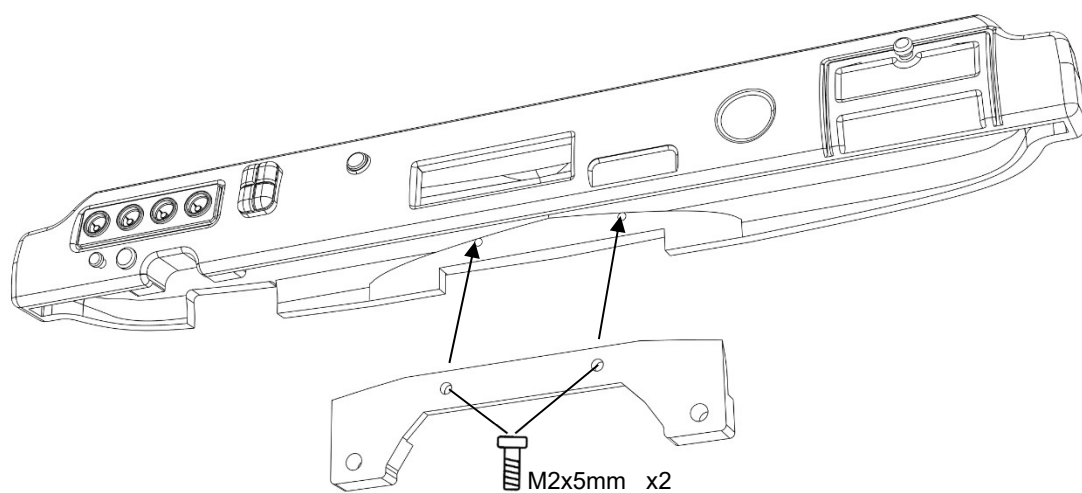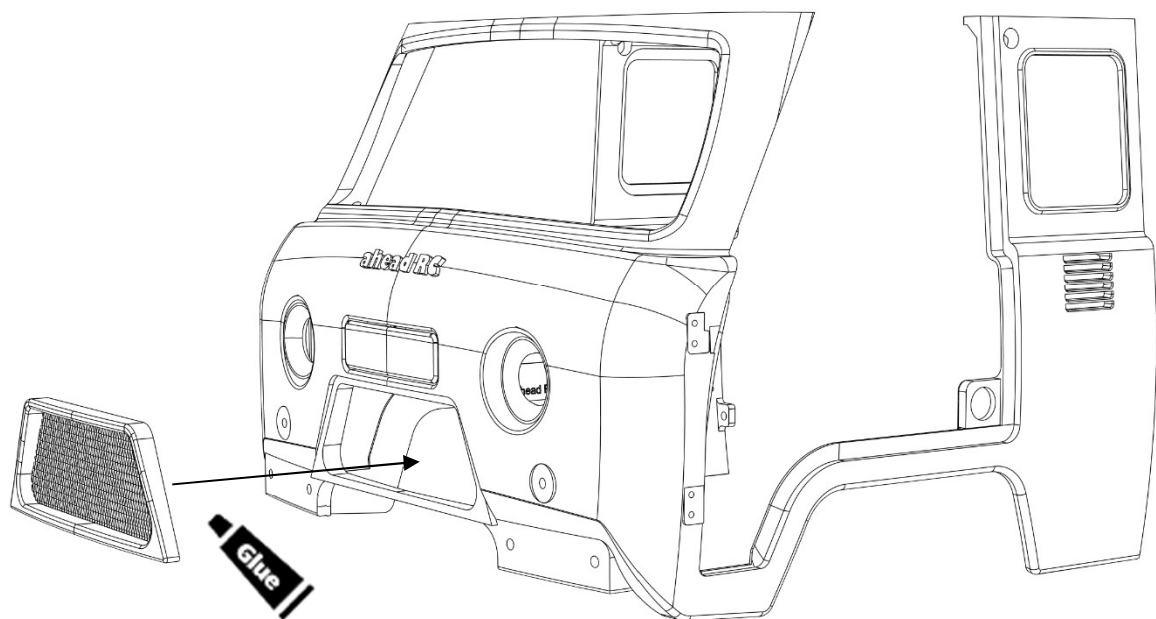


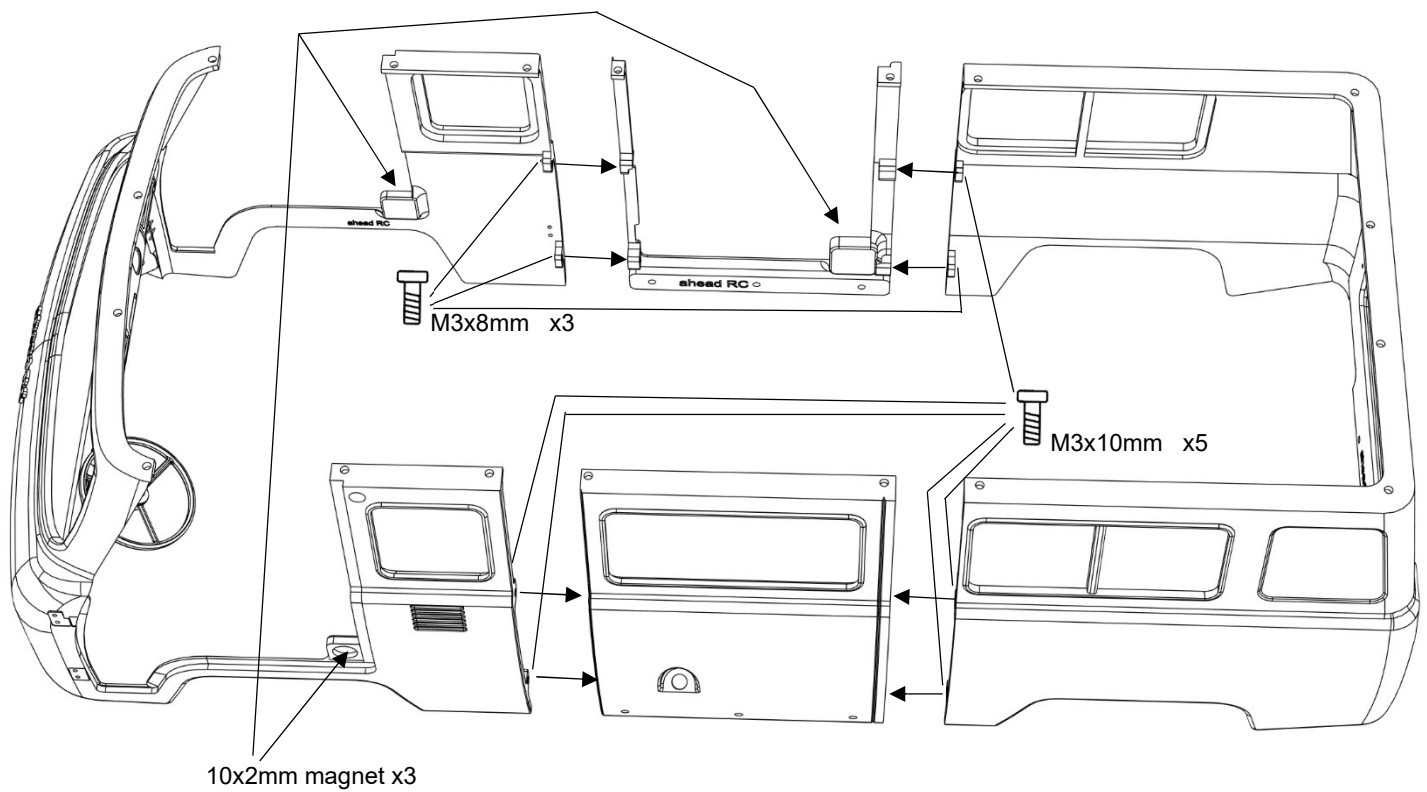
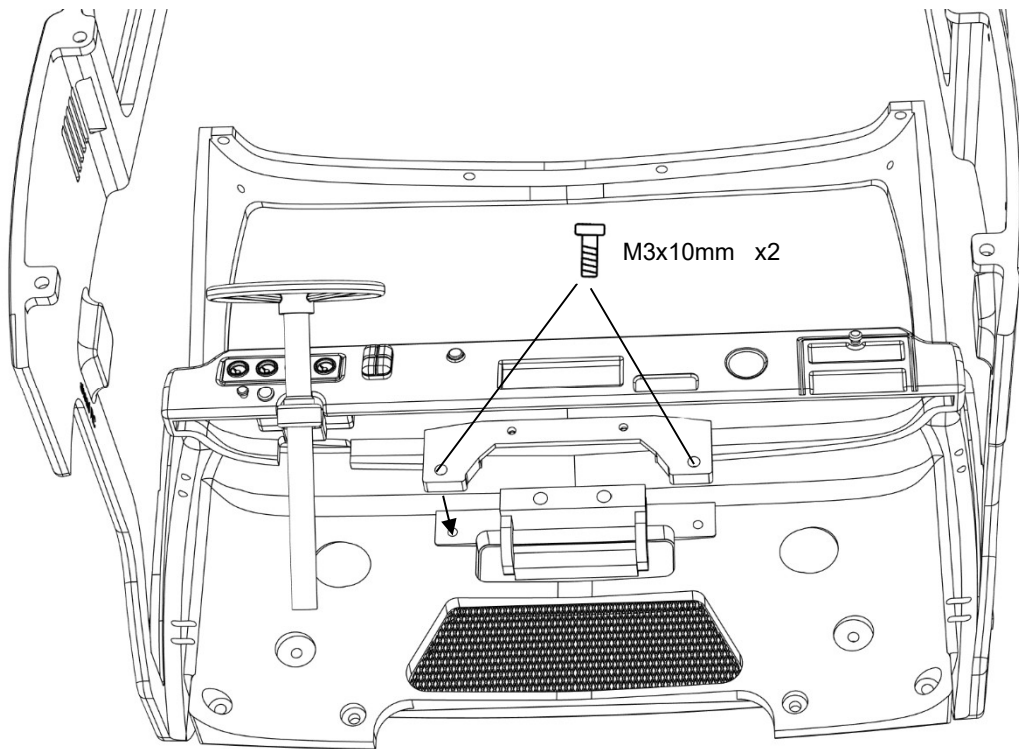


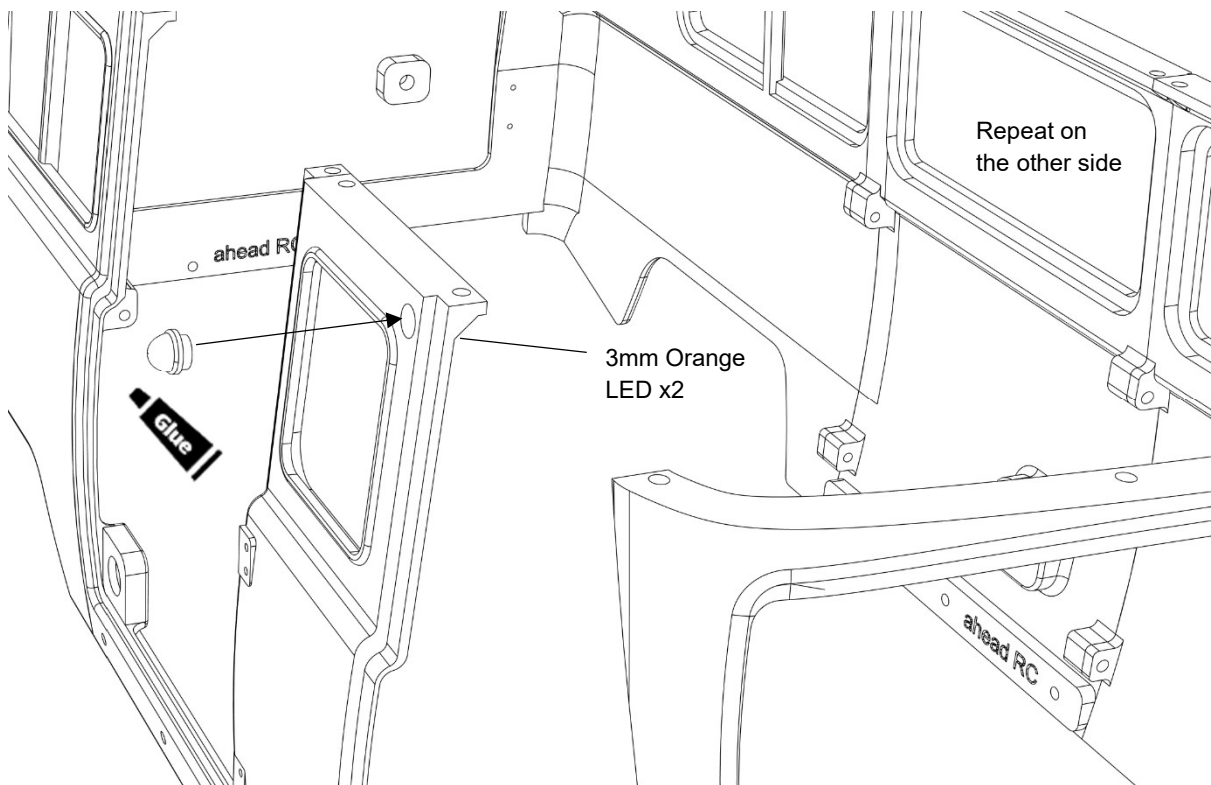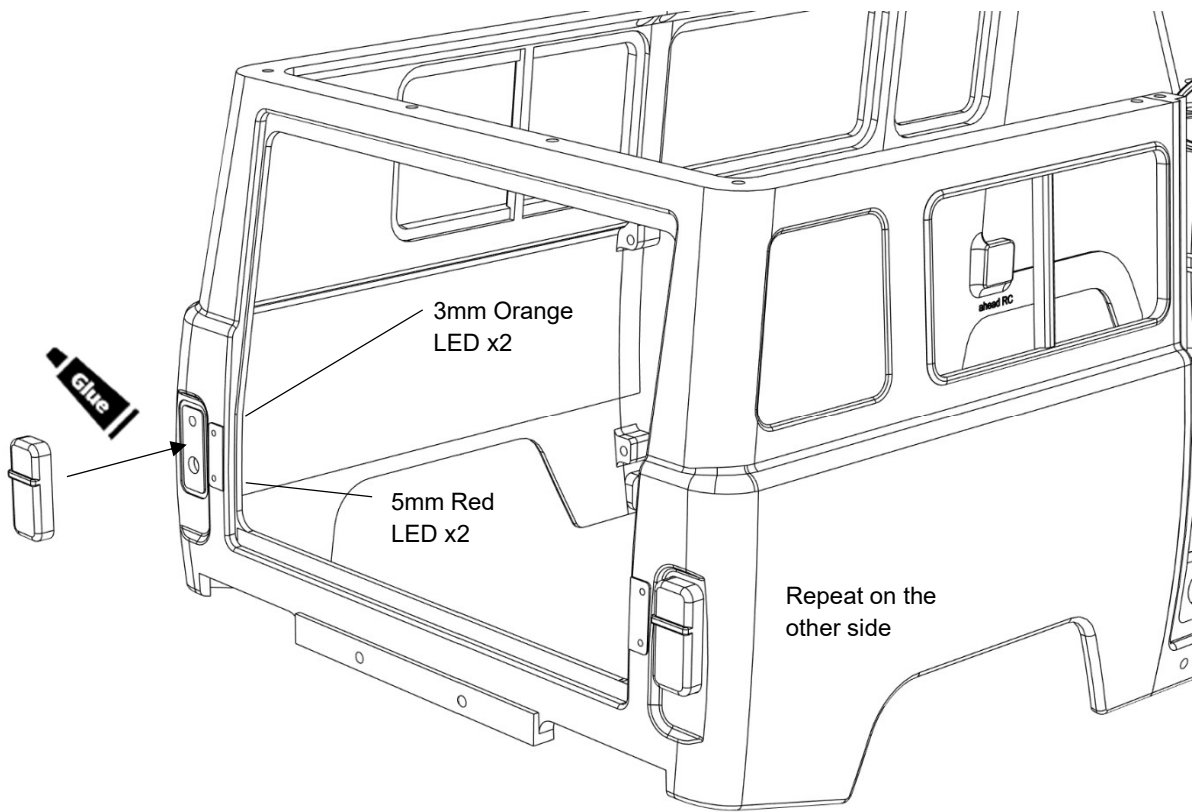



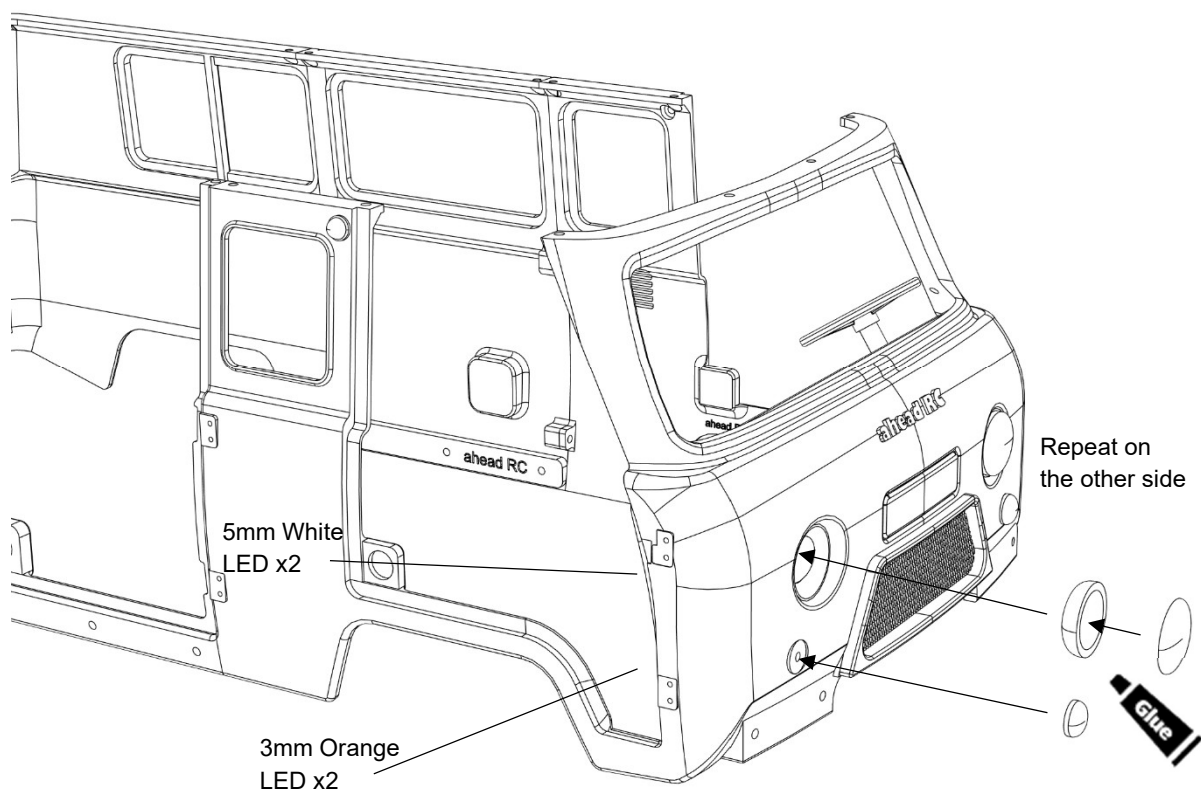


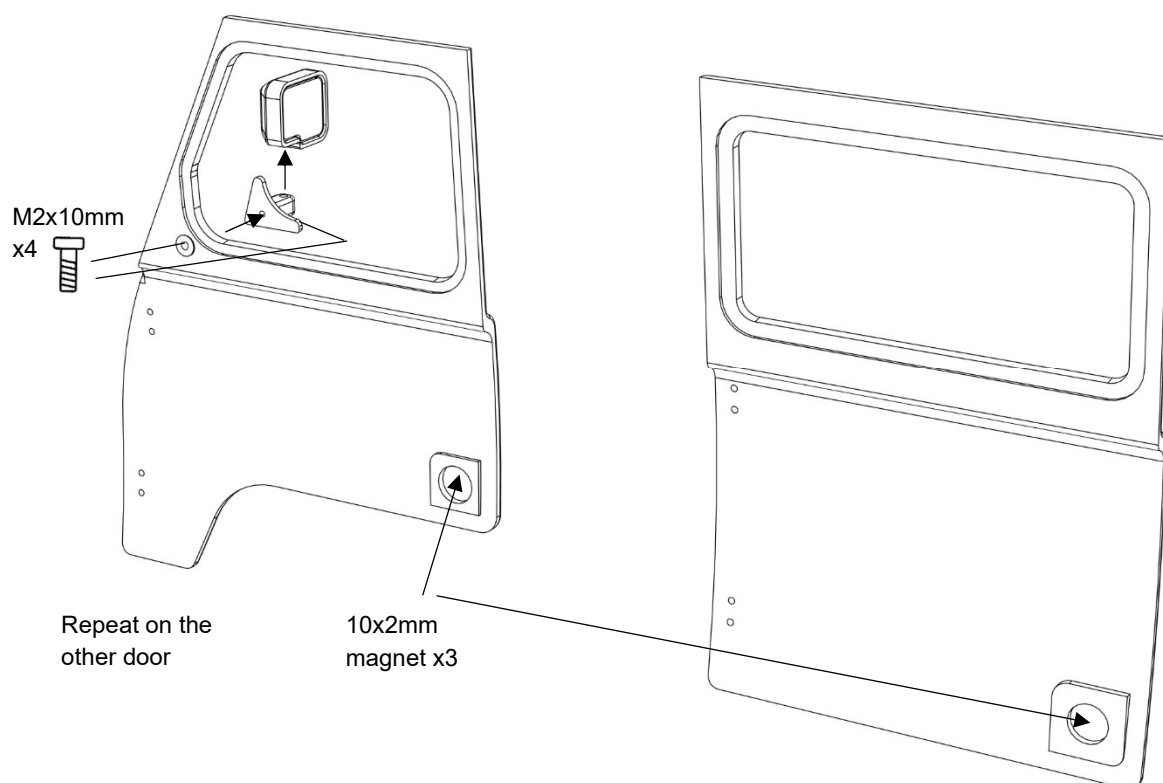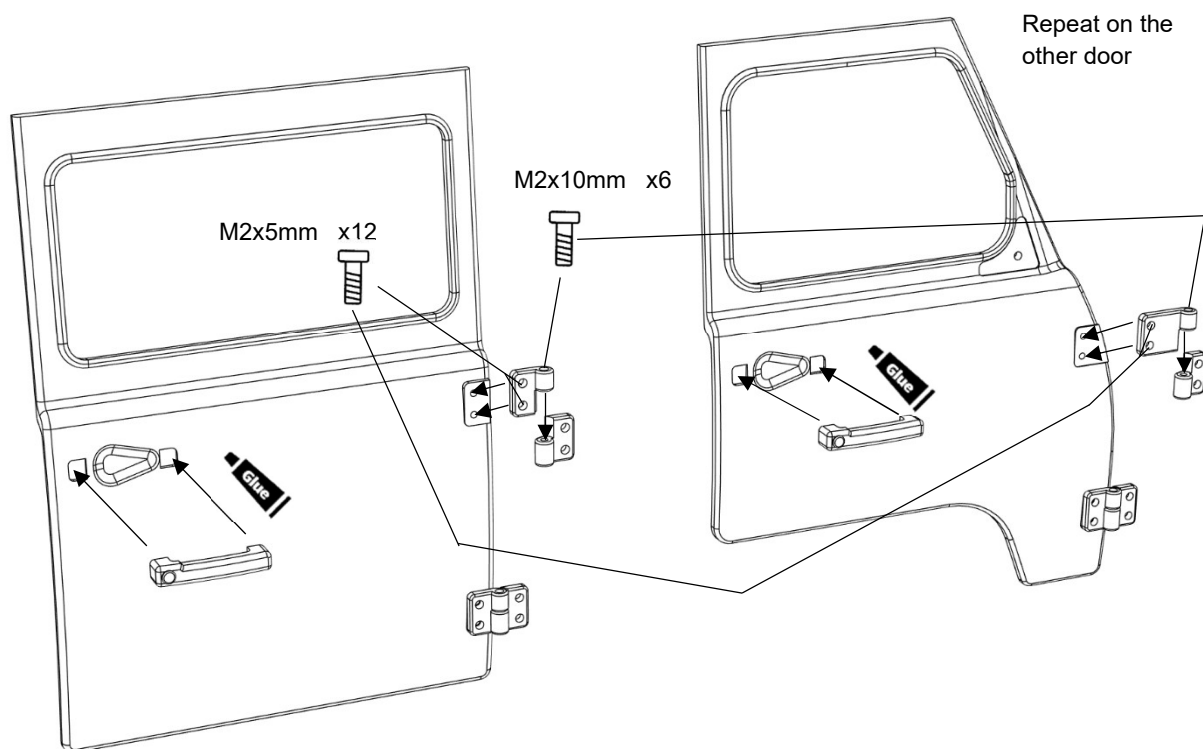


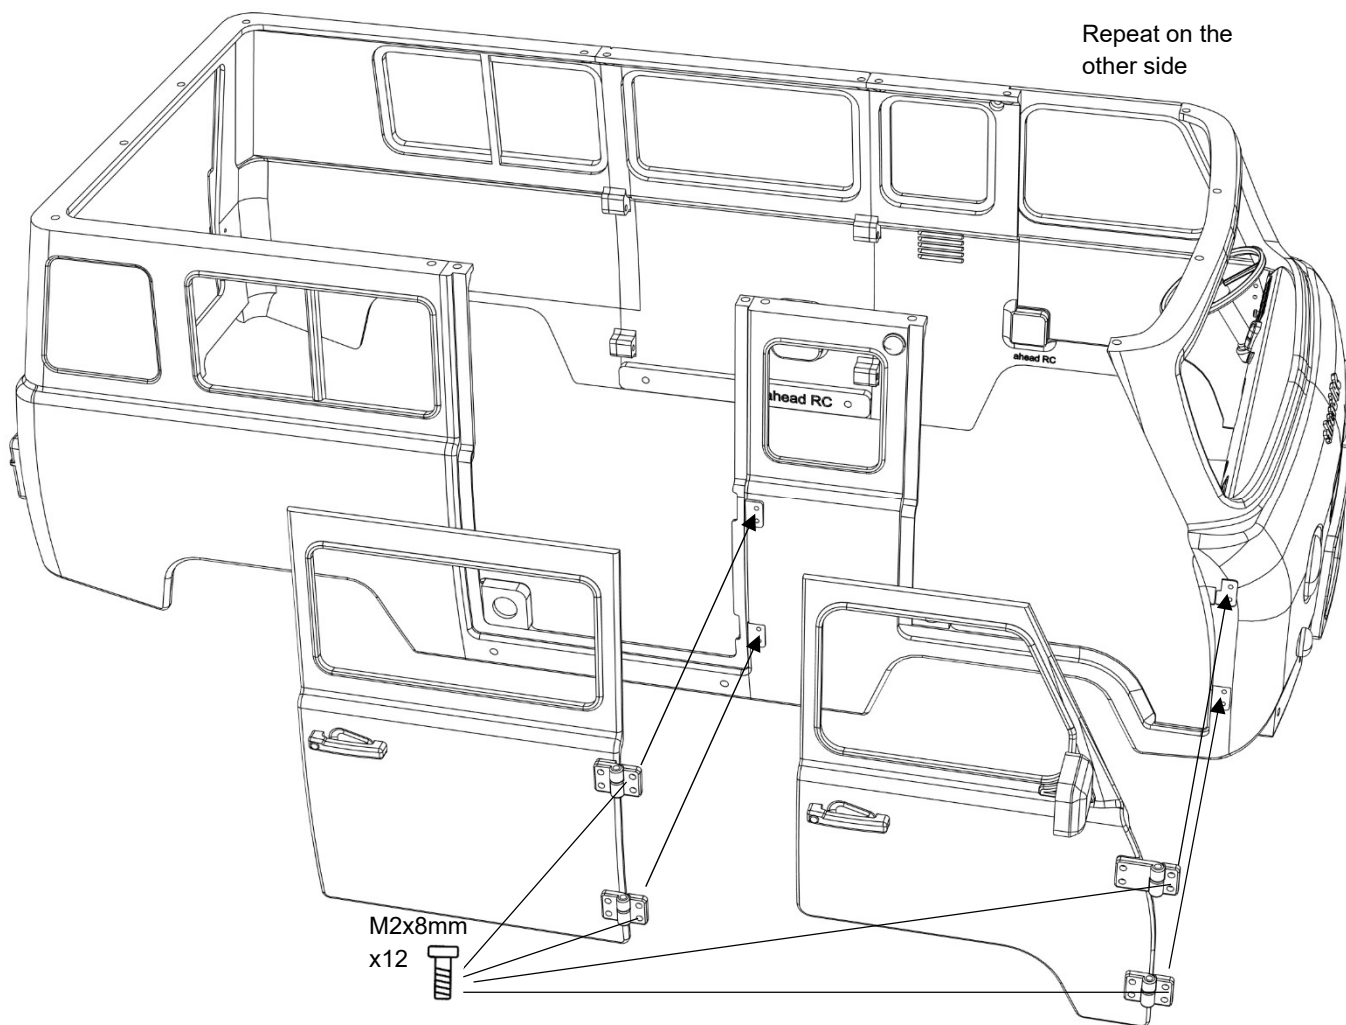

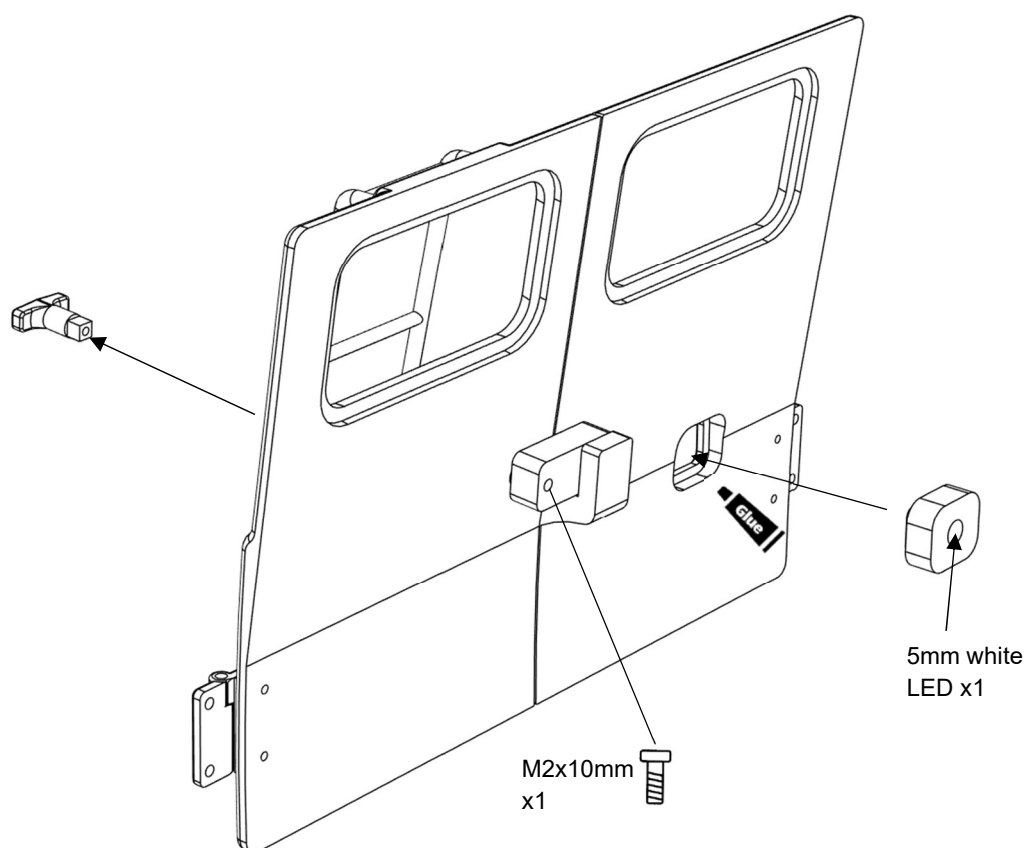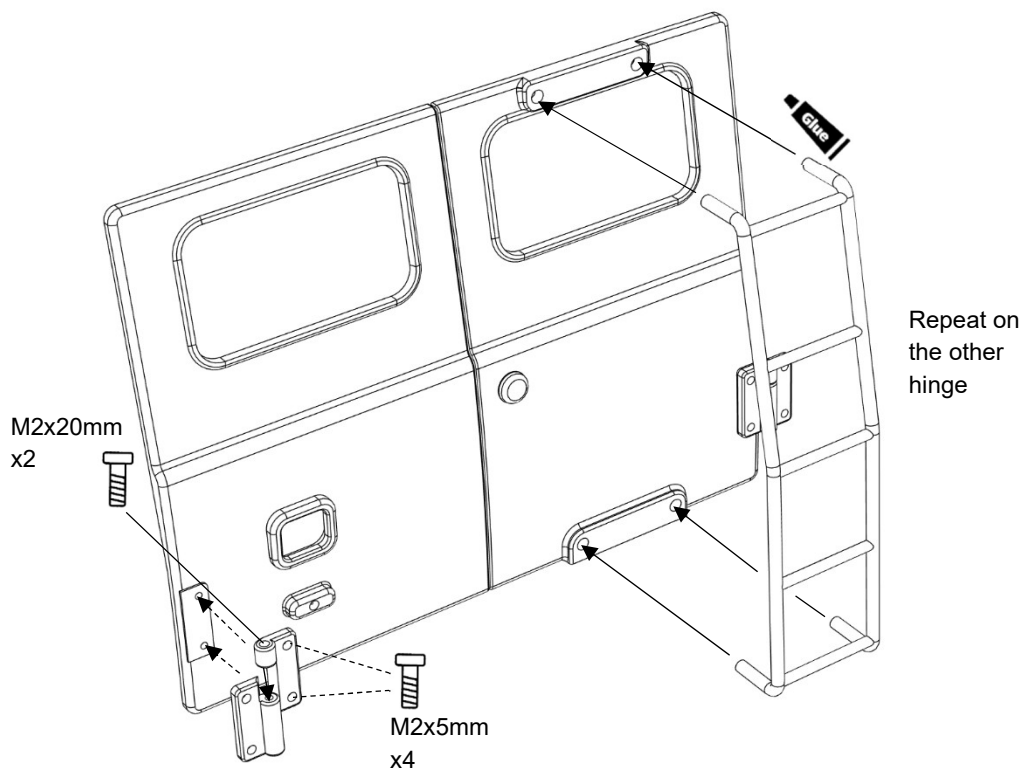

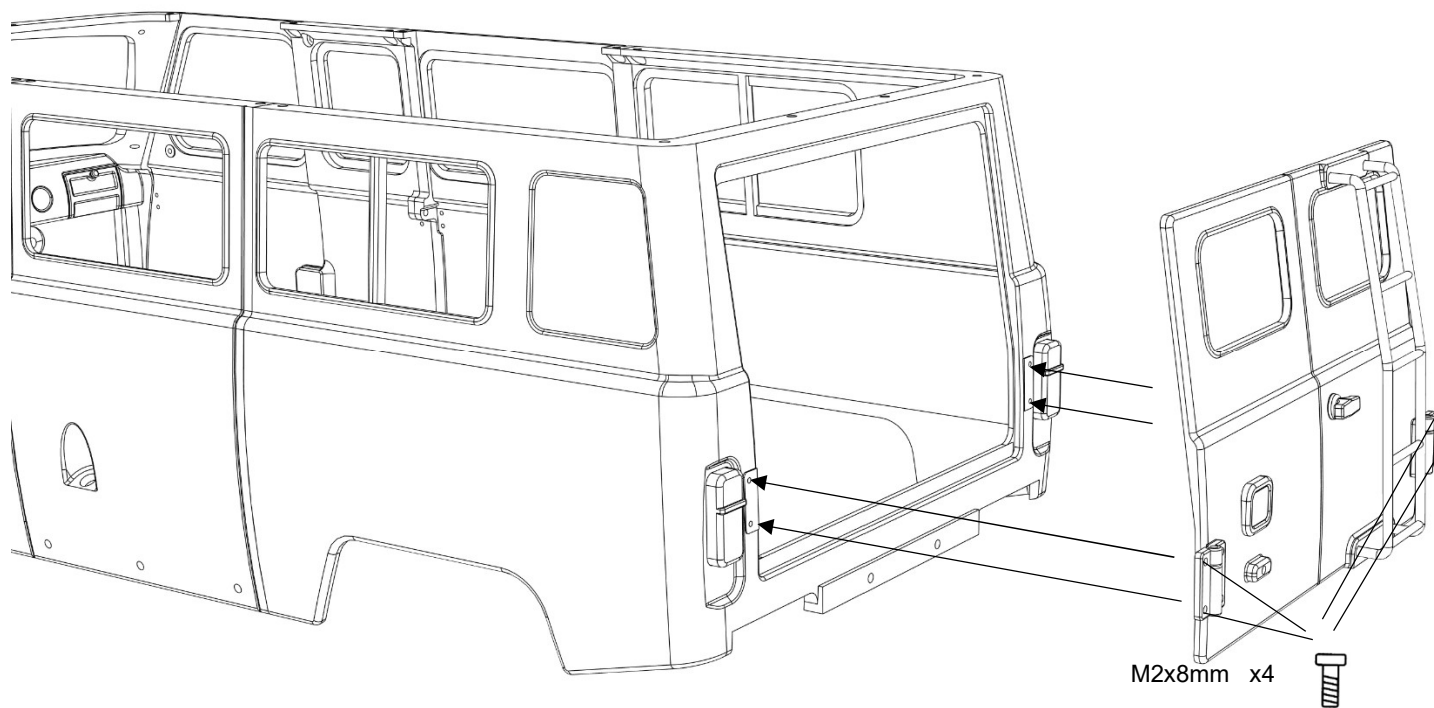

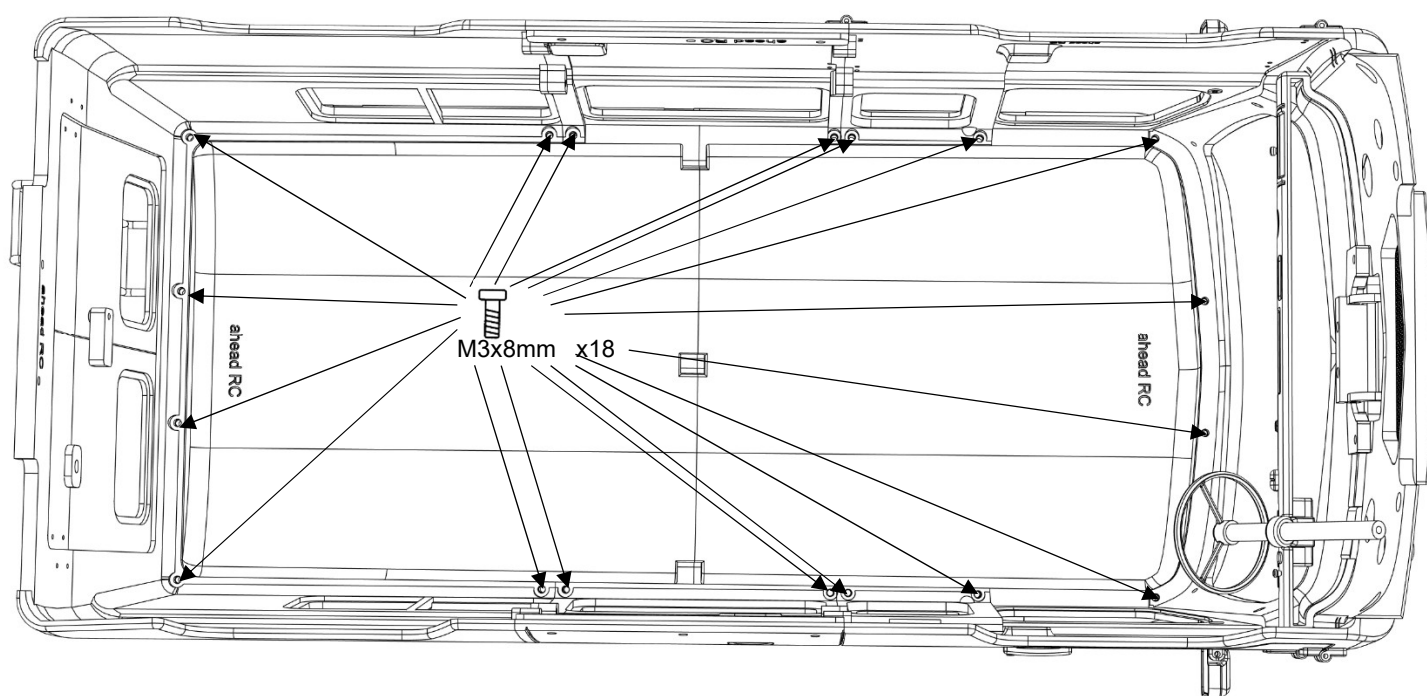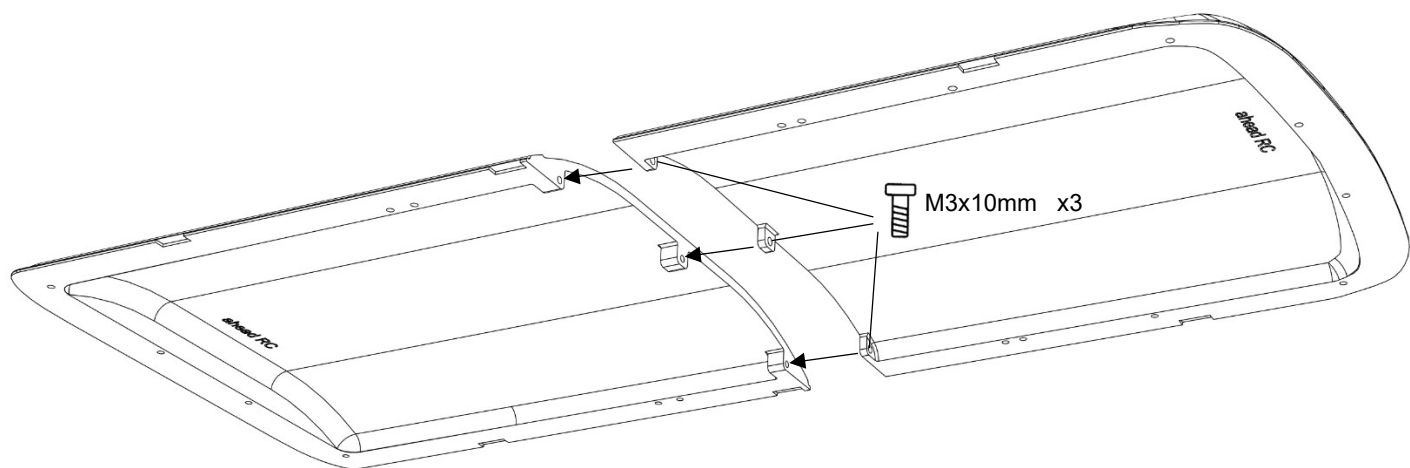


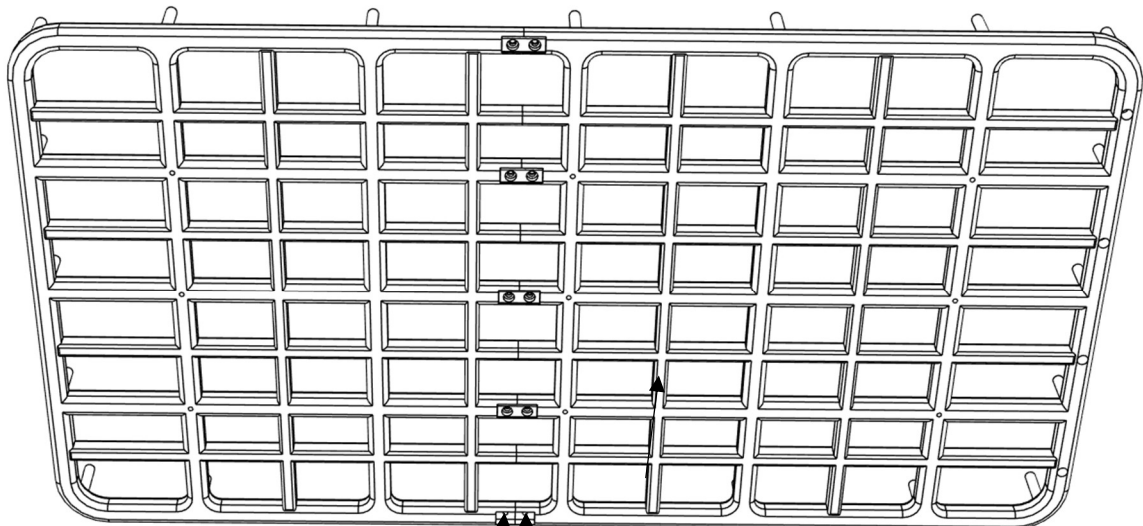


Repeat on the other roof
rack connectors






M2x5mm x10

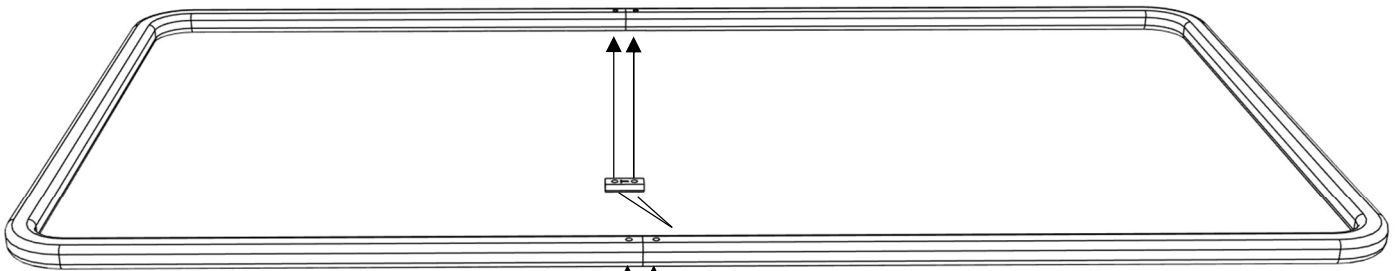


M2x5mm x4

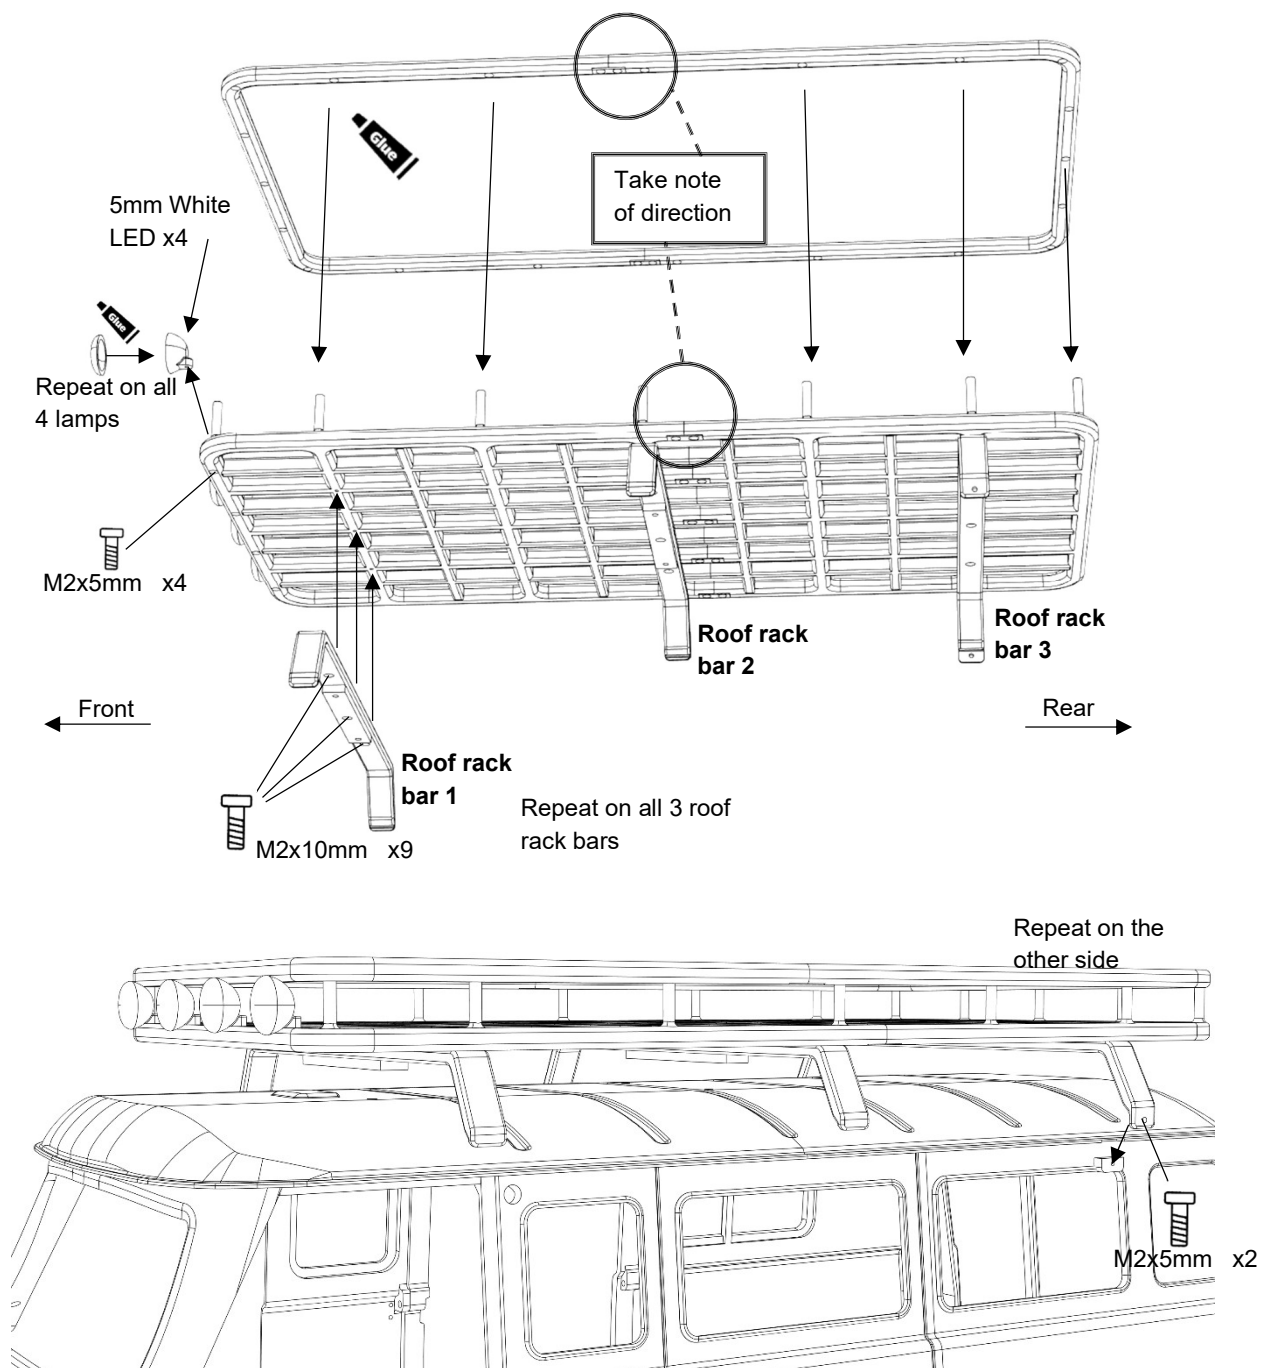

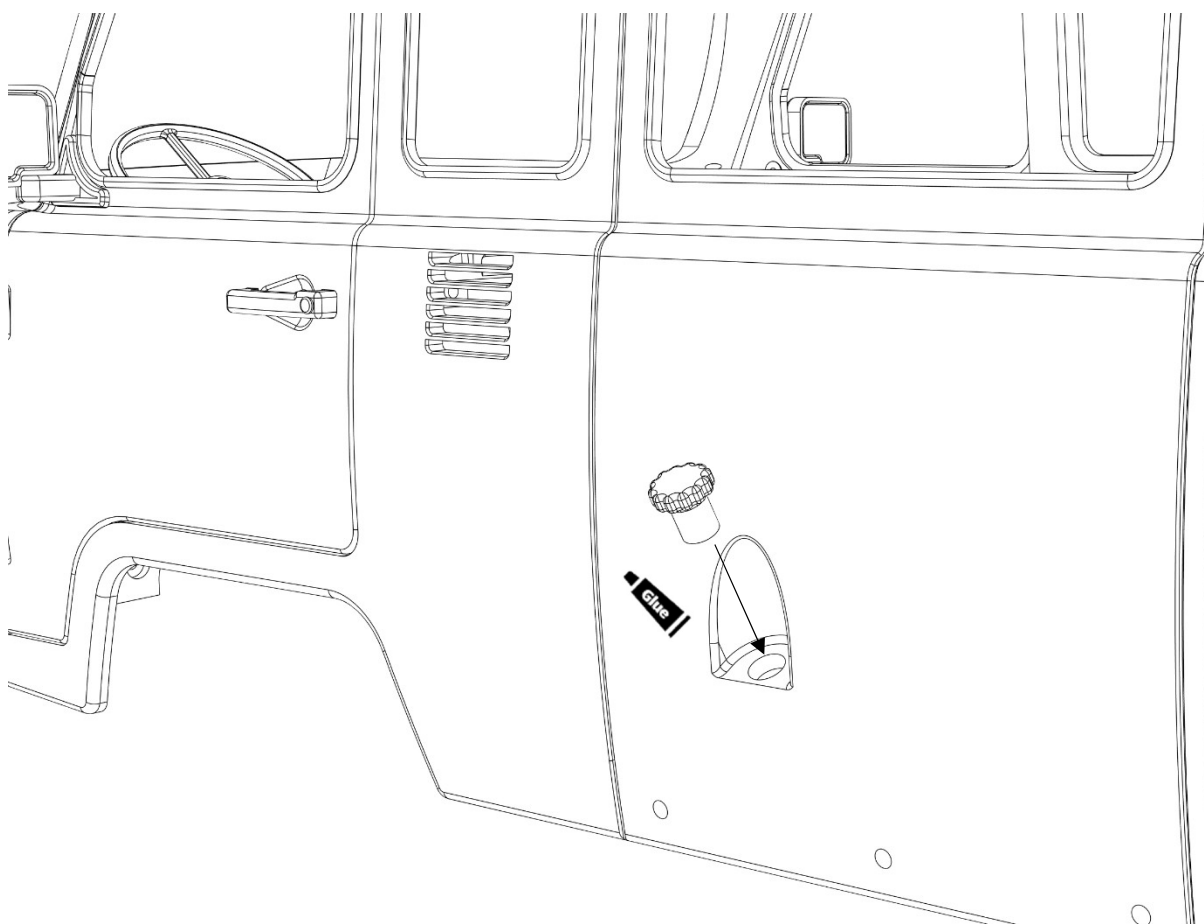
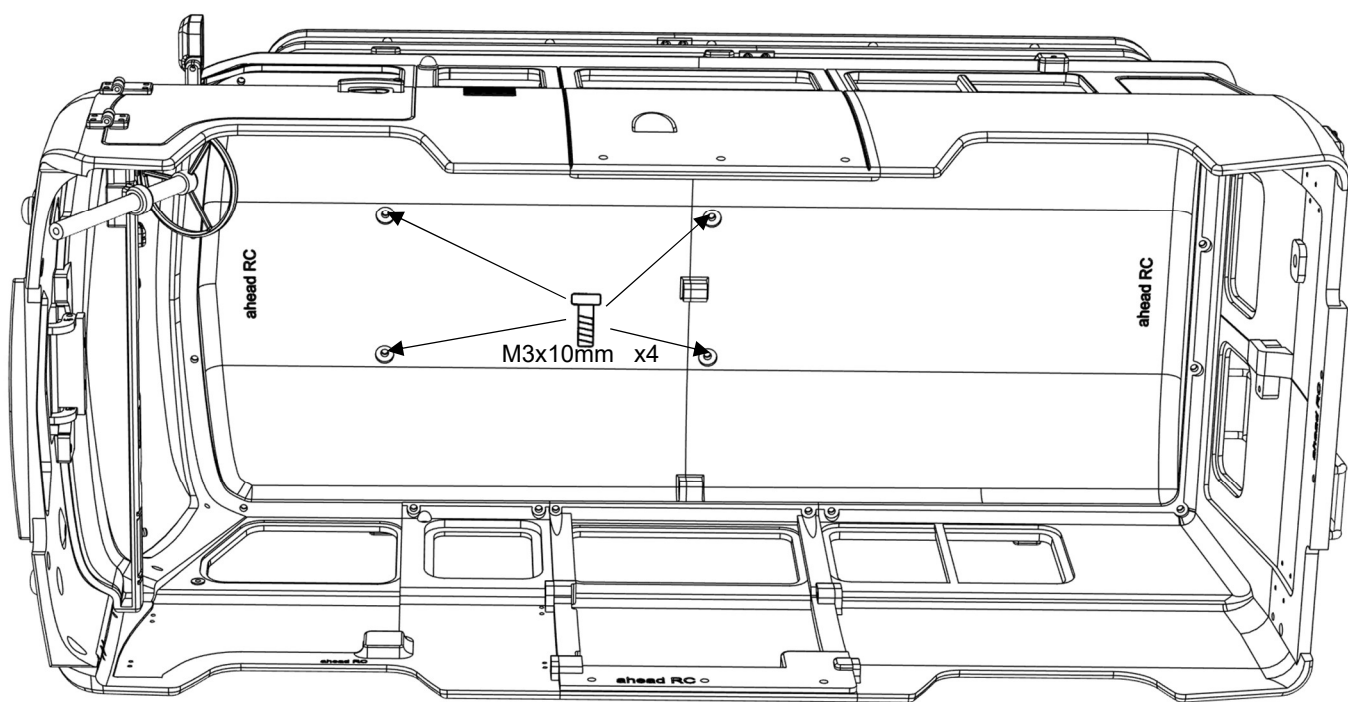


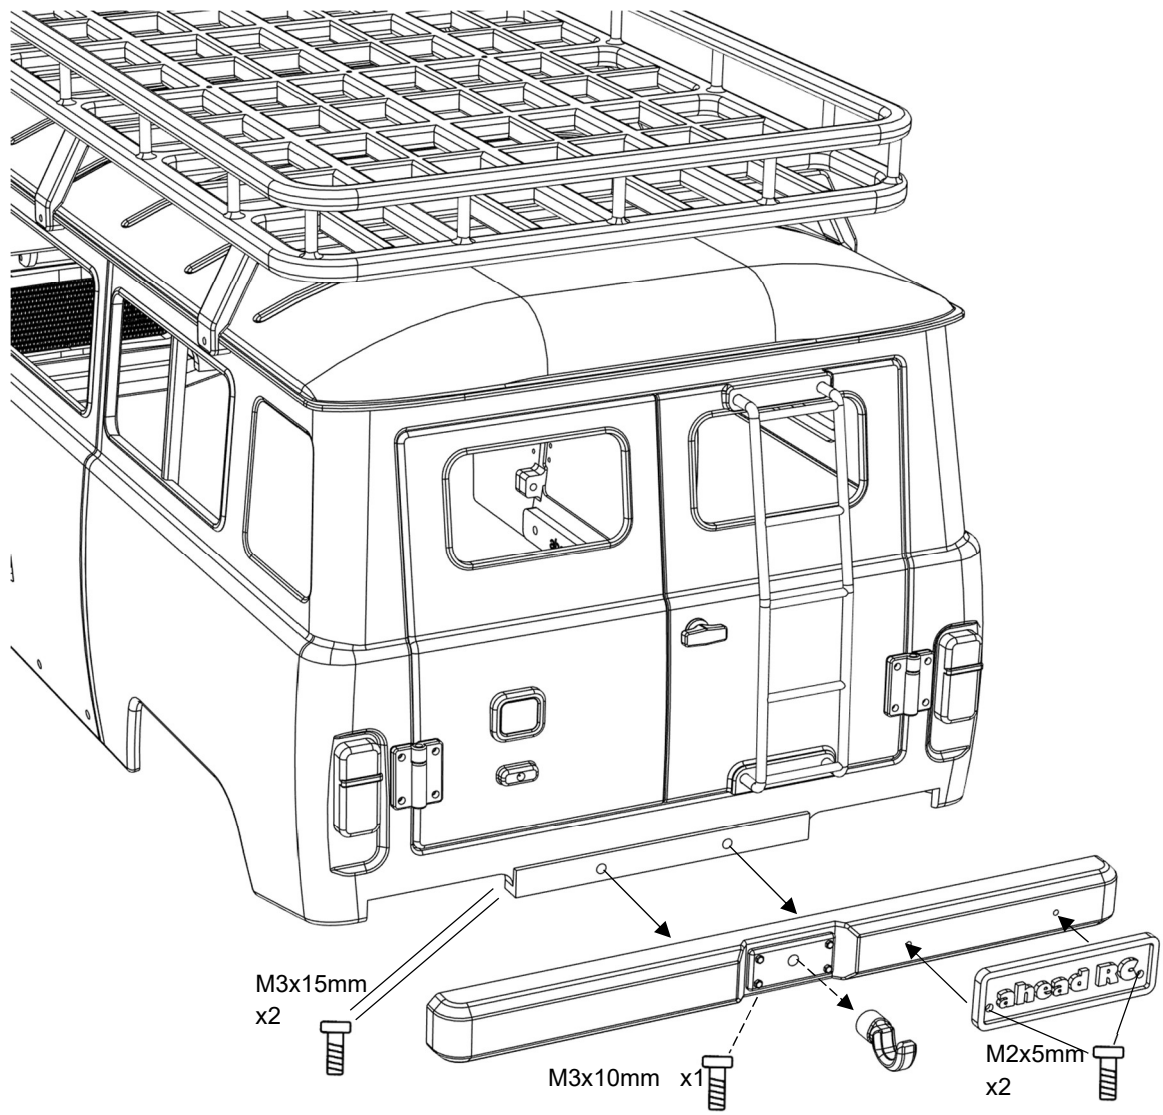


Front bumper type 1


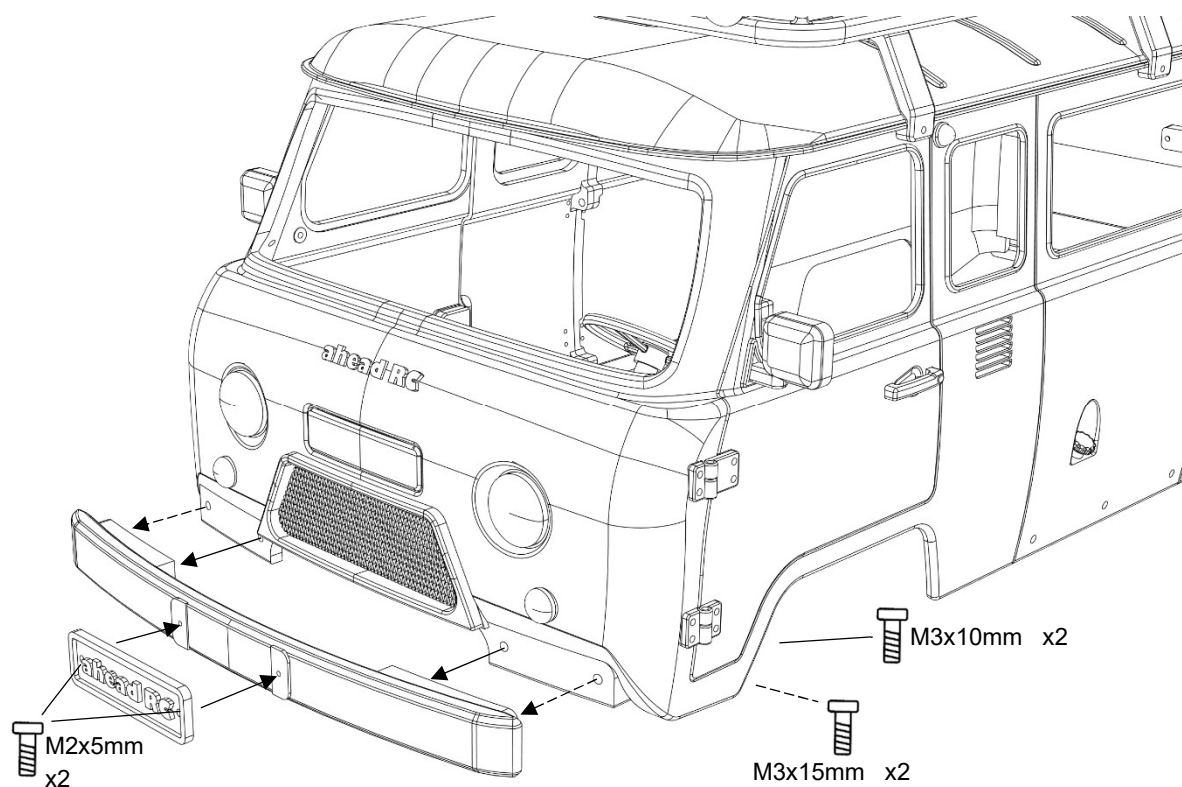


Front bumper type 2

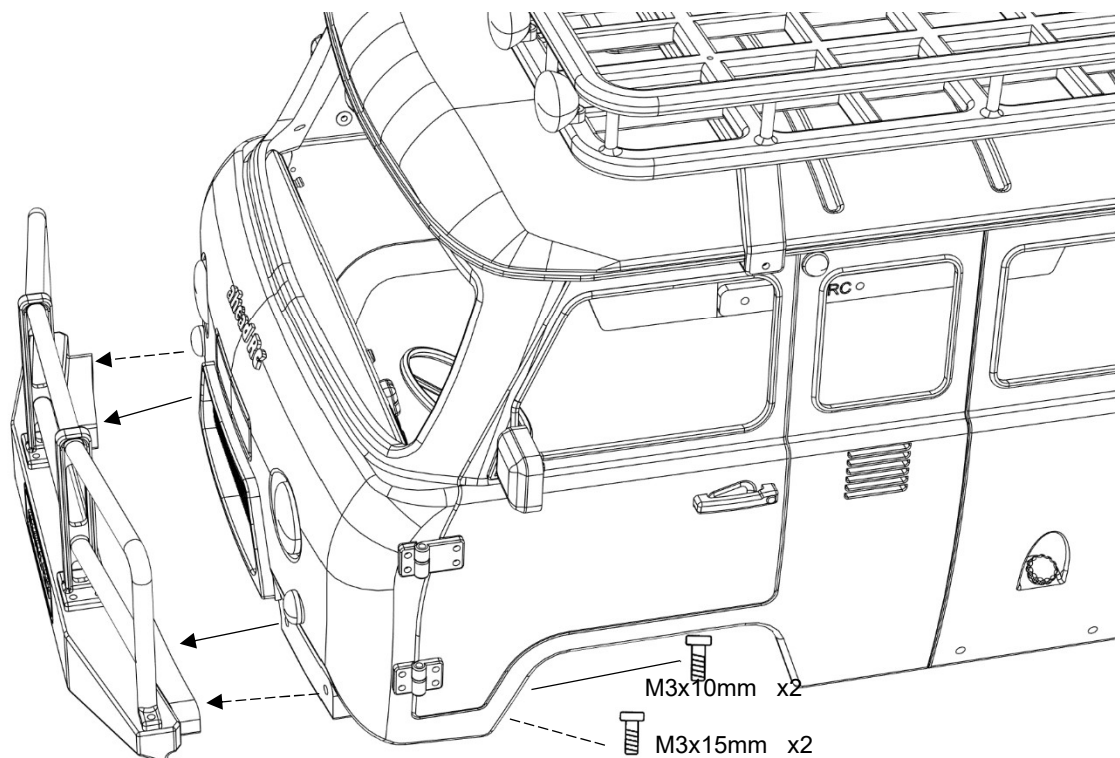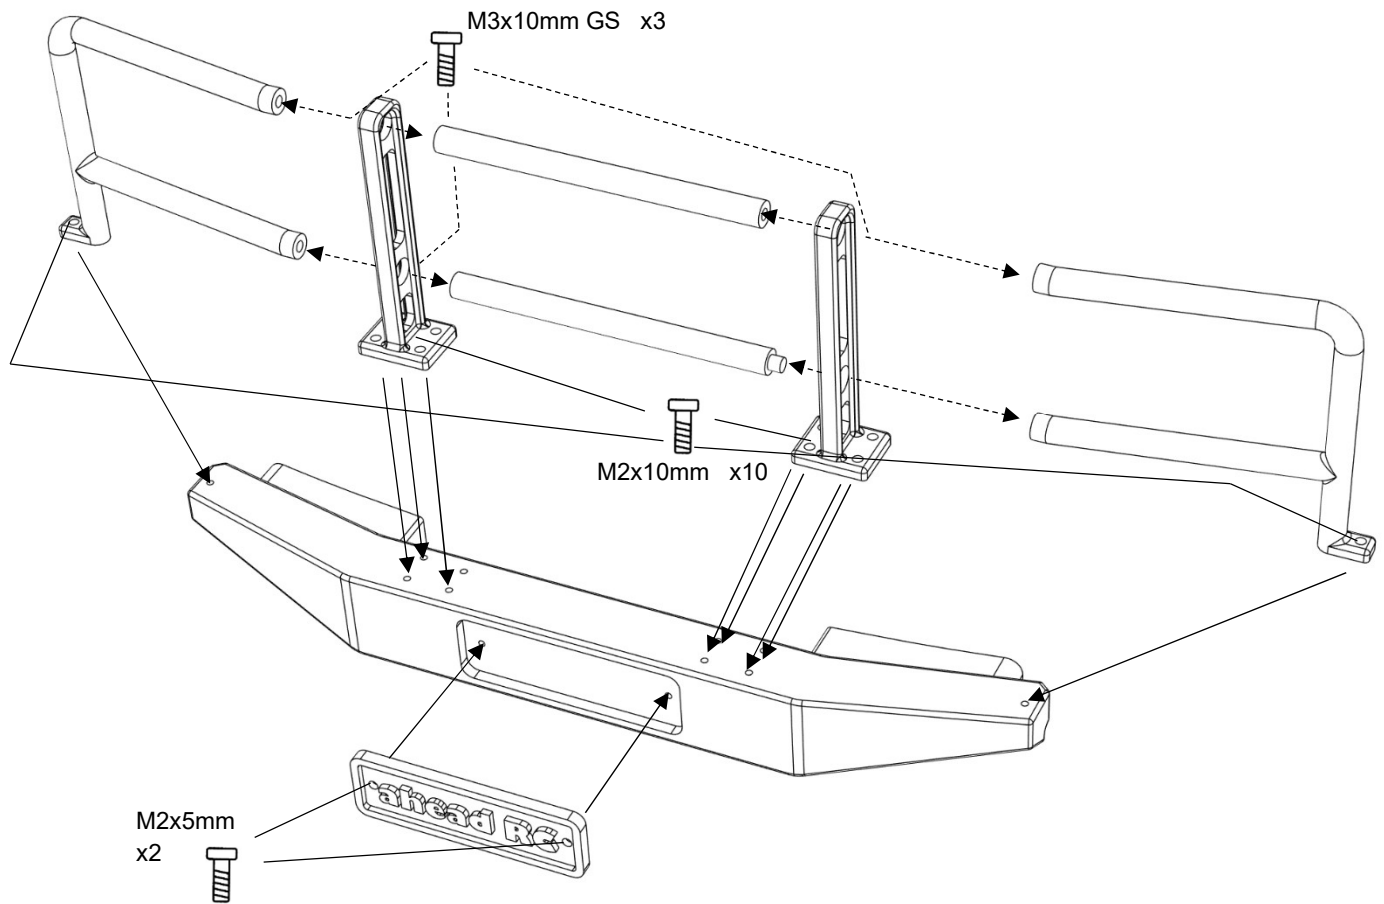



Front bumper type 3

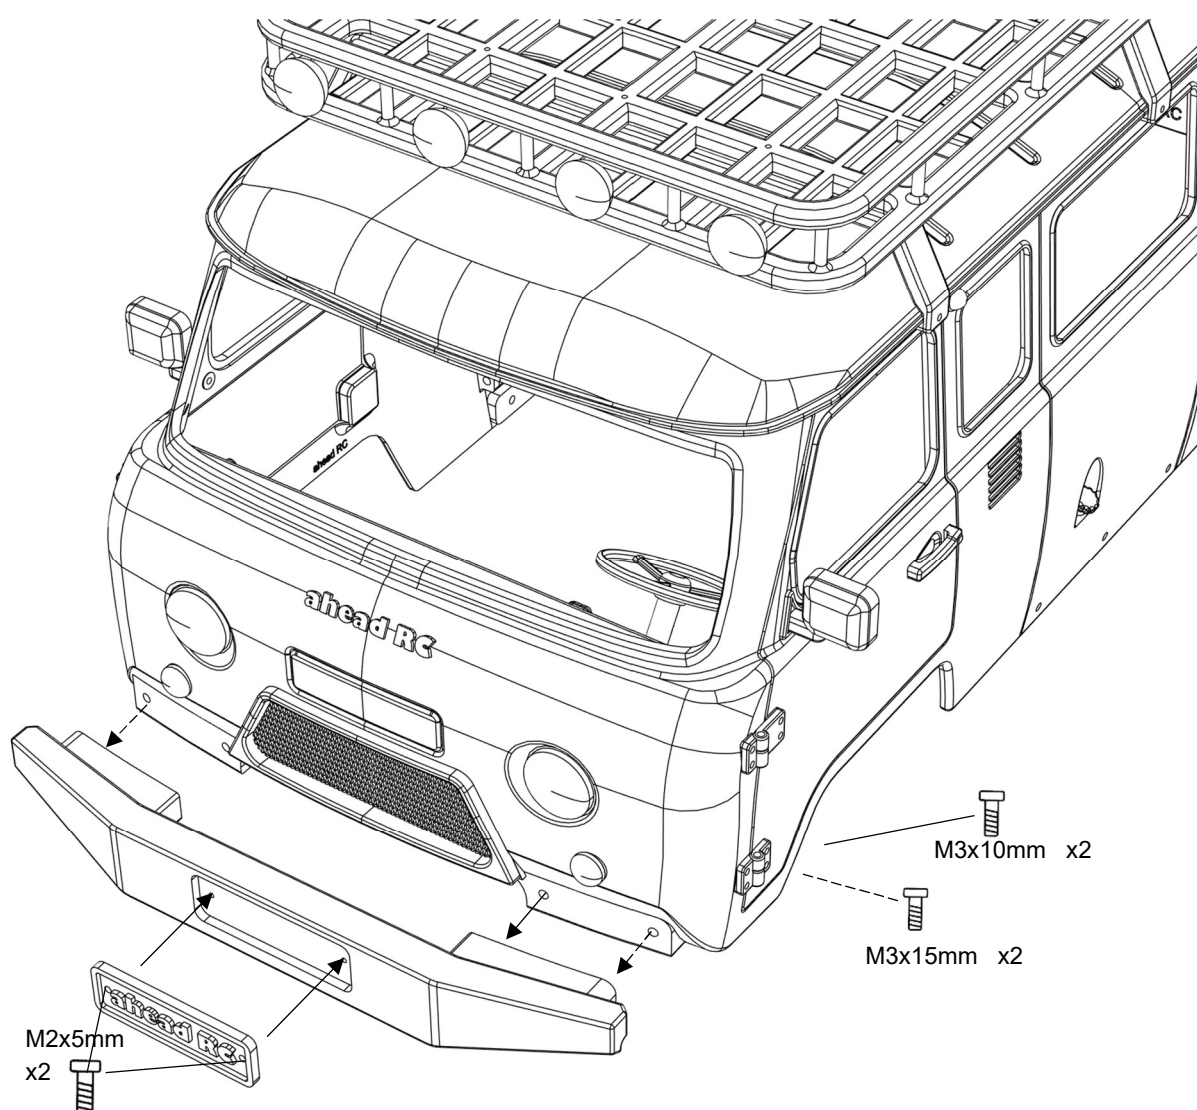


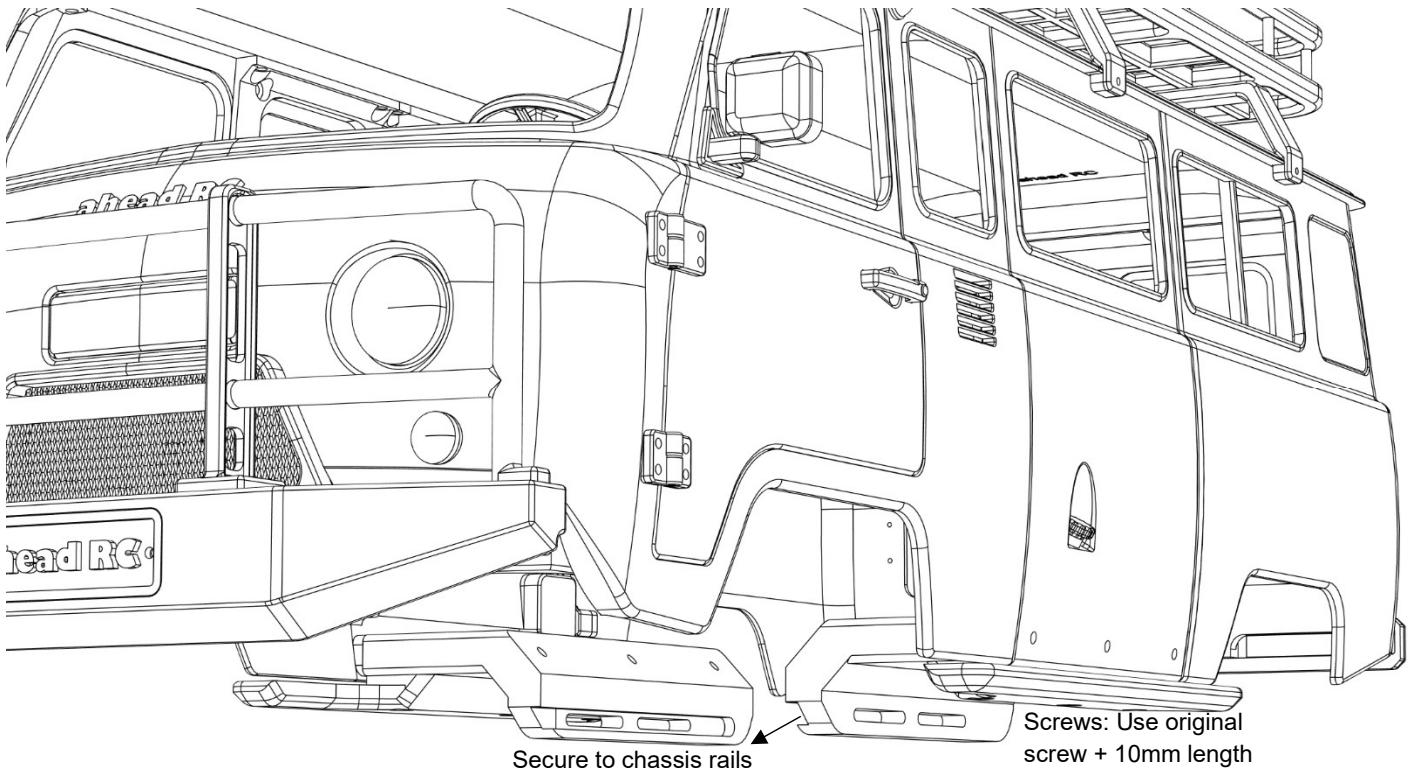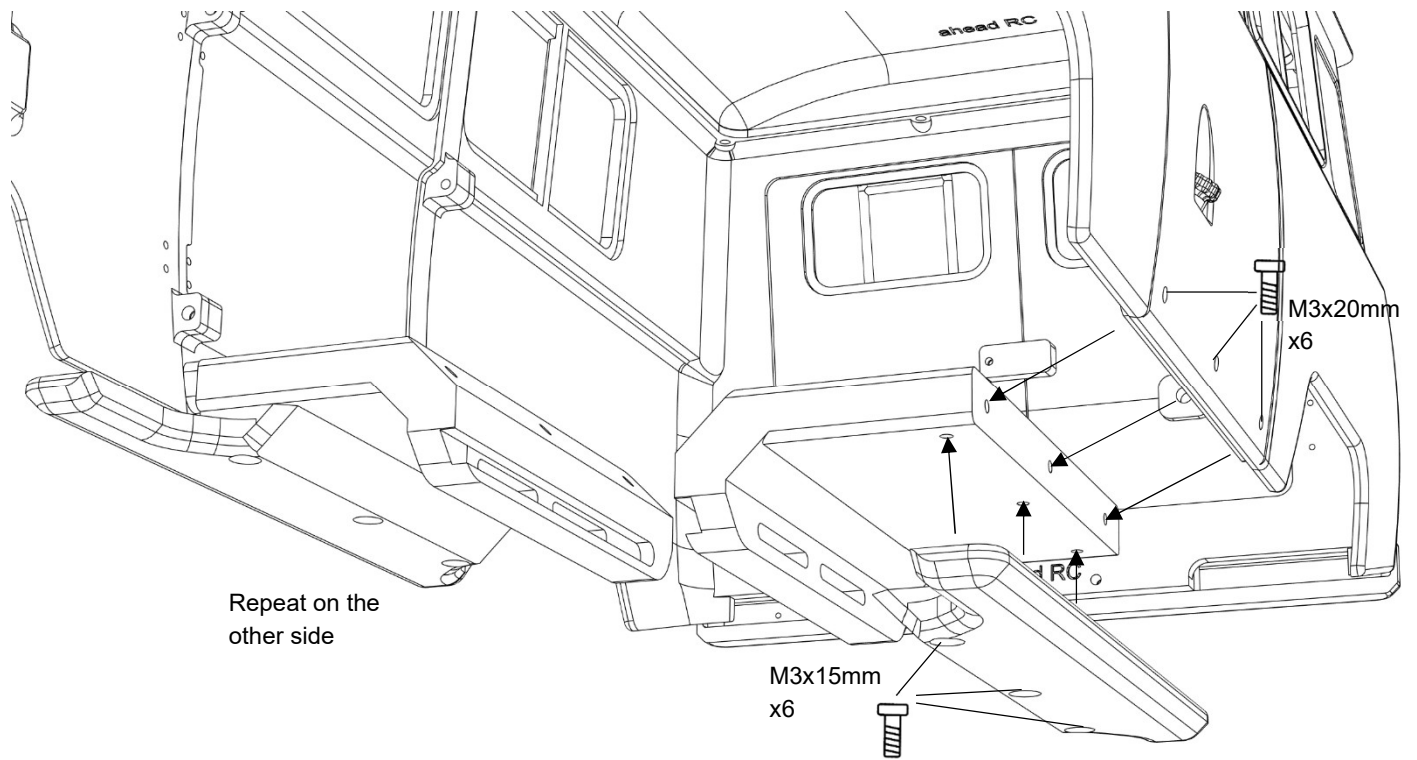

Use double sided tape to
secure accessories

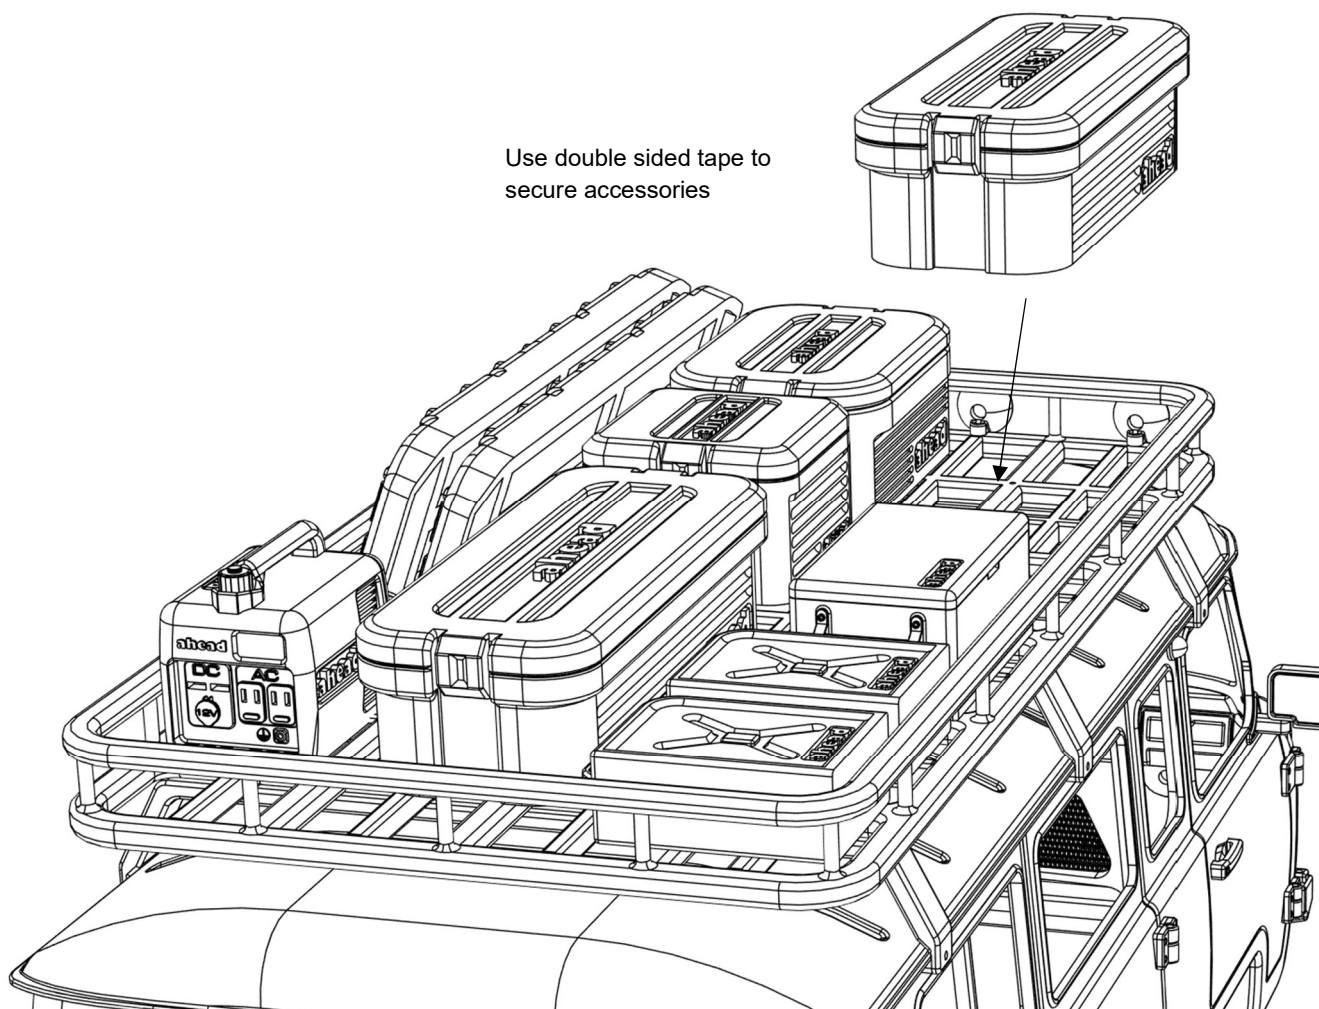

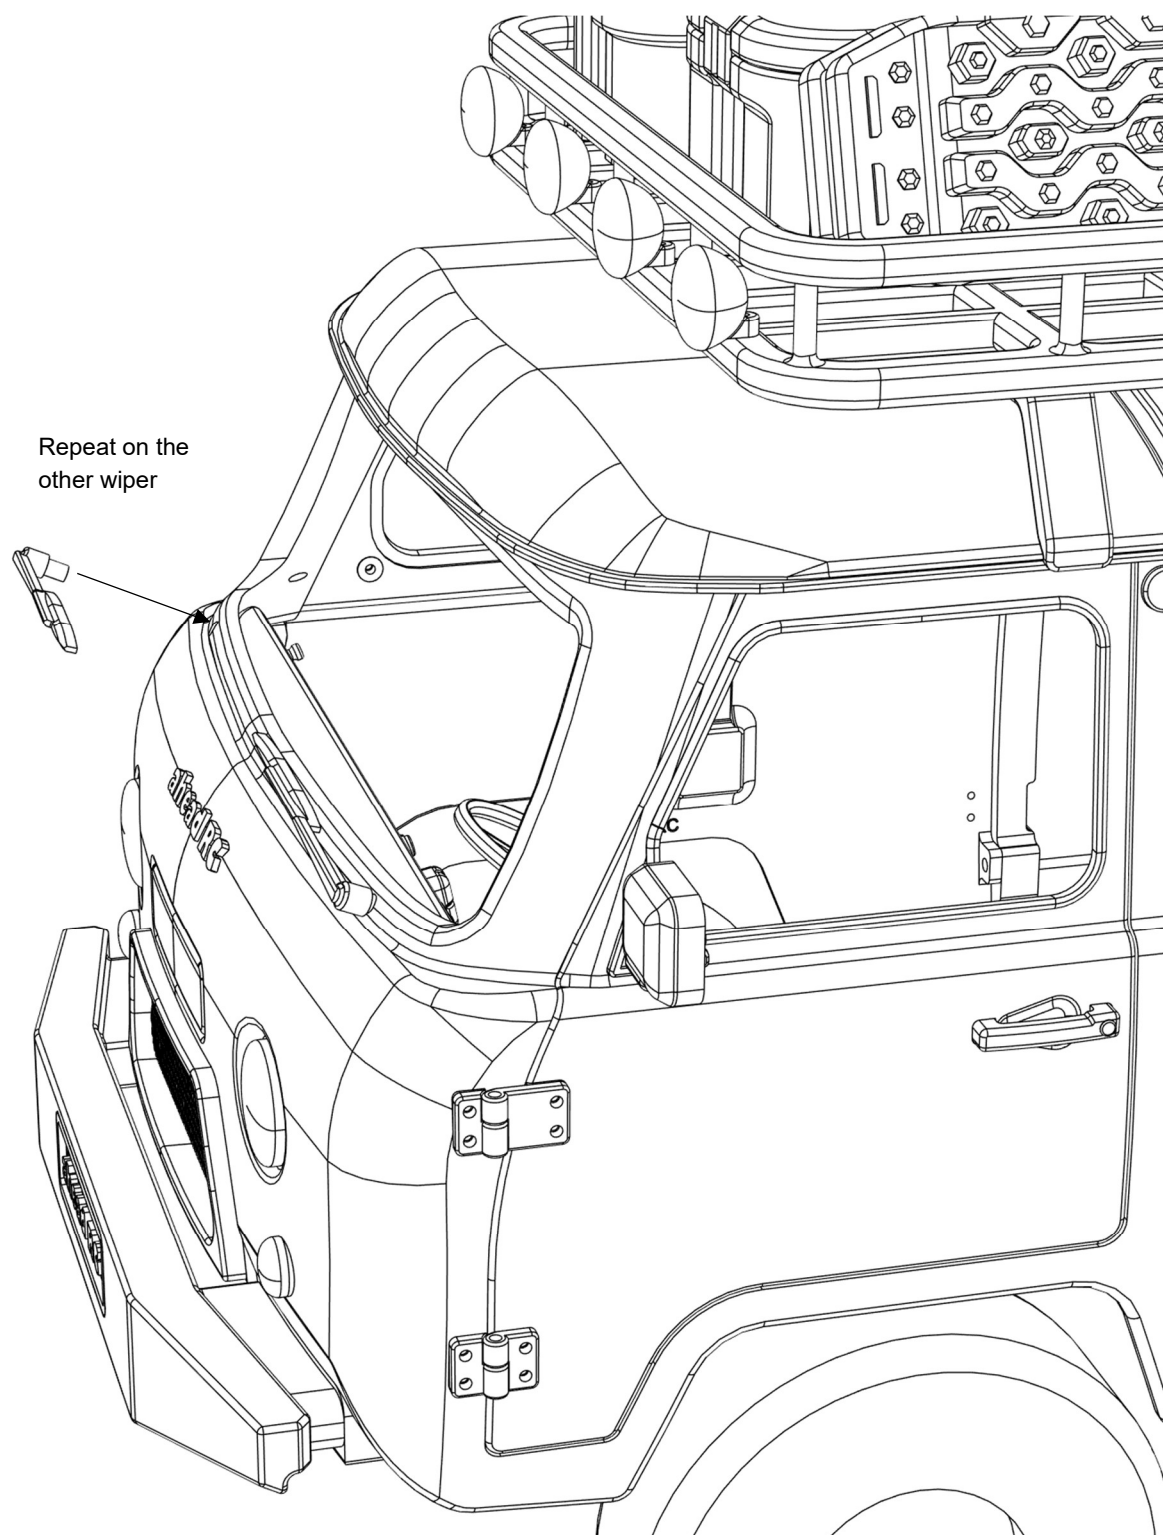

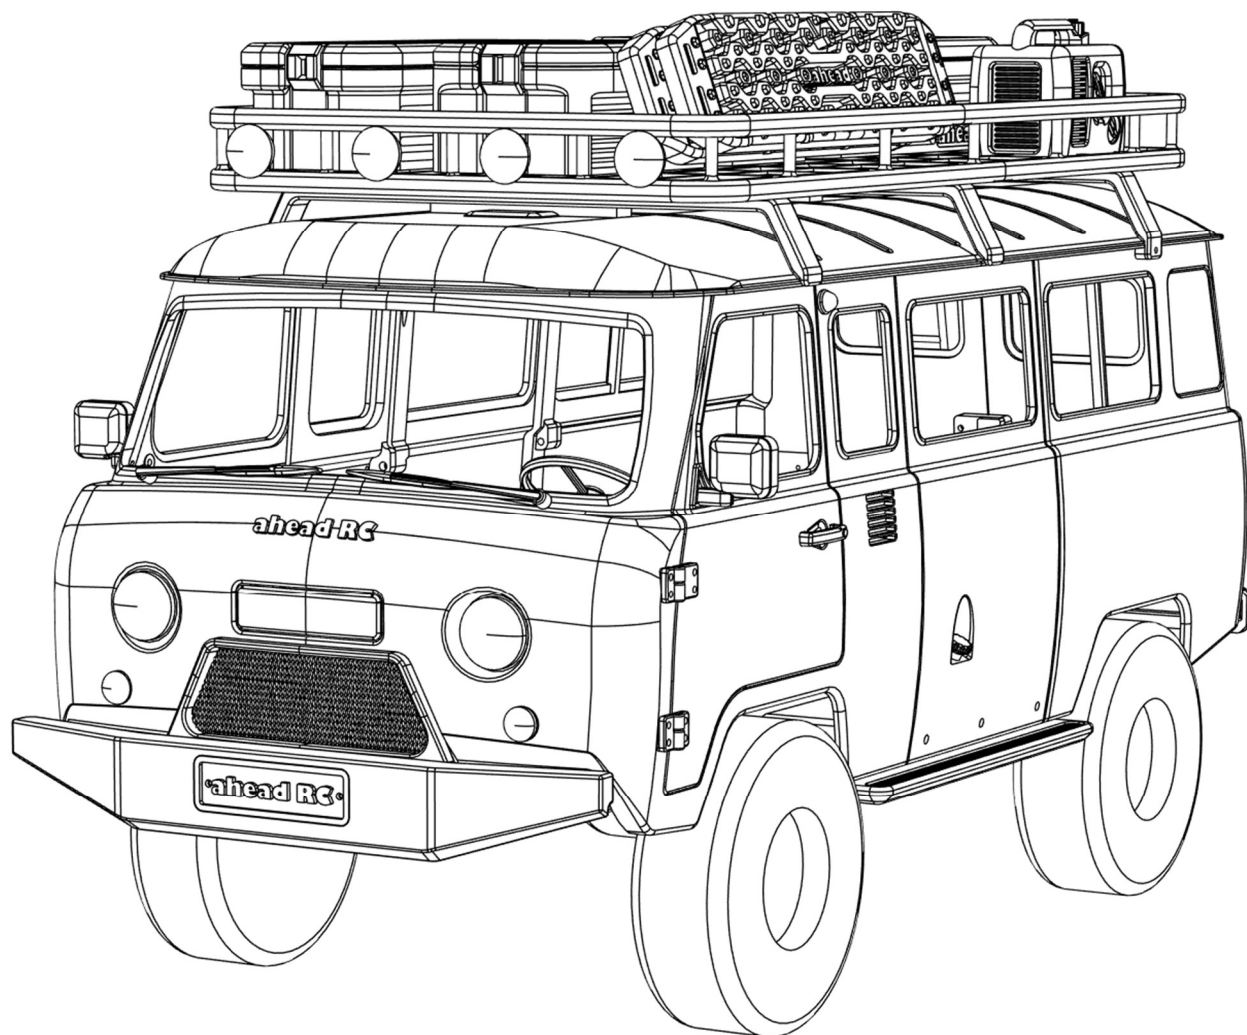

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

aheadrc@gmail.com

or visit us at:

www.aheadrc.com