

ahead RC Crawler

Kei Flatbed TRX4M

Assembly Manual



Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.5mm Hex Driver
- 3.0mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

Electronics

- 3mm LED White x2
- 3mm LED Orange x2
- 3mm LED Red x2



Hardware


Hardware	Quantity	Check
M2*8 Socket head	20	
M2*10 Socket head	4	
M2.5*20 Socket head	4	
M3*15 Socket head	4	
12x4mm magnet	8	



Before you begin


- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling


Tip: It will help to paint all of the parts before final assembly

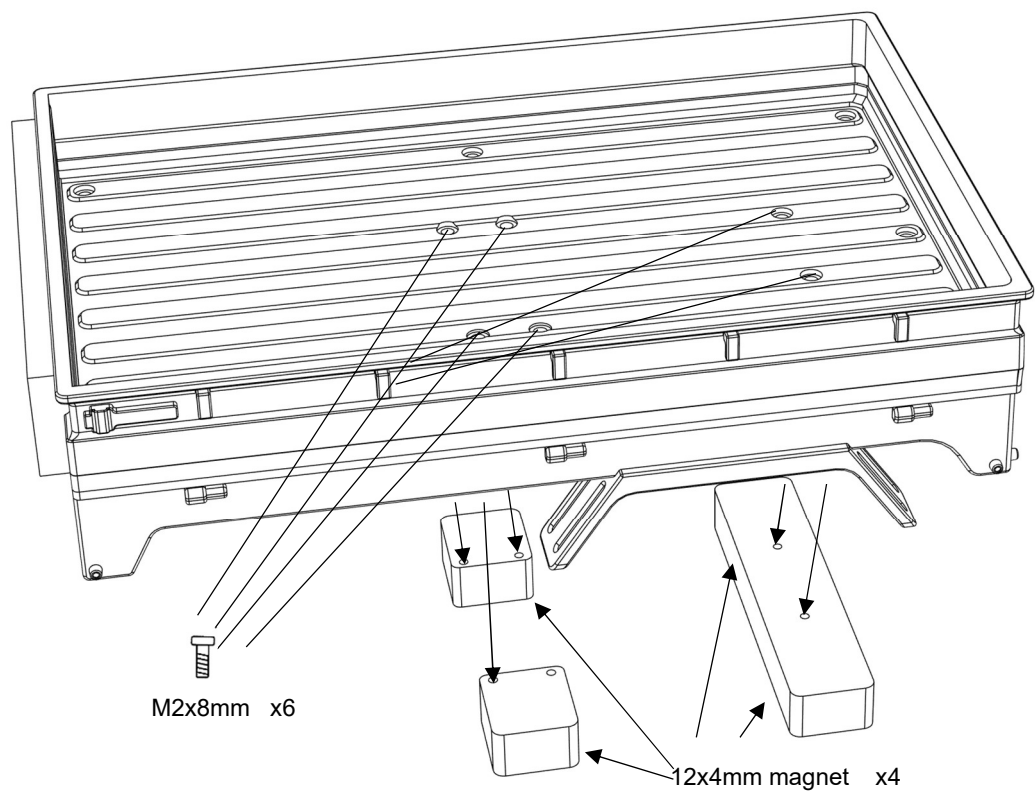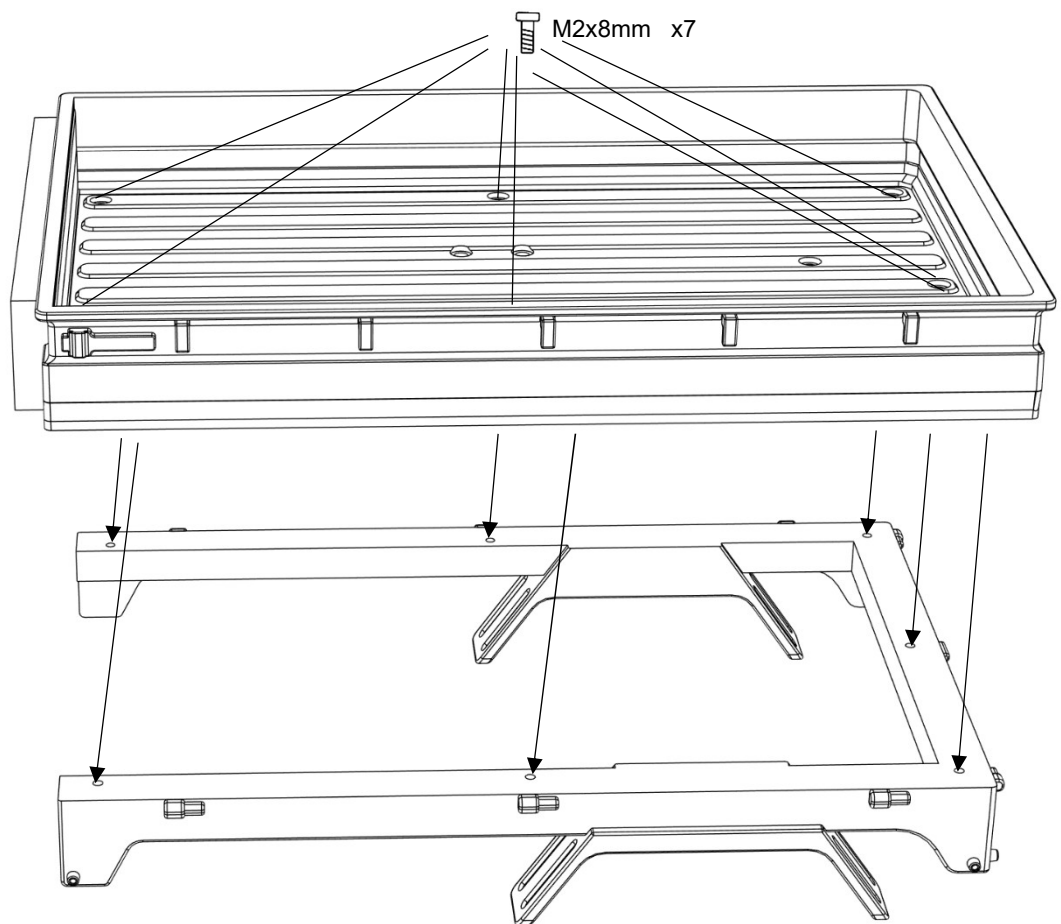

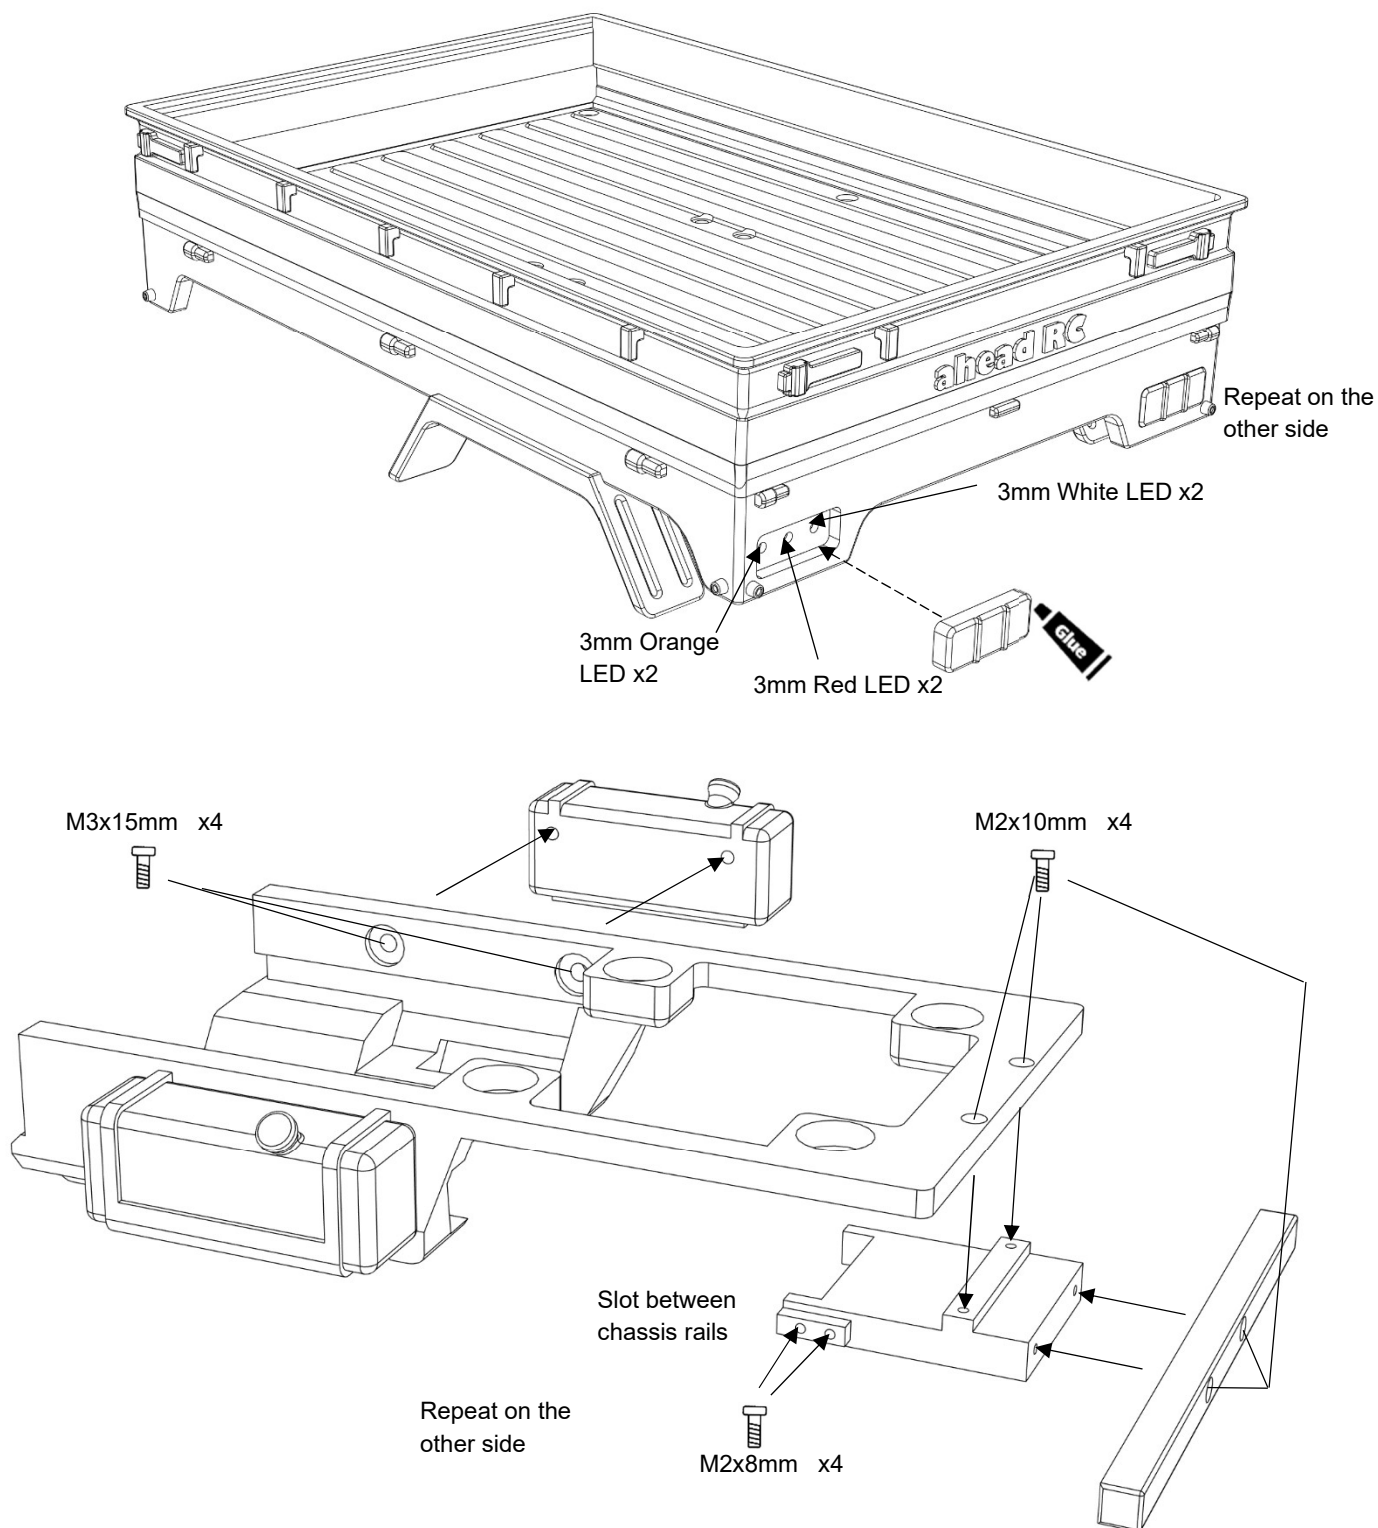

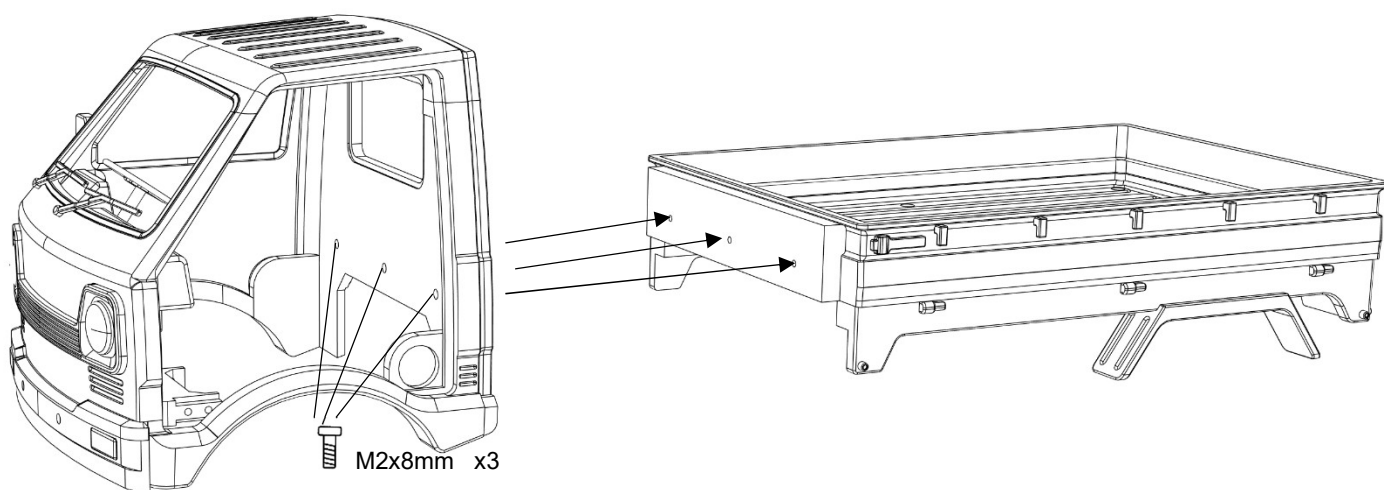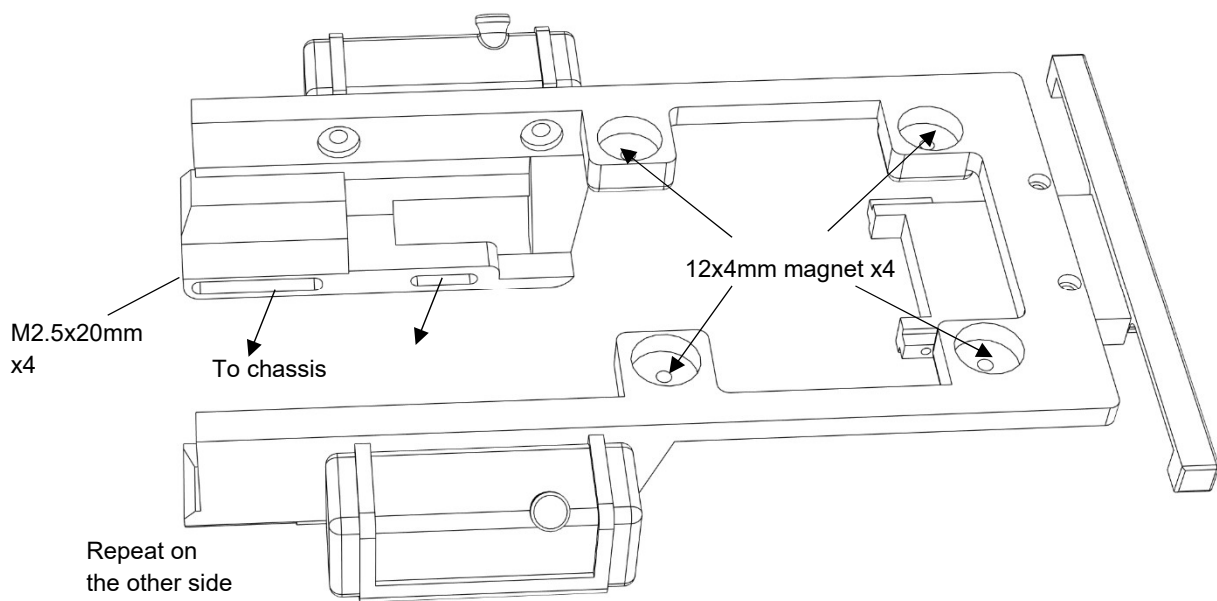

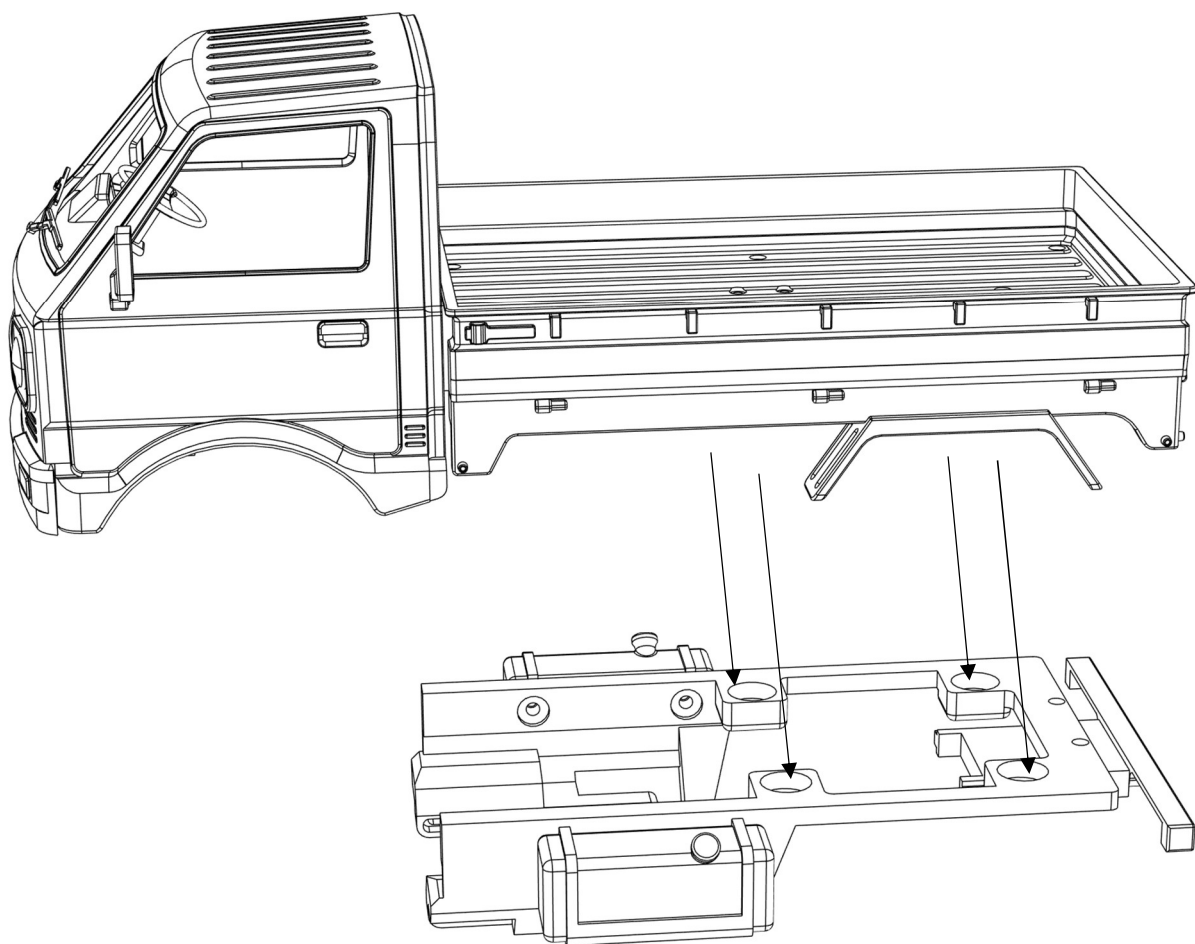

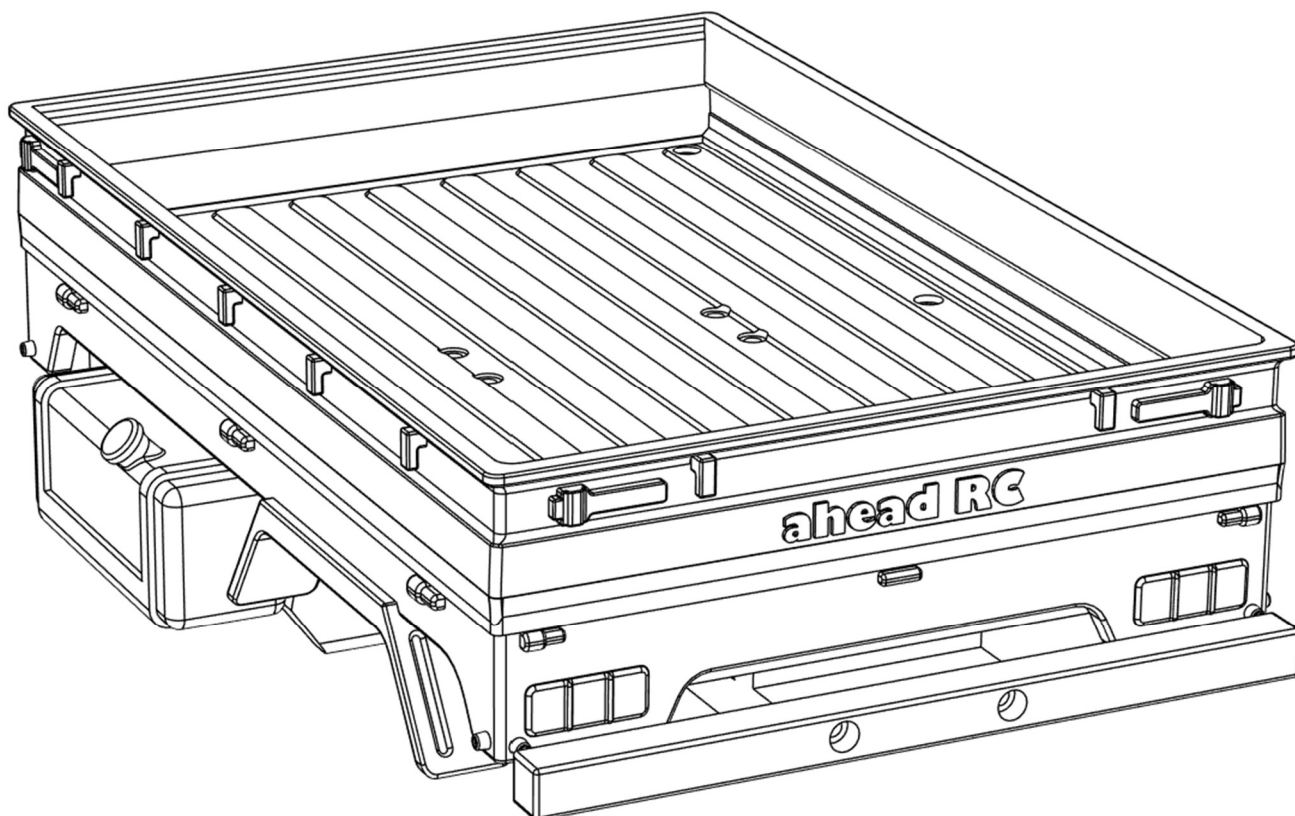

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

aheadrc@gmail.com

or visit us at:

www.aheadrc.com