


ahead RC Crawler

V306 Cab TRX4M

Assembly Manual

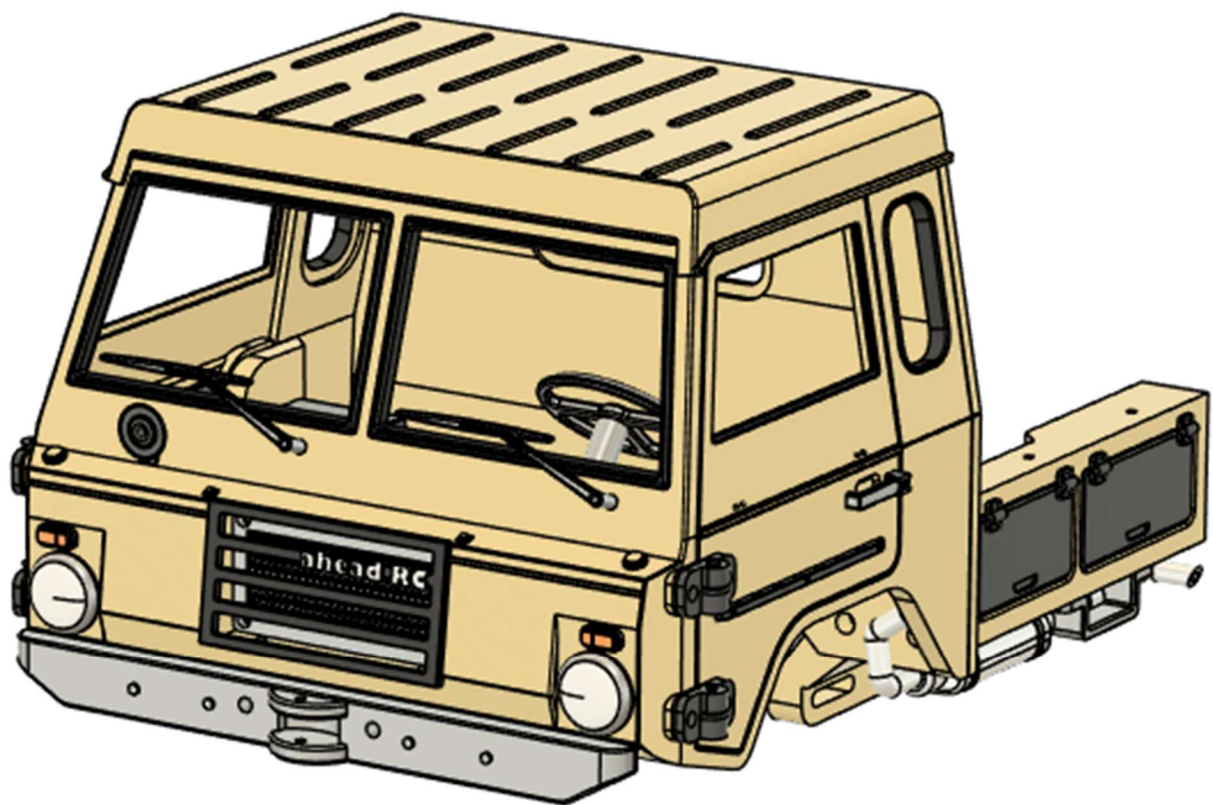

Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

Electronics

- 3mm LED White x2
- 3mm LED Orange x2



Hardware



Hardware	Quantity	Check
M2*5 Socket head	23	
M2*8 Socket head	9	
M2*8 Socket head (for wheels)	24	
M2*10 Socket head	6	
M2.5*20 Socket head	4	
M3*20 Socket head	6	
M3*10 Grub screw (GS)	2	
10x2mm magnet	4	

Before you begin


- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling

Tip: It will help to paint all of the parts before final assembly

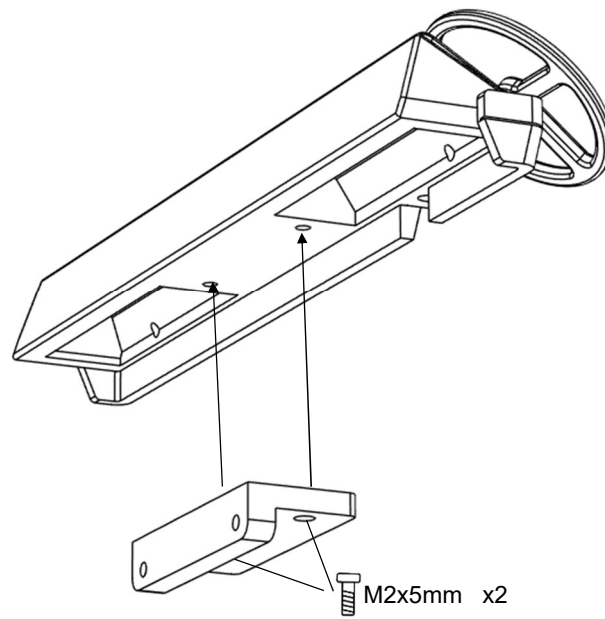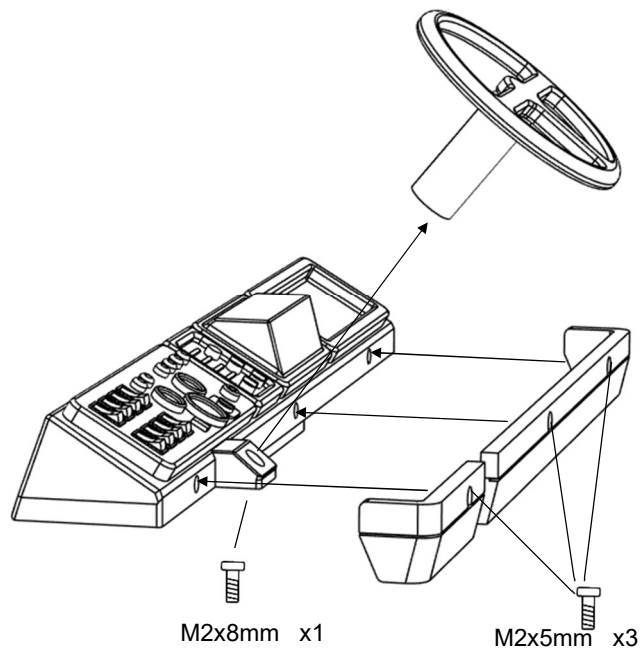


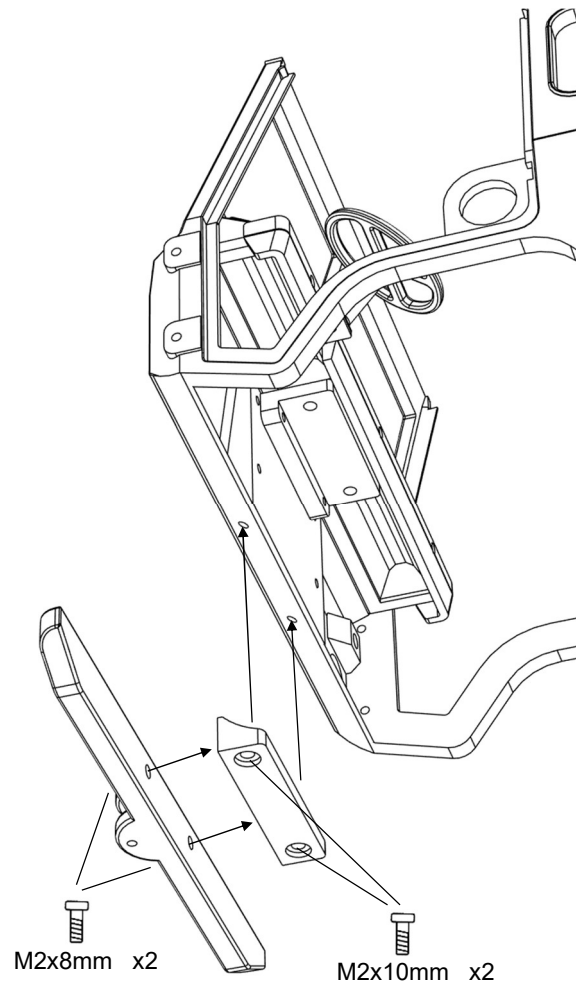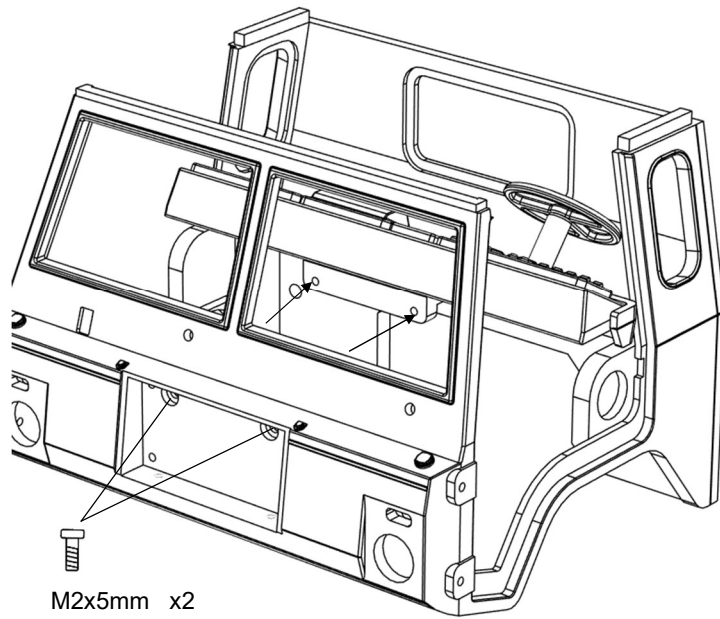

Repeat on the
other side

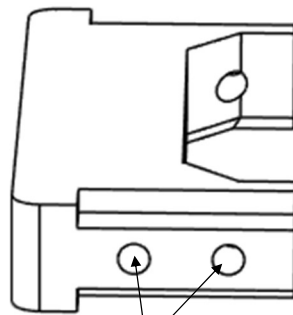


Bolt through
chassis rail front
M2x8mm x2

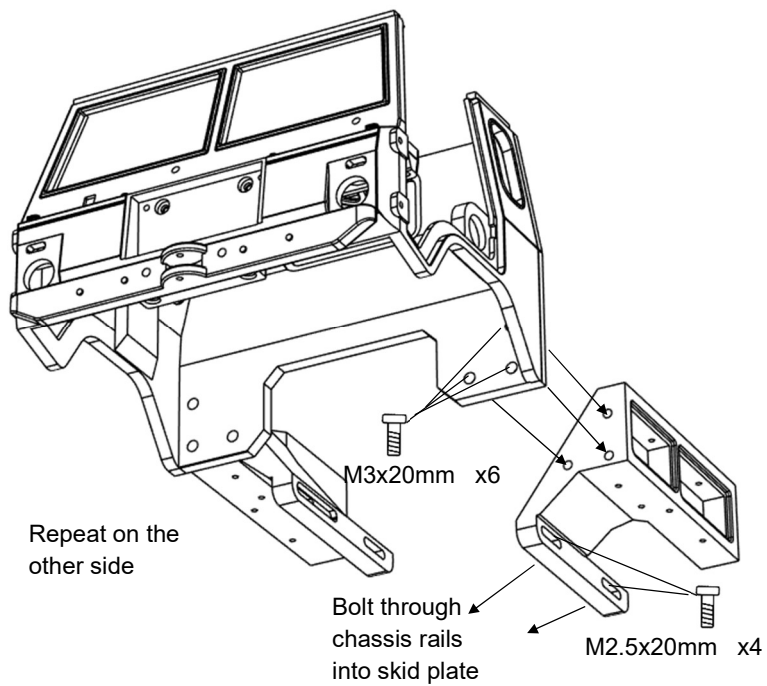




Repeat on the
other side




Bolt through
chassis rails
into skid plate



M2.5x20mm x4


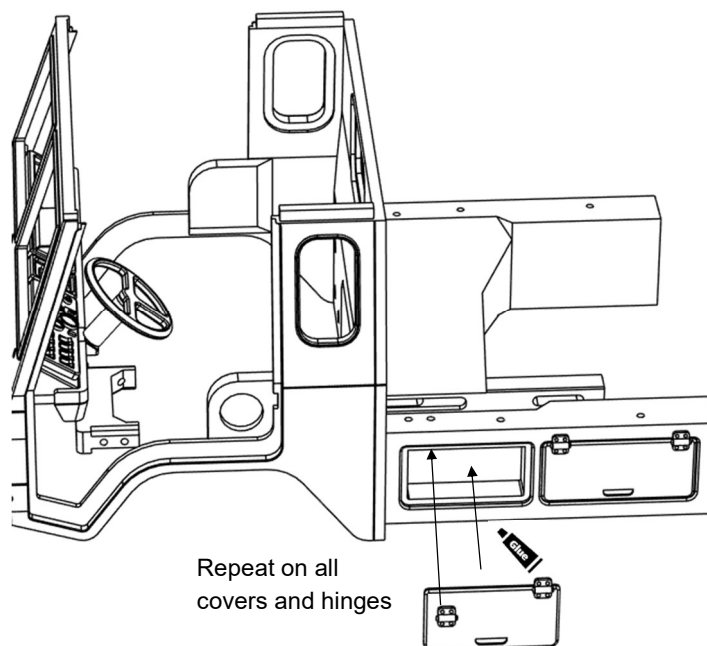


Repeat on all
covers and hinges

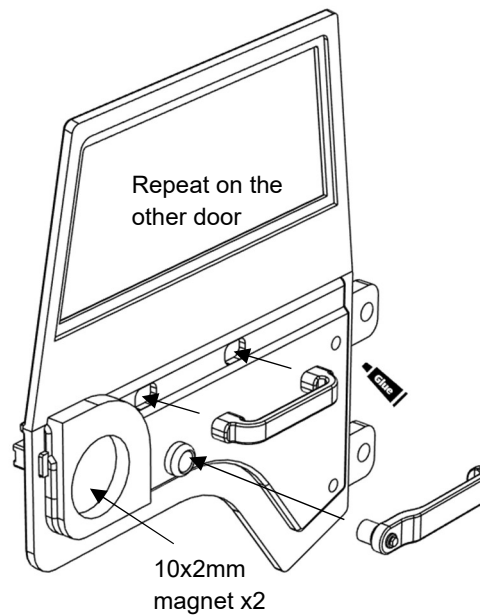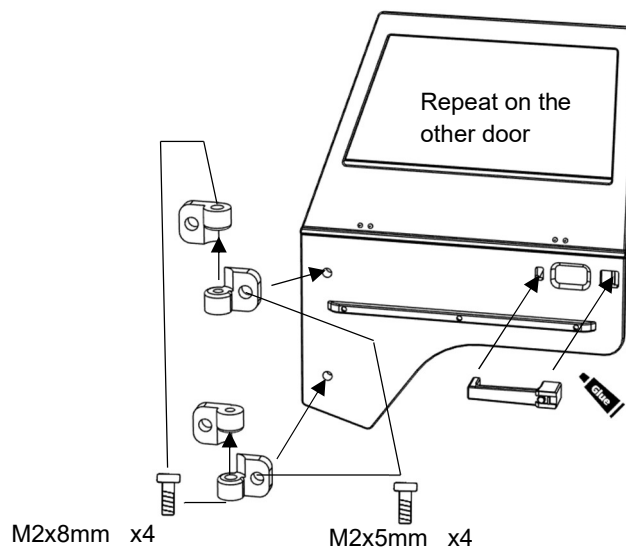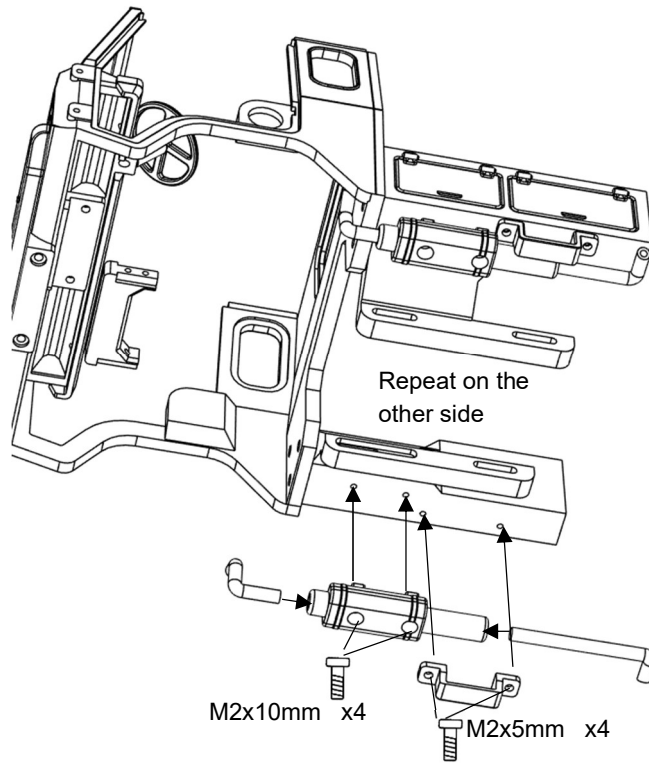

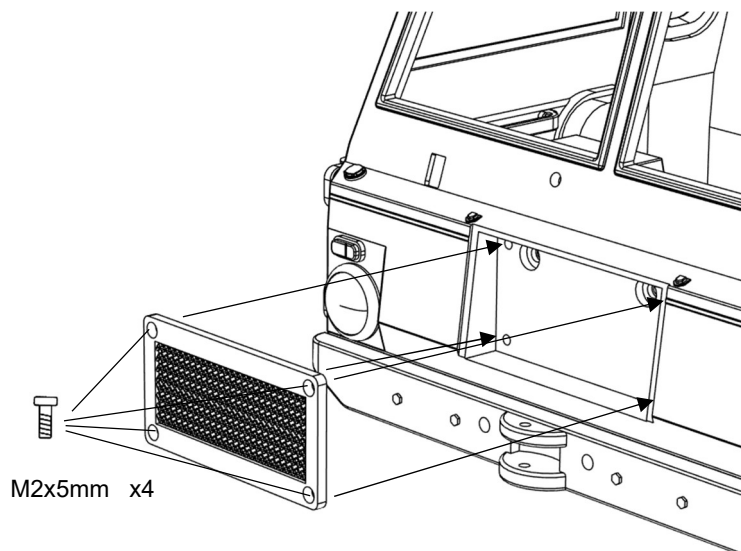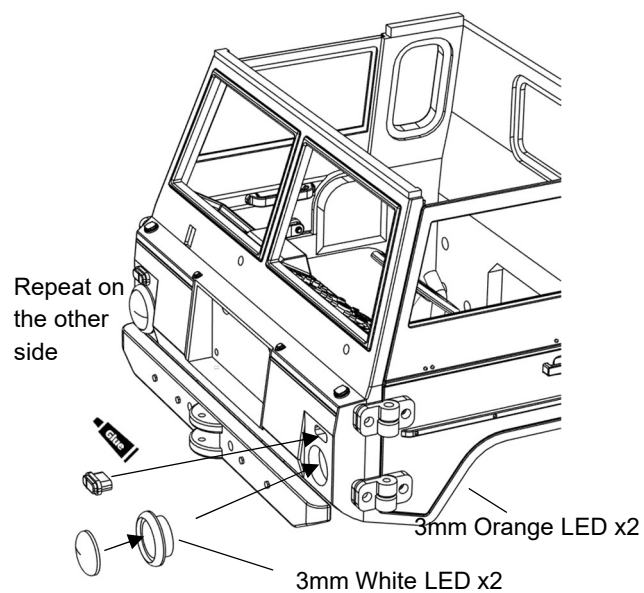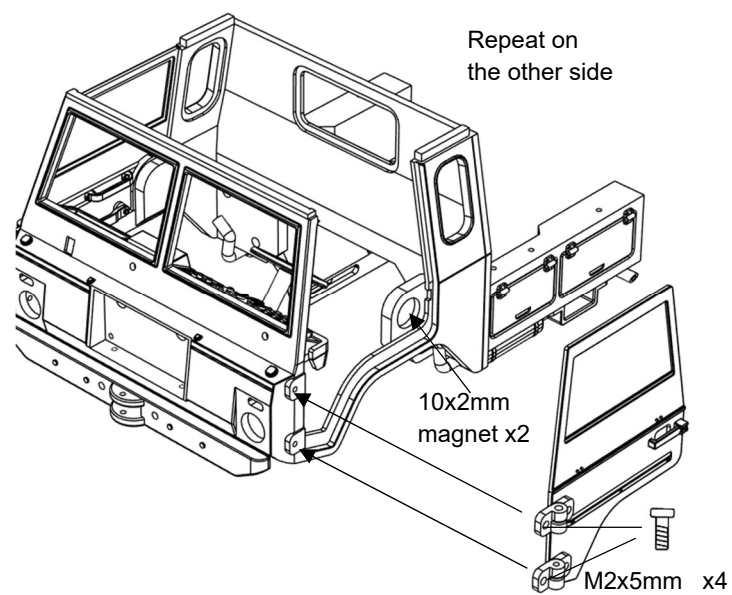

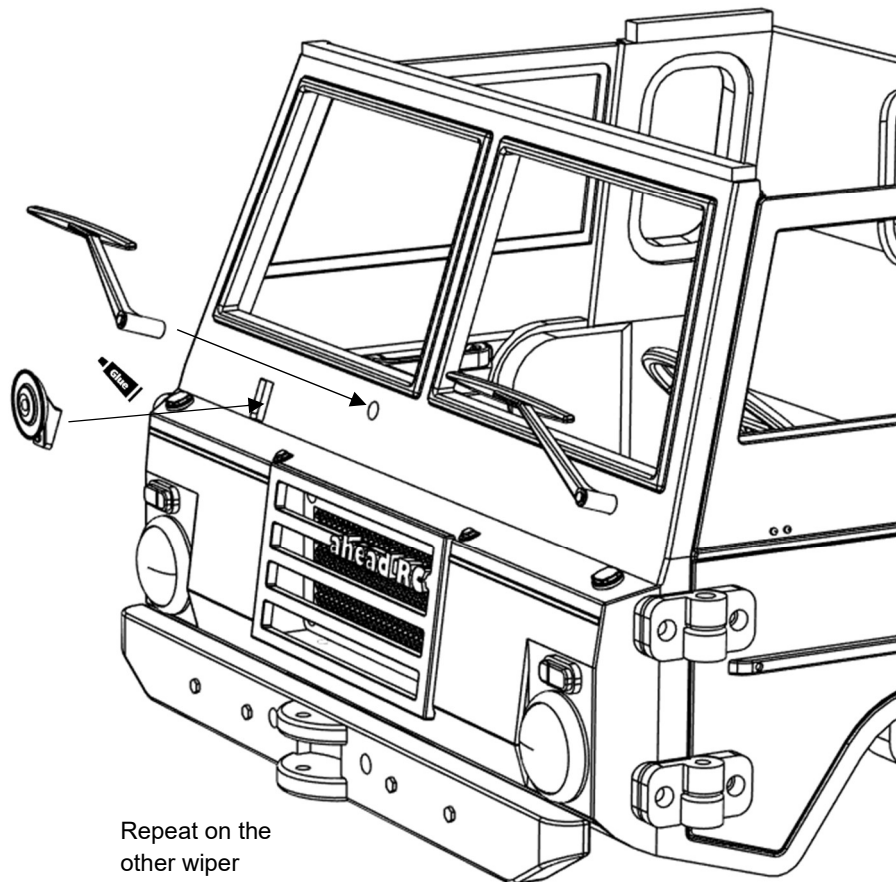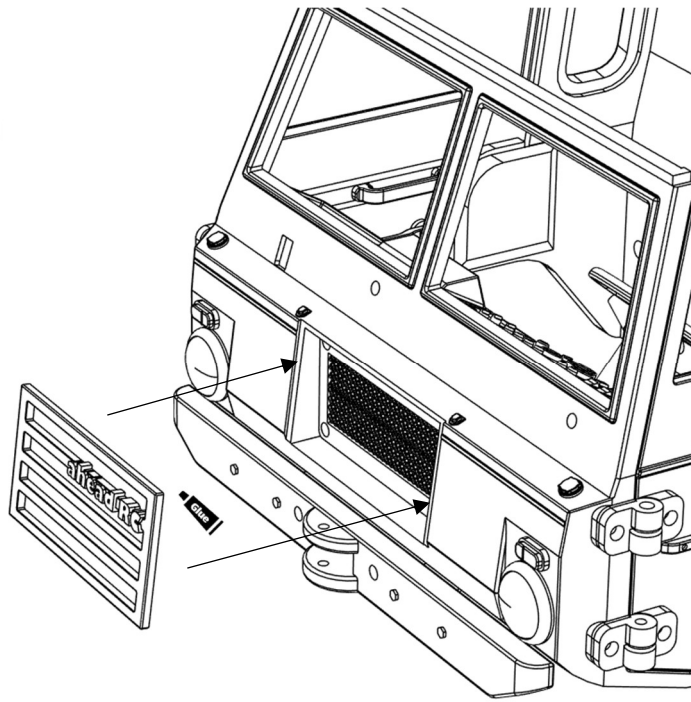

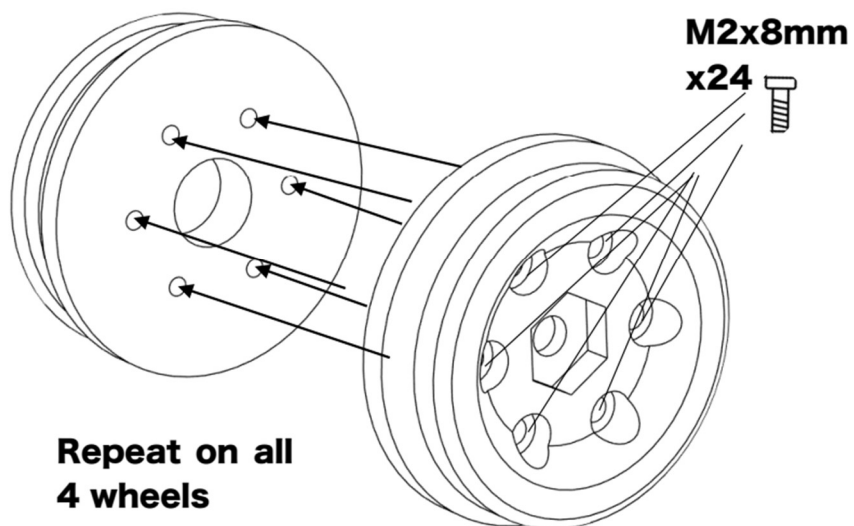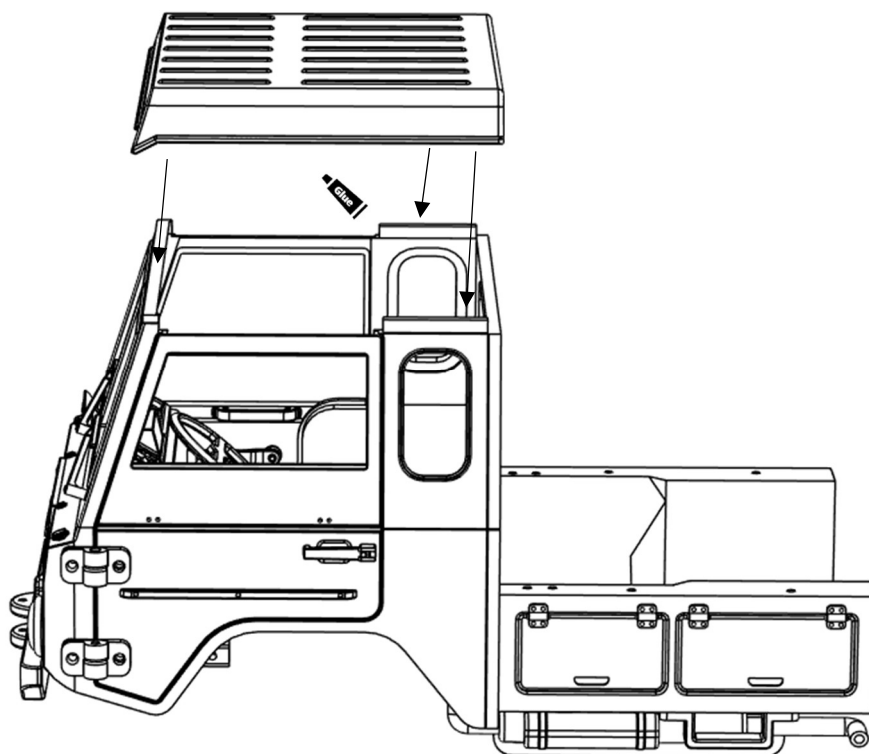



Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

aheadrc@gmail.com

or visit us at:

www.aheadrc.com