


ahead RC Crawler V303 4x4 Flatbed Assembly Manual

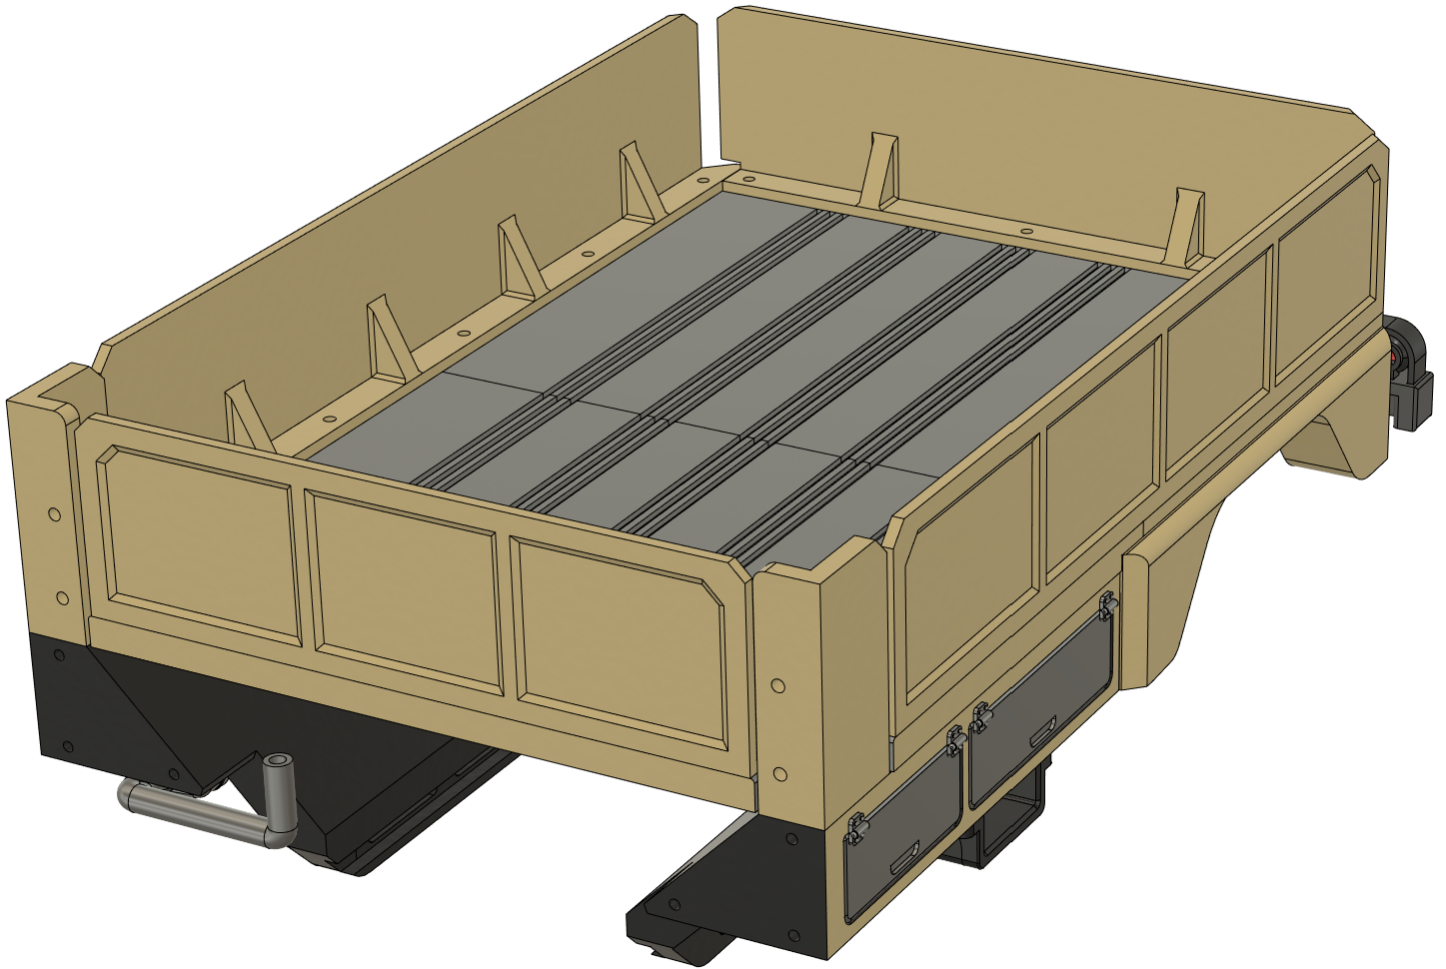

Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers

Hardware

Hardware	Quantity	Check ✓
M3*10 Countersunk (CS)	11	
M3*10 Socket head	7	
M3*15 Countersunk (CS)	13	
M3*15 Socket head	13	
M3*20 Grub screw (GS)	4	


Before you begin

- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling


Tip: It will help to paint all of the parts before final assembly

Assembling the bed


M3x20mm GS
x4

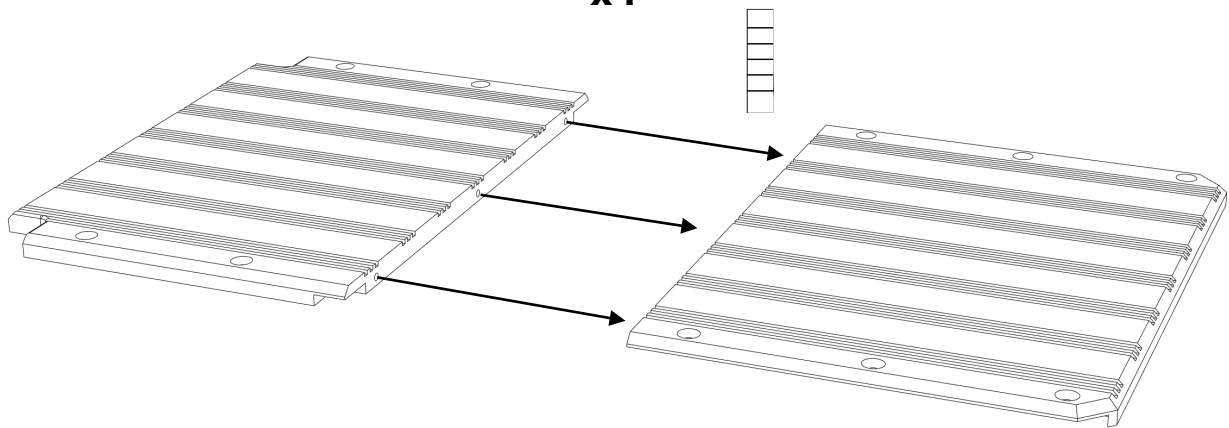

M3x15mm CS
x4

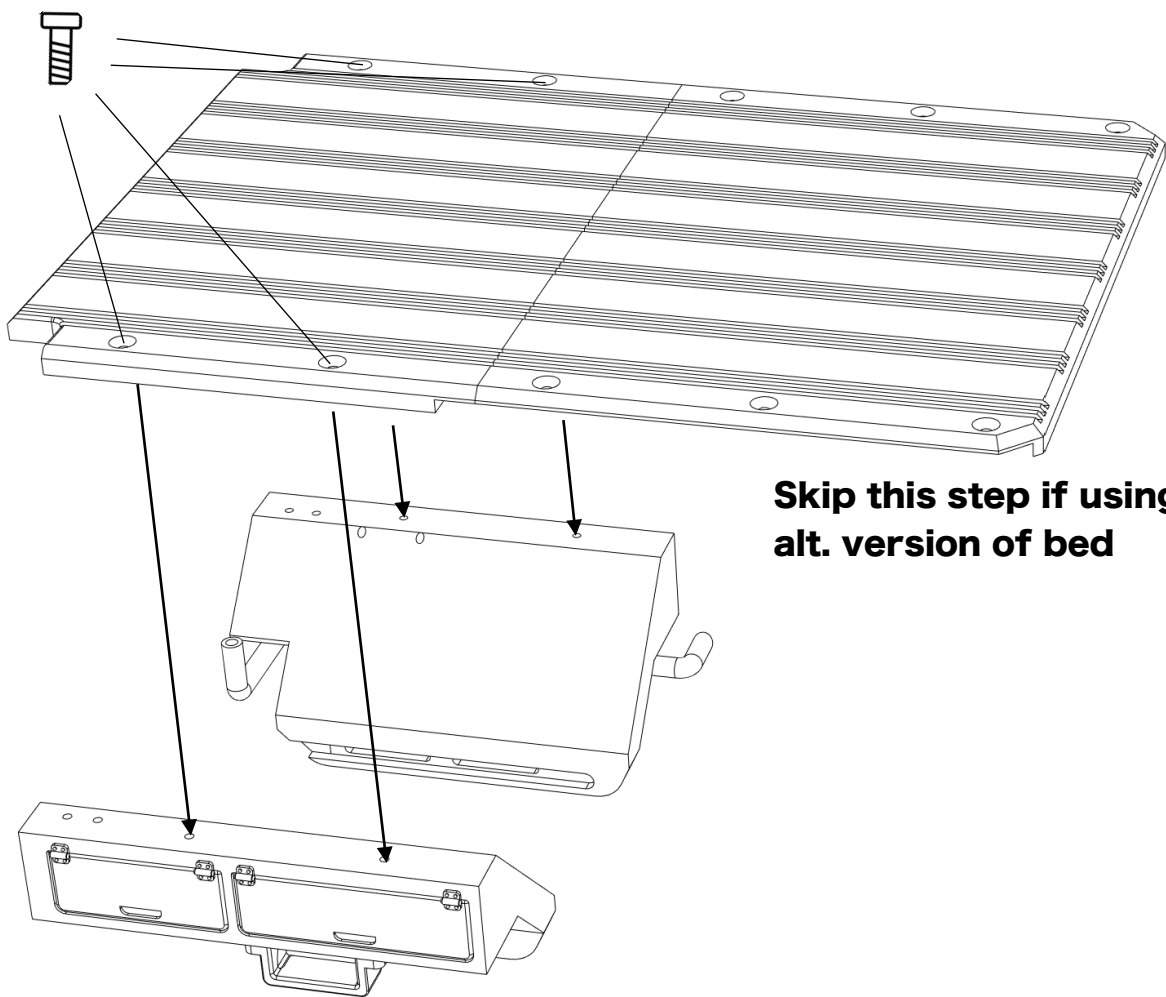


Skip this step if using
alt. version of bed

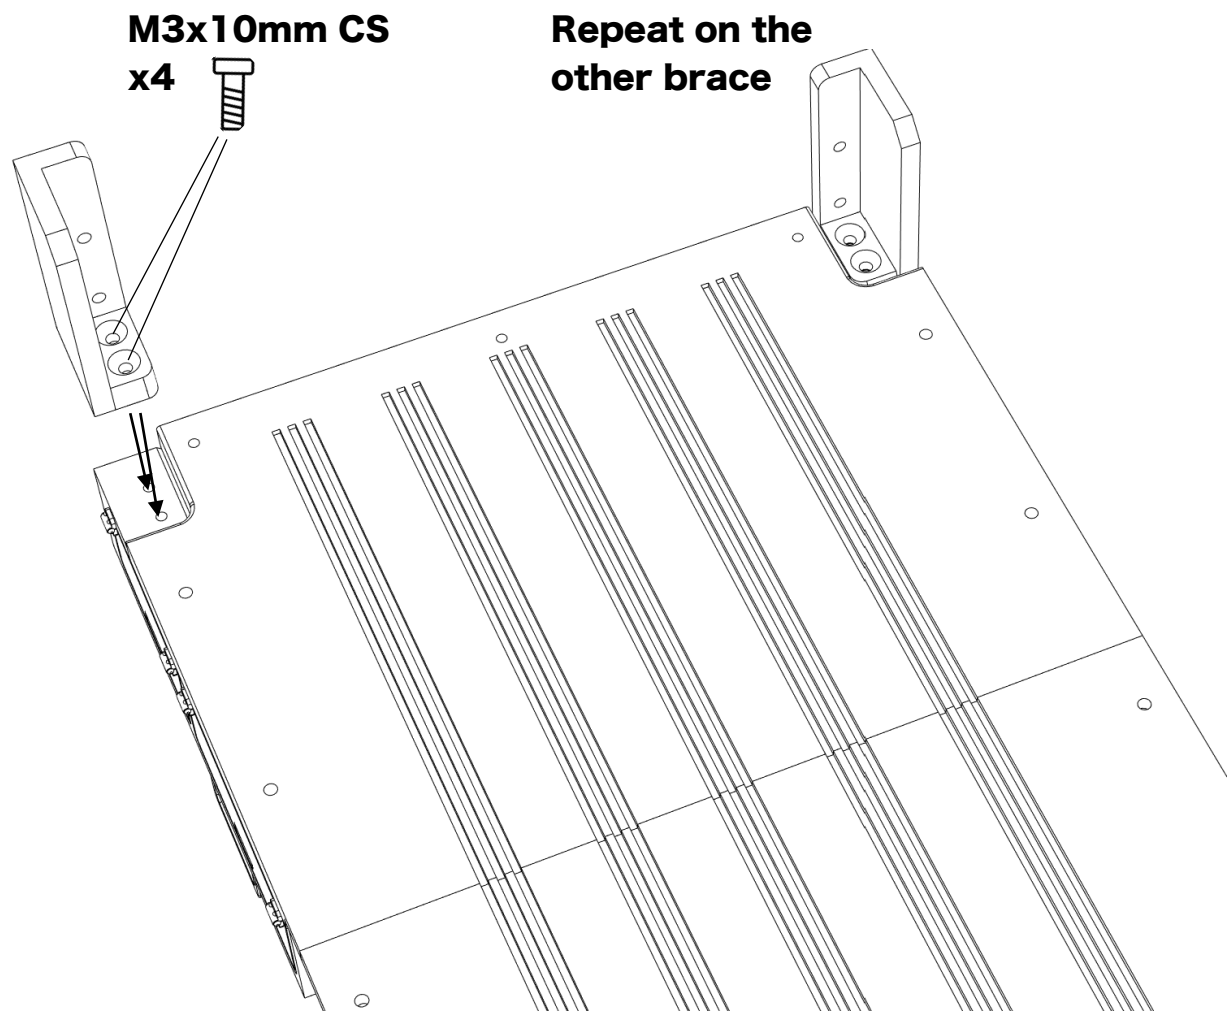


**Secure screws
through front
cab**

M3x15mm x4

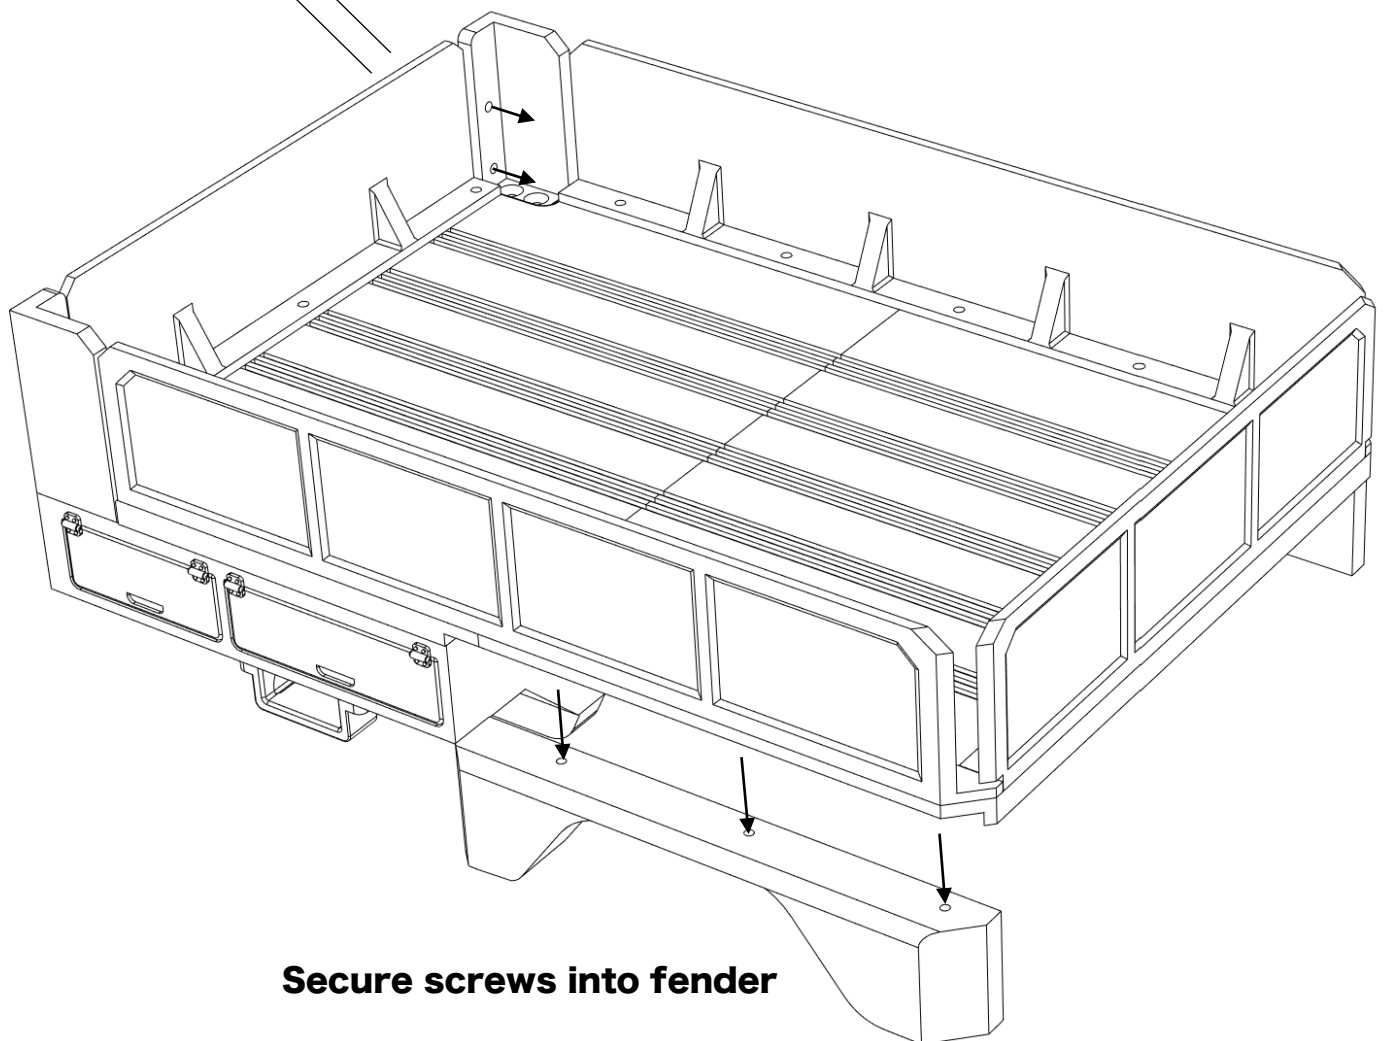



Secure screws into fender

Repeat on the other fender

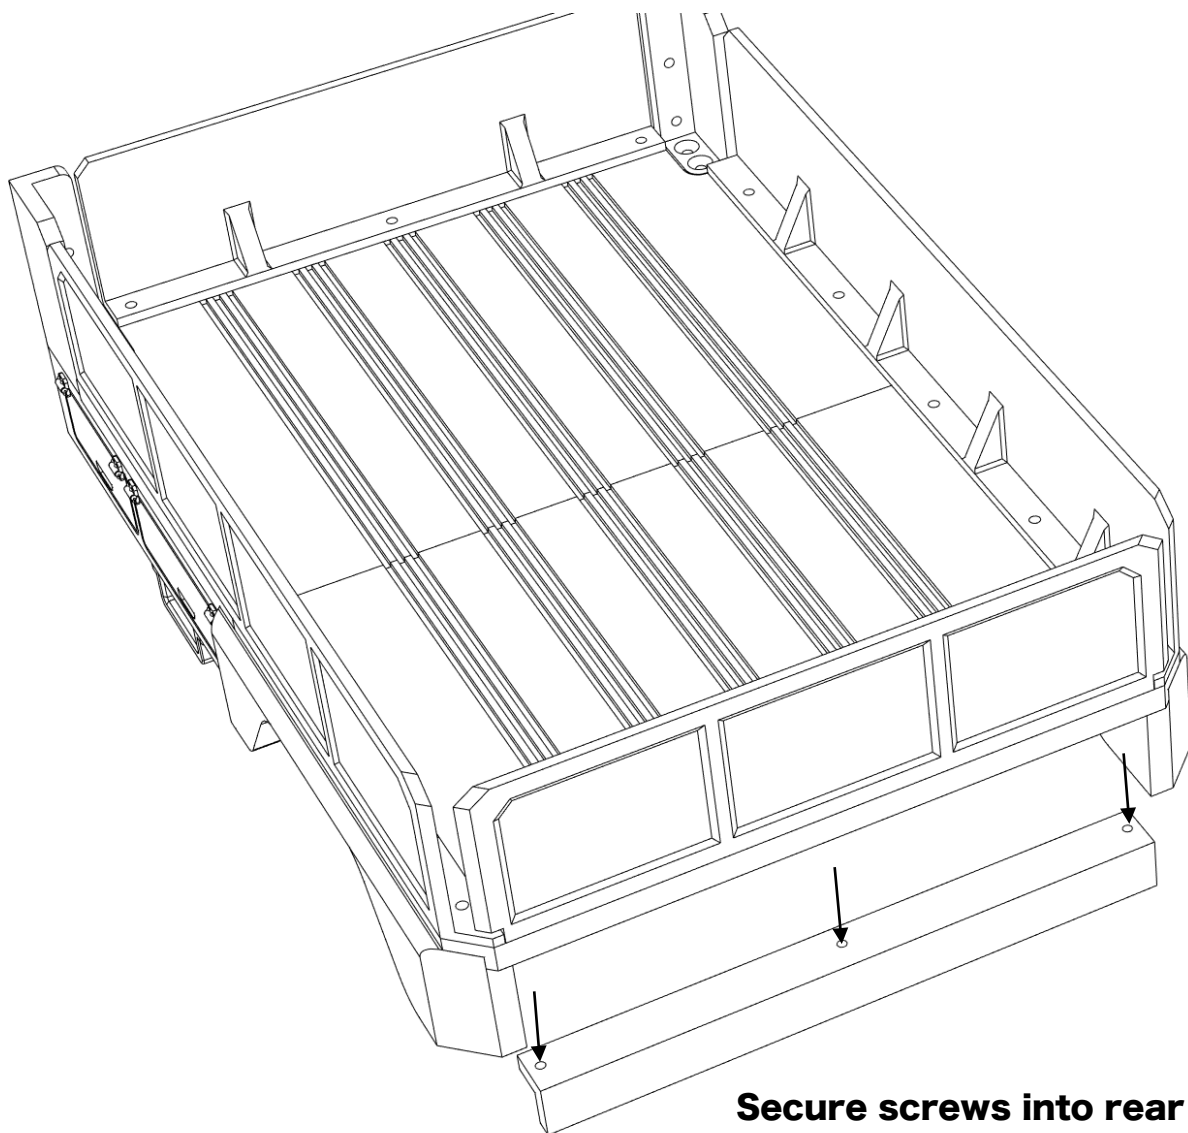

Secure screws into rear panel

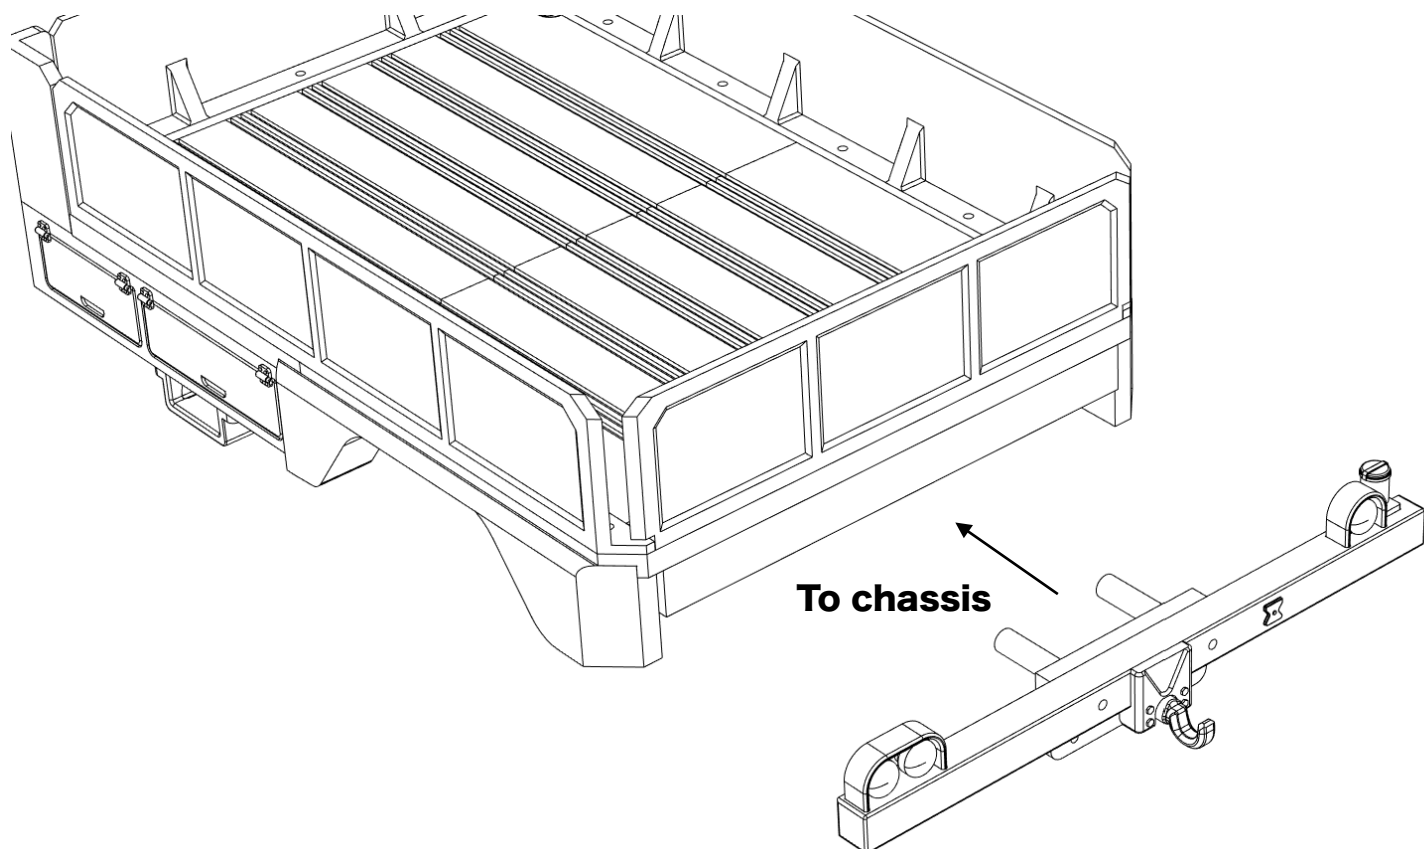

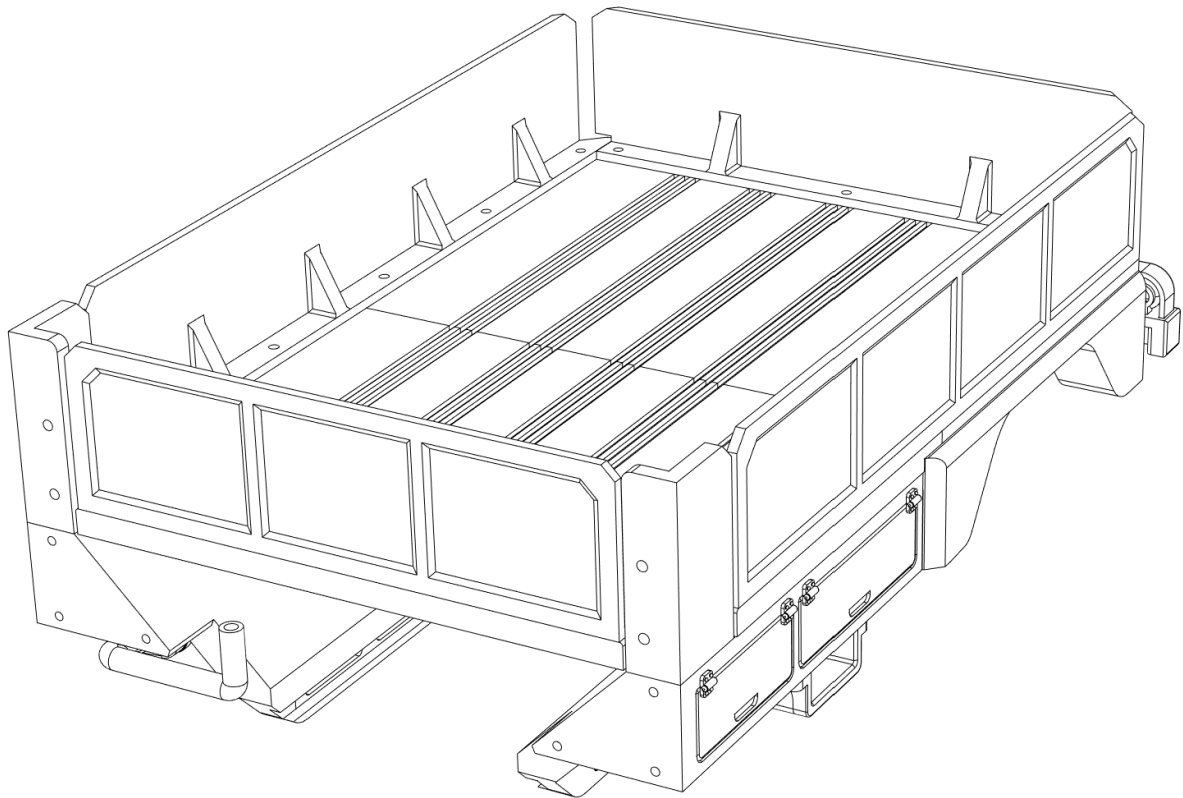

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

aheadrc@gmail.com

or visit us at:

www.aheadrc.com

Best of luck with your build!