


# **ahead RC** Crawler

M939 4x4 Flatbed for

SCX10 iii Gladiator

## Assembly Manual

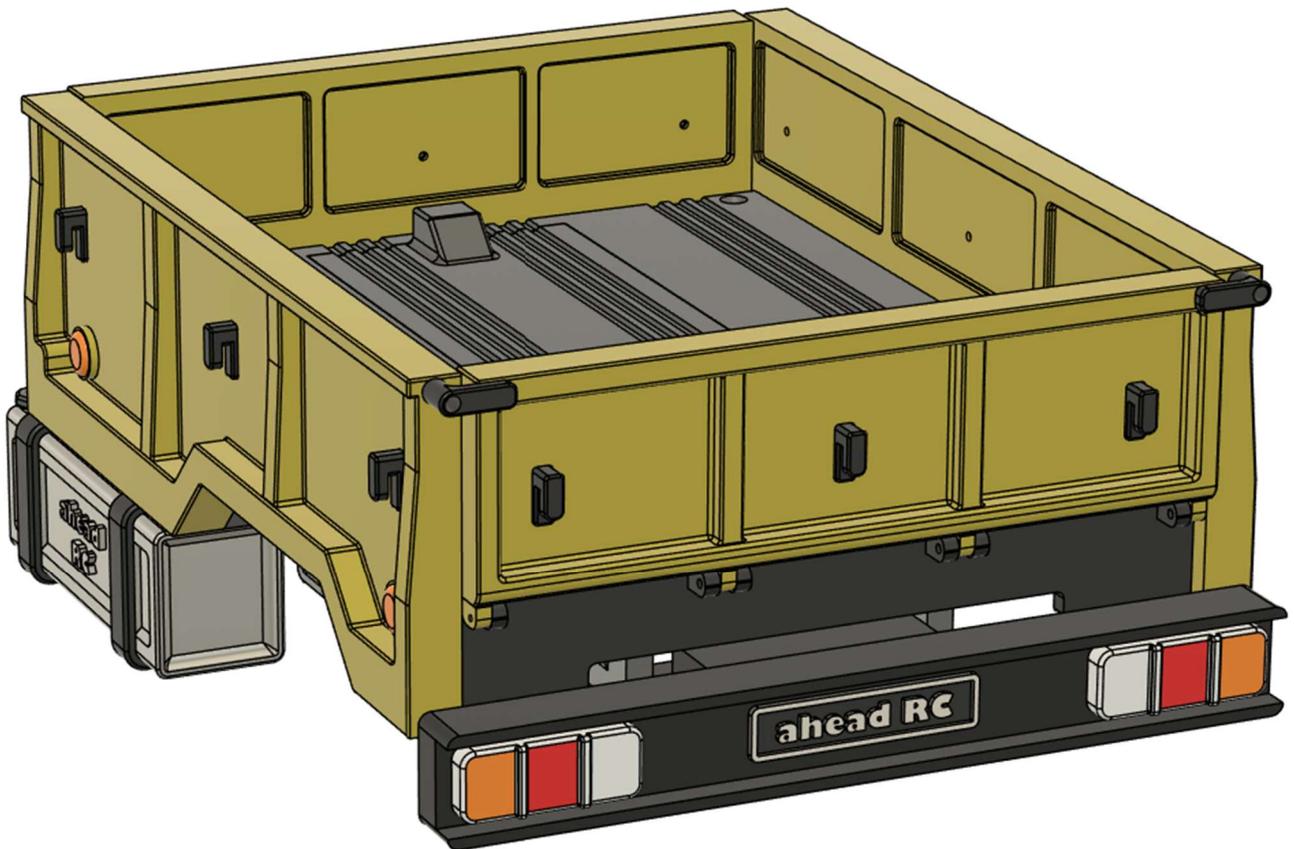

## Required tools and hardware

### Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- 1.5mm L shaped hex wrench
- 2.5mm L shaped hex wrench
- Needle Nosed Pliers
- Instant Glue

### Electronics

- 5mm LED White x2
- 5mm LED Red x2
- 5mm LED Orange x2
- 3mm LED Orange x4


### Hardware

Hardware	Quantity	Hardware	Quantity
M2*5 Socket head	14	M3*25 Socket head	2
M2*8 Socket head	12	M3*16 Countersunk (CS)	13
M2*10 Socket head	2	M3*20 Countersunk (CS)	12
M2*12 Socket head	6	10*2 magnet	4
M3*10 Socket head	10	M3 Washer	8
M3*12 Socket head	5	M3 Nut	4
M3*16 Socket head	10		

# Before you begin


- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling

Tip: It will help to paint all of the parts before final assembly

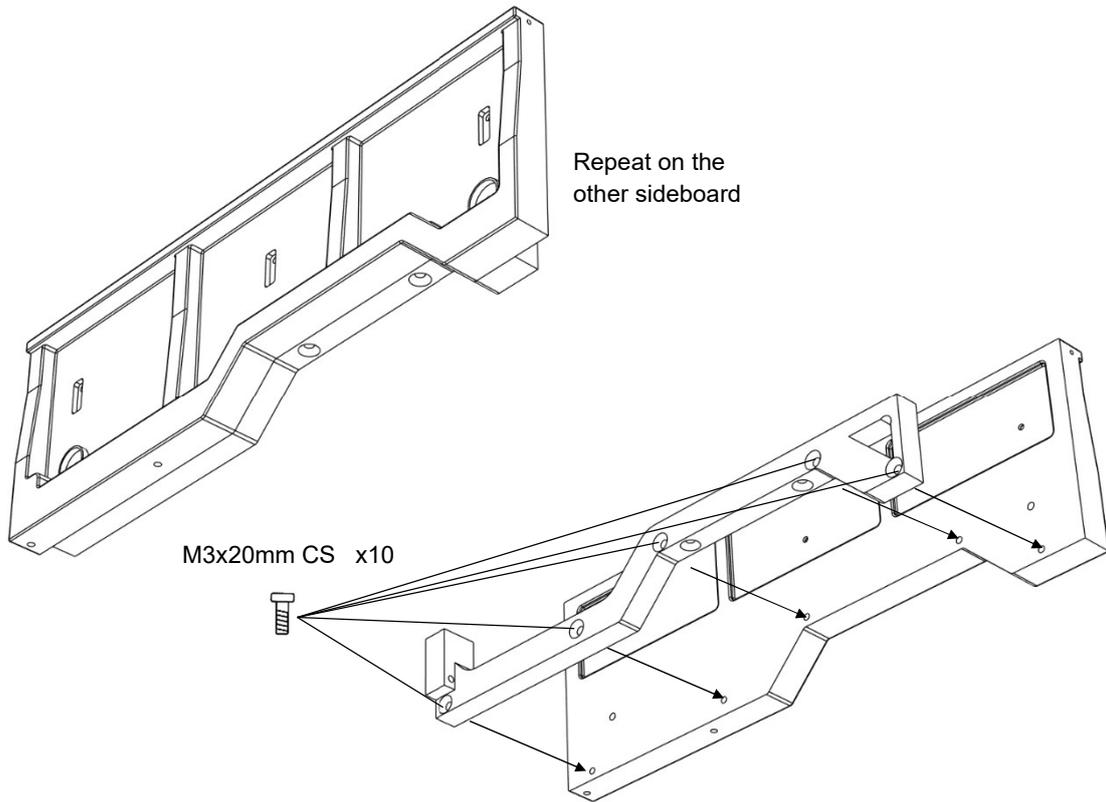



Repeat on the other sideboard



M3x20mm CS x10



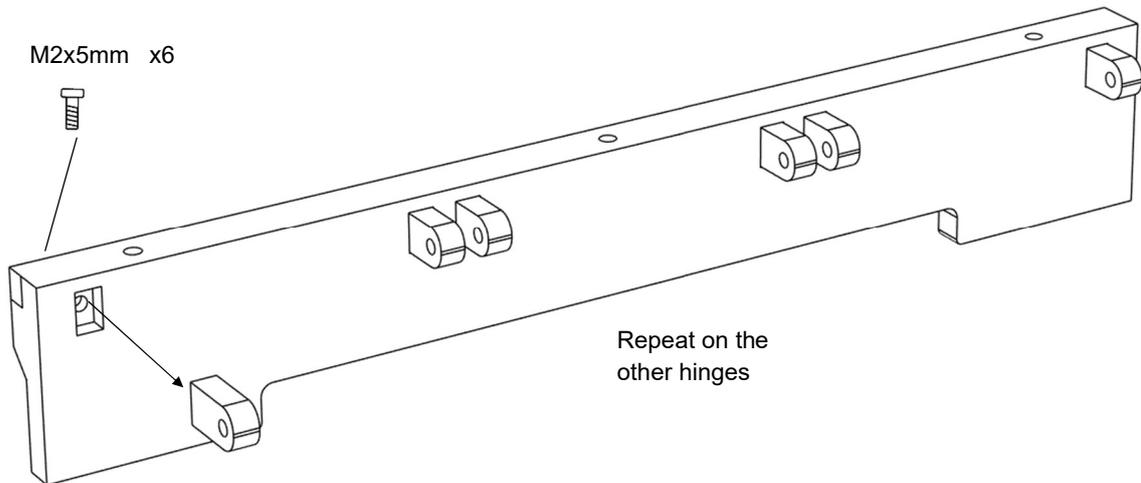





M2x5mm x6



Repeat on the other hinges

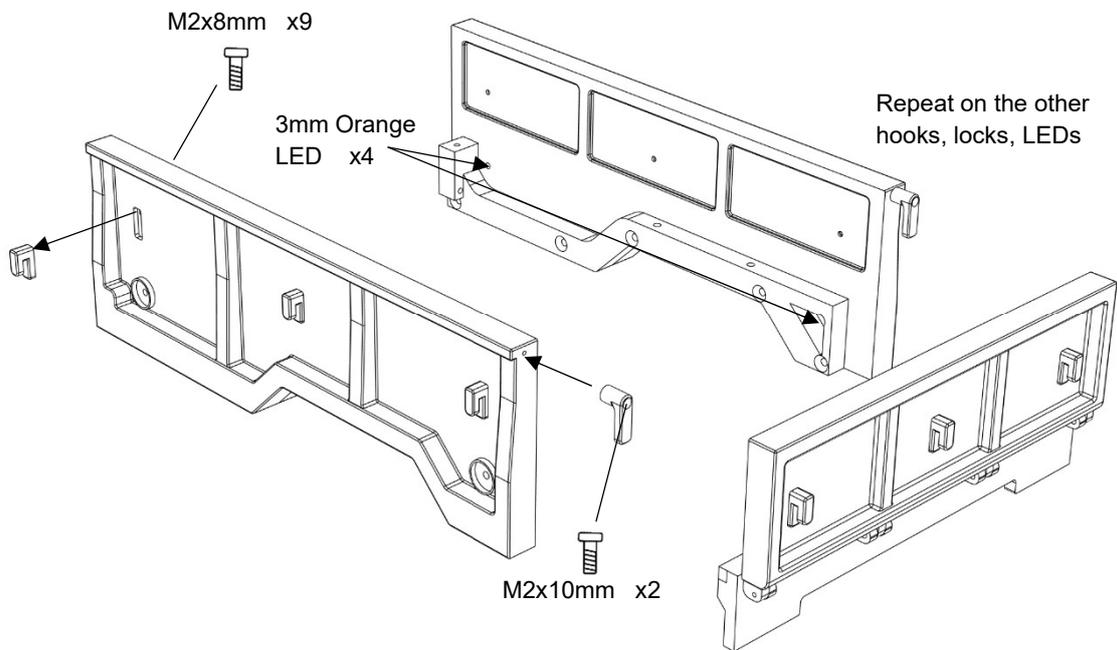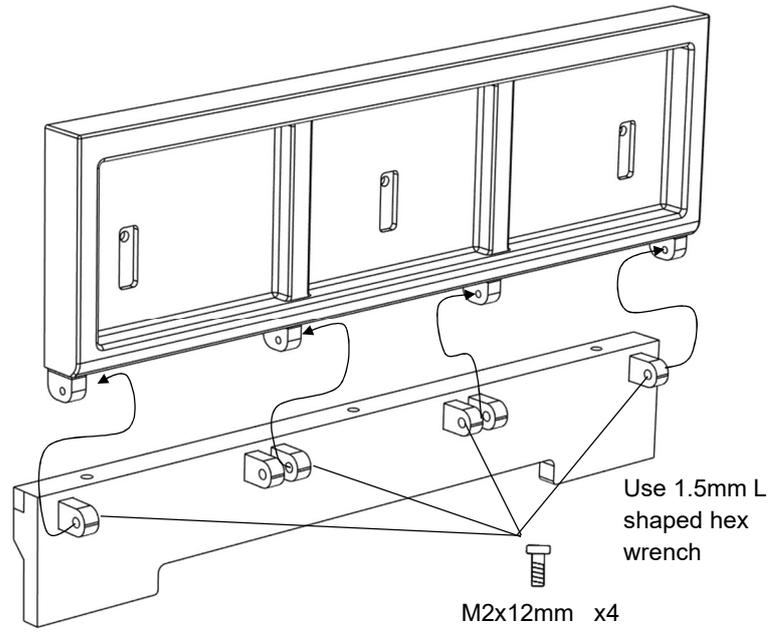


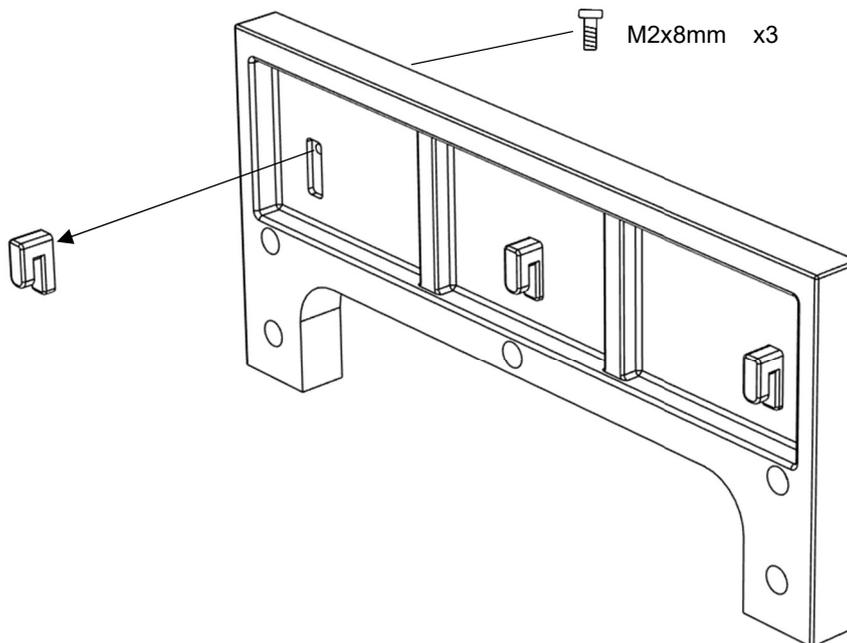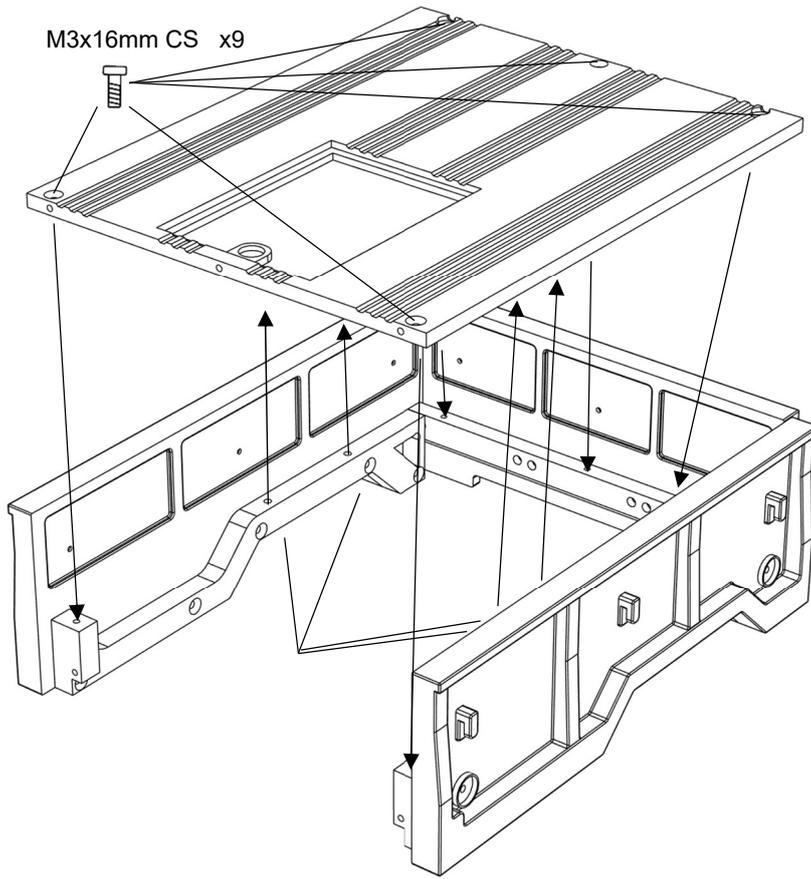

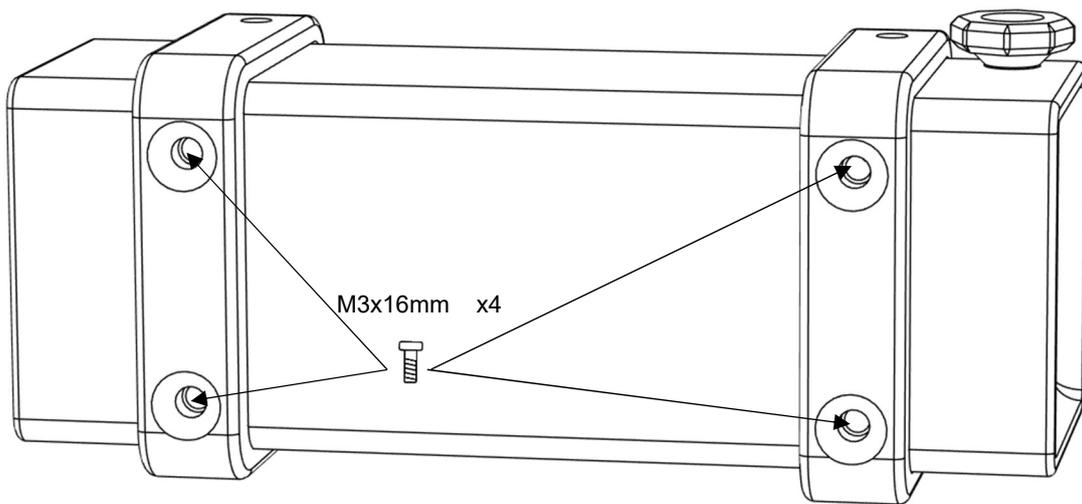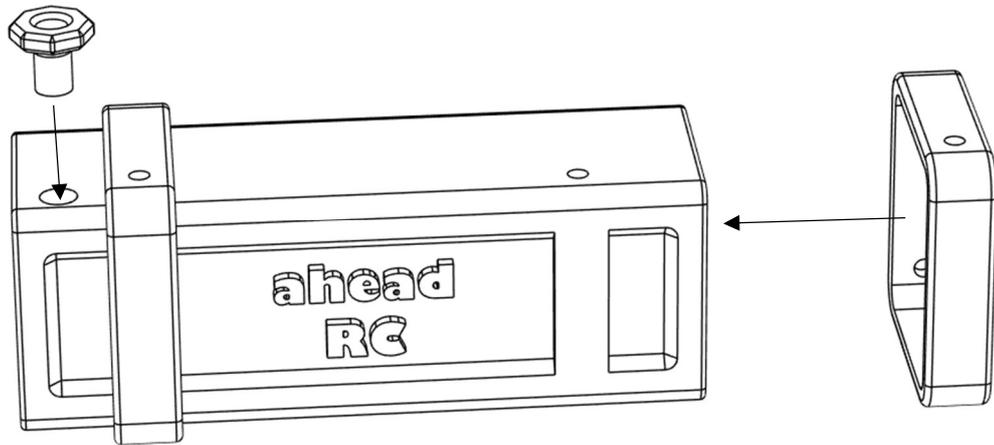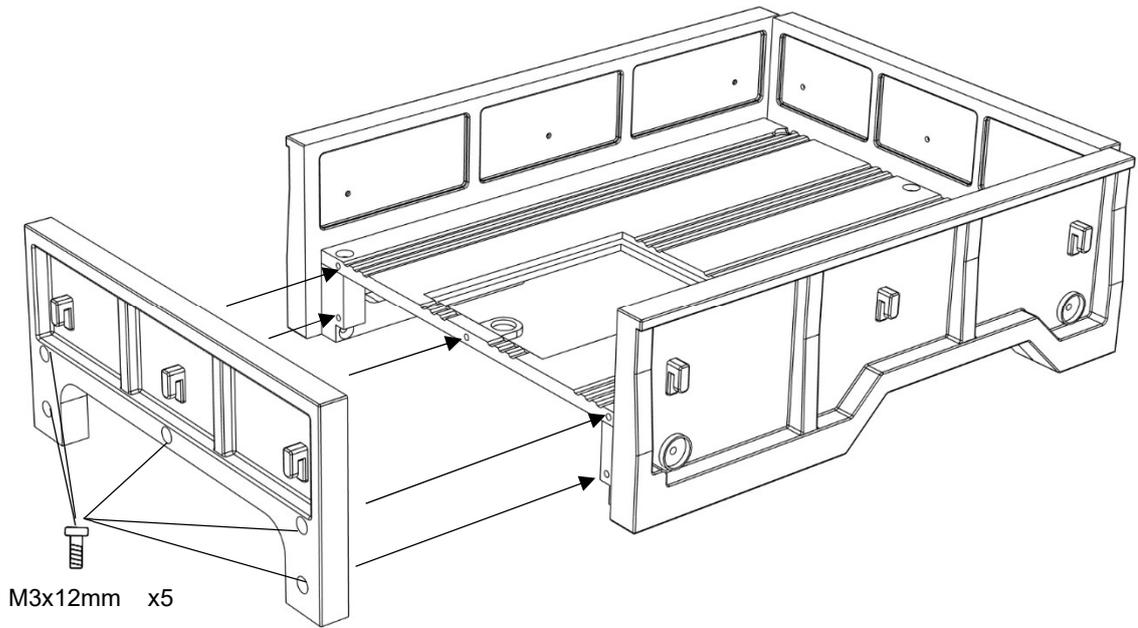



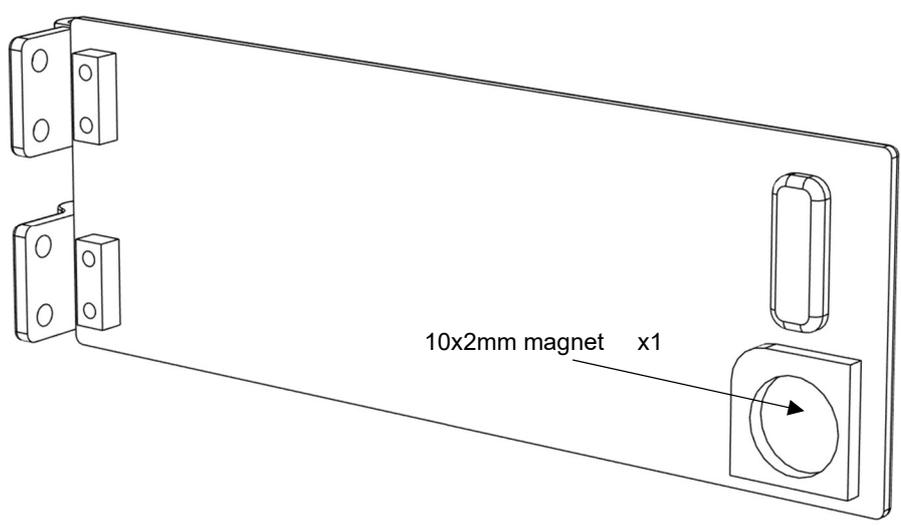
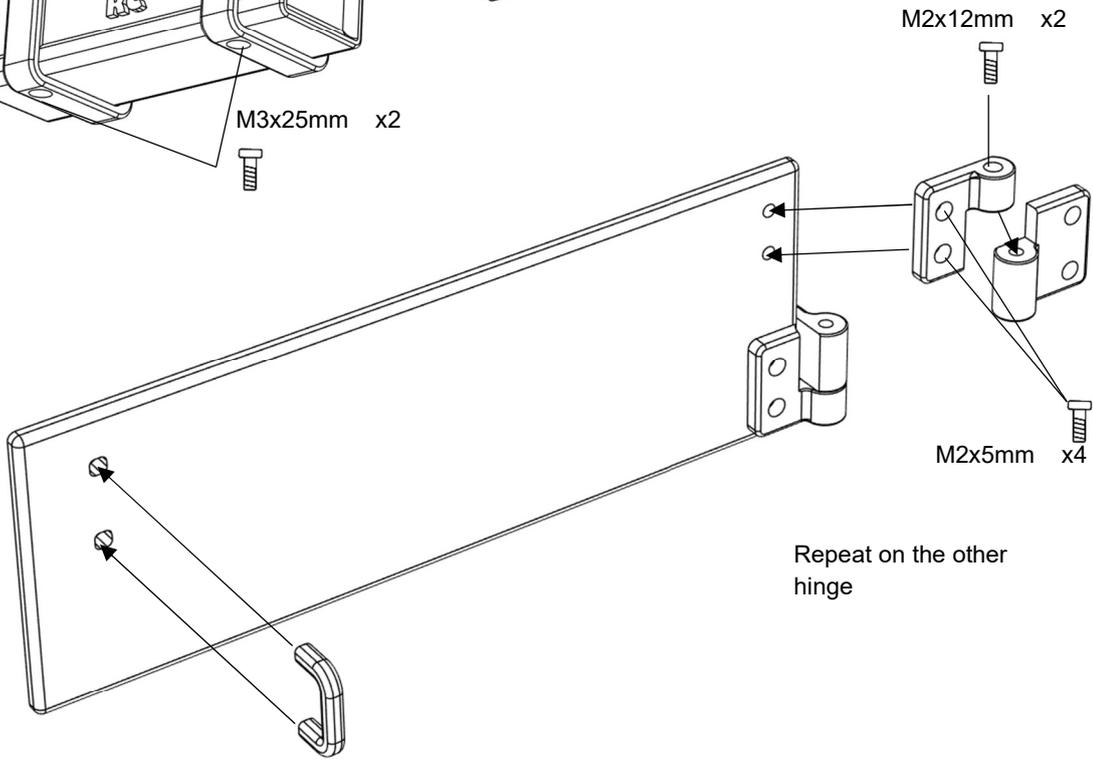
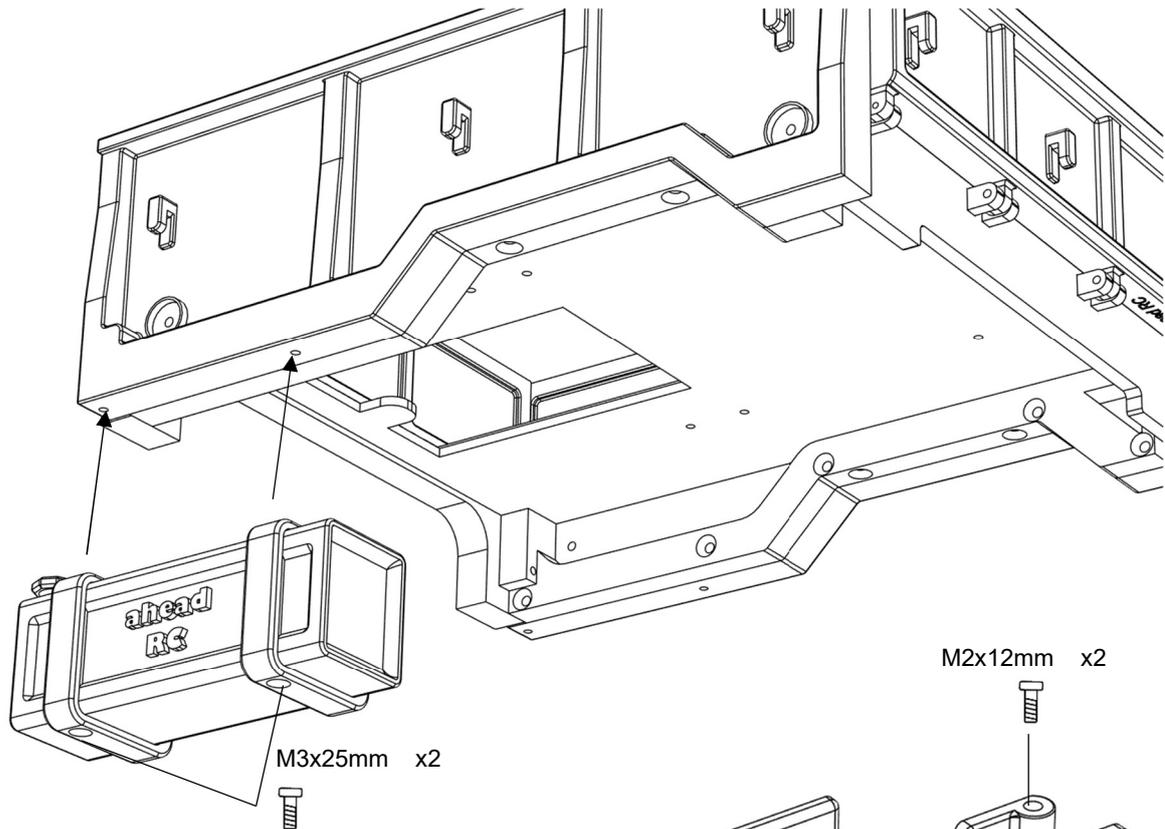


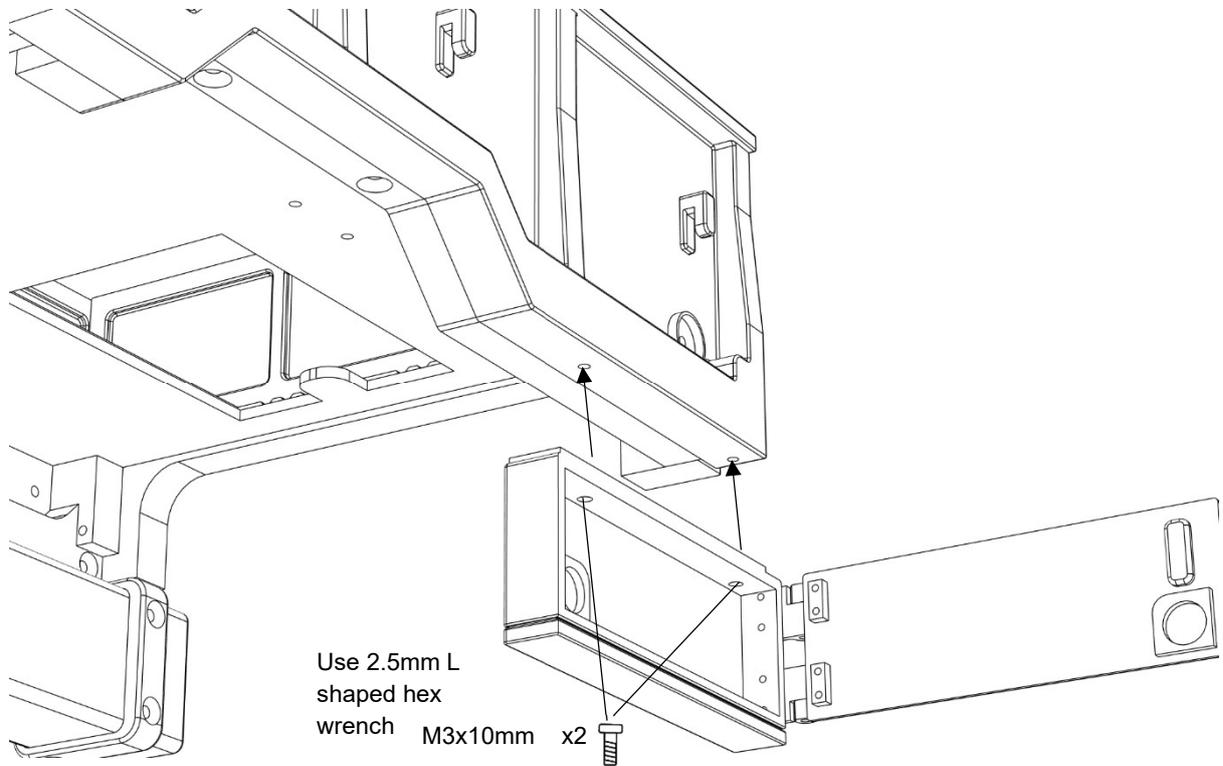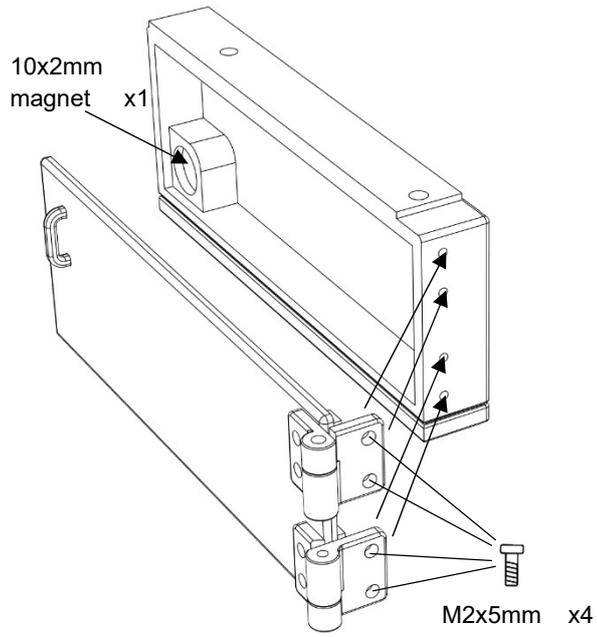


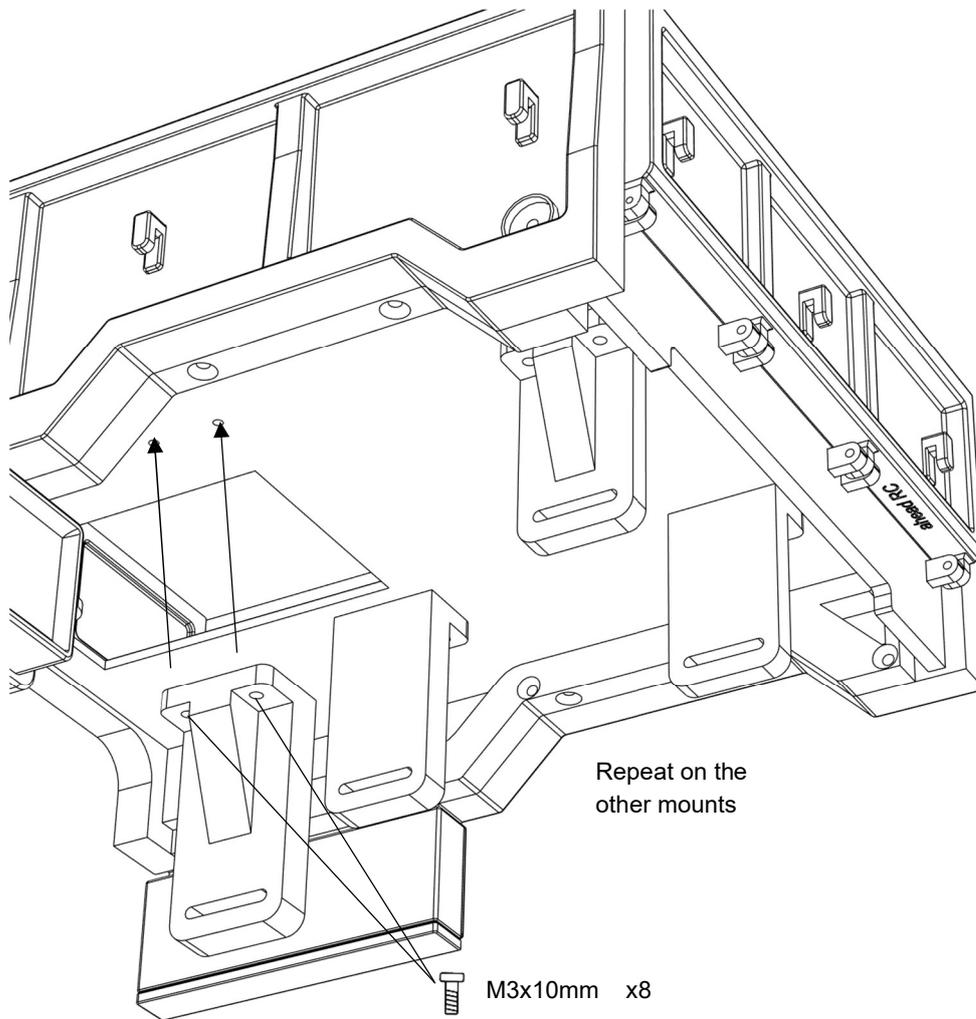


### Battery tray (Optional)

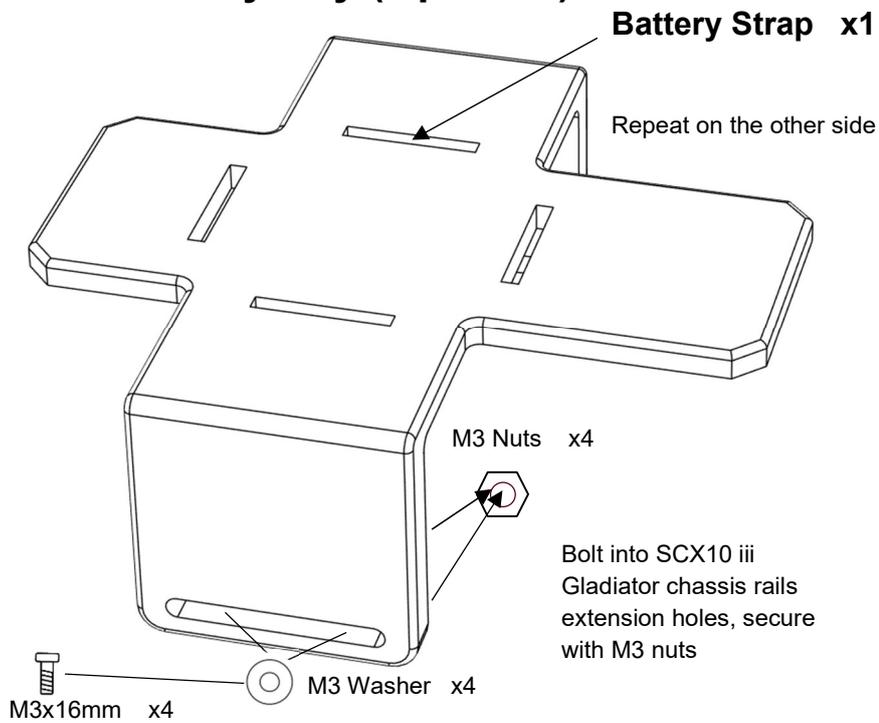


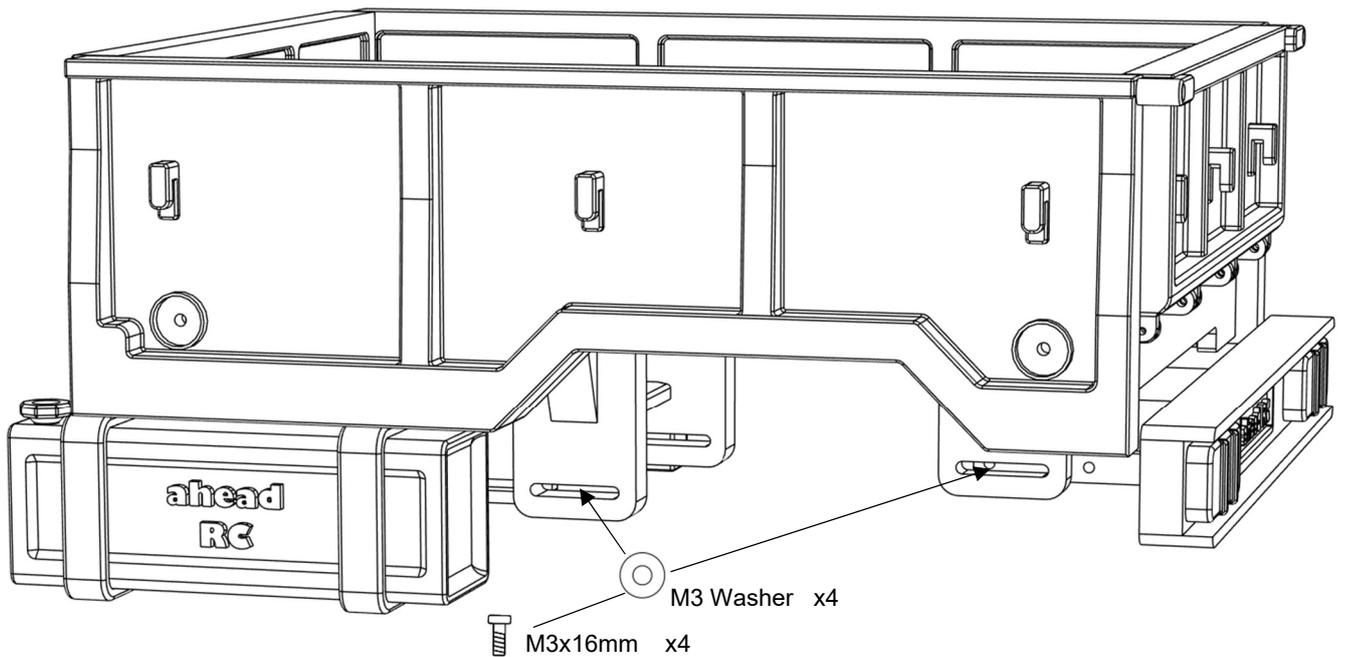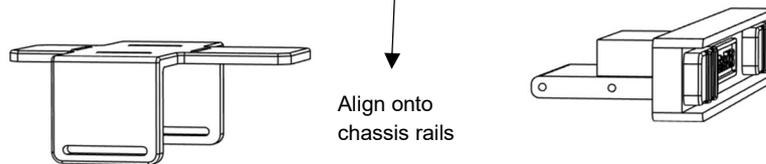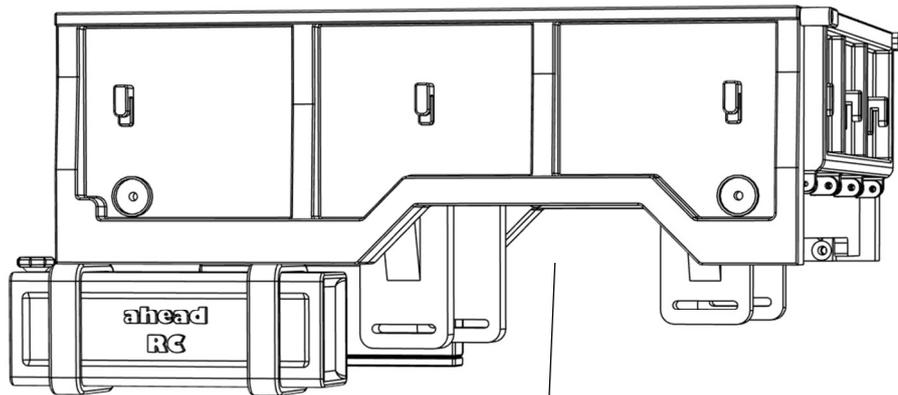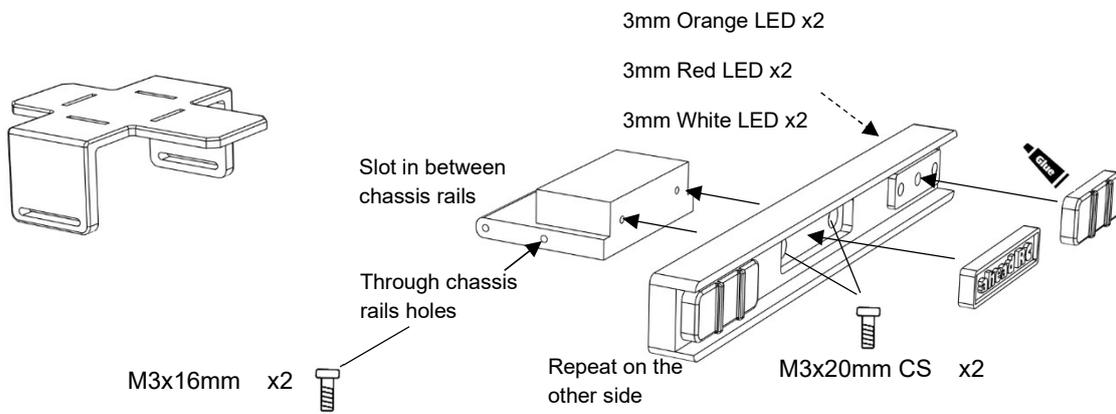


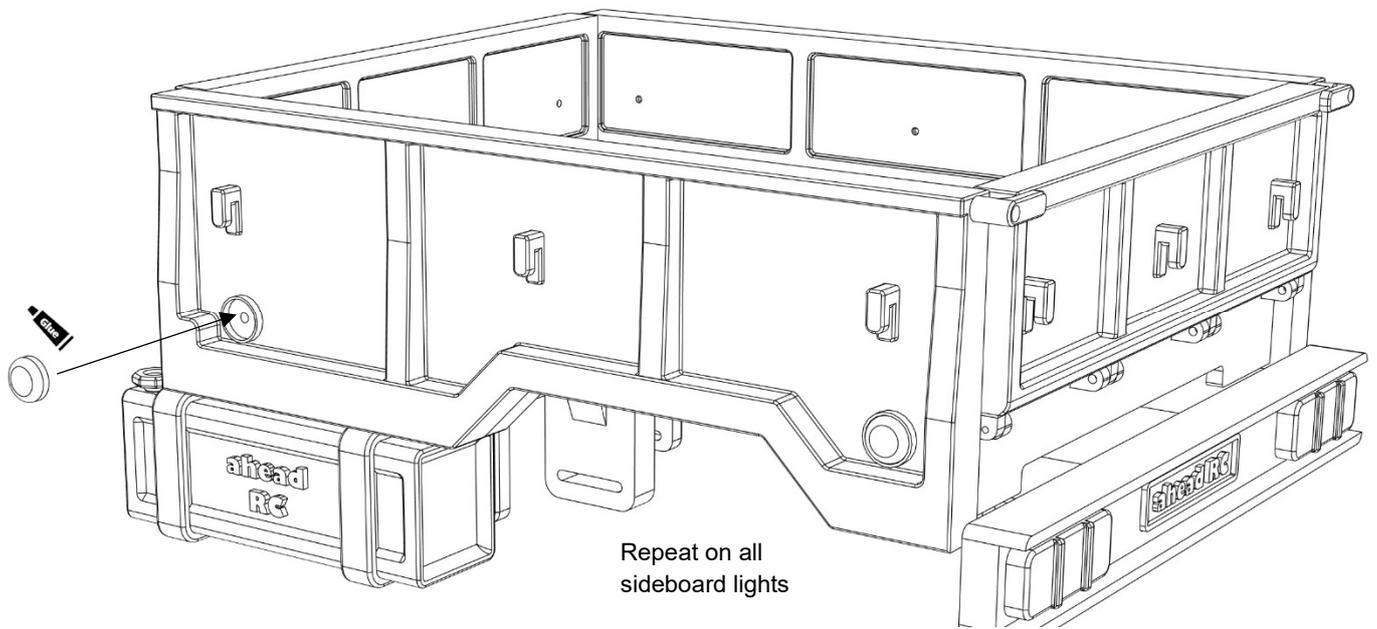

## Chassis rail mounting points

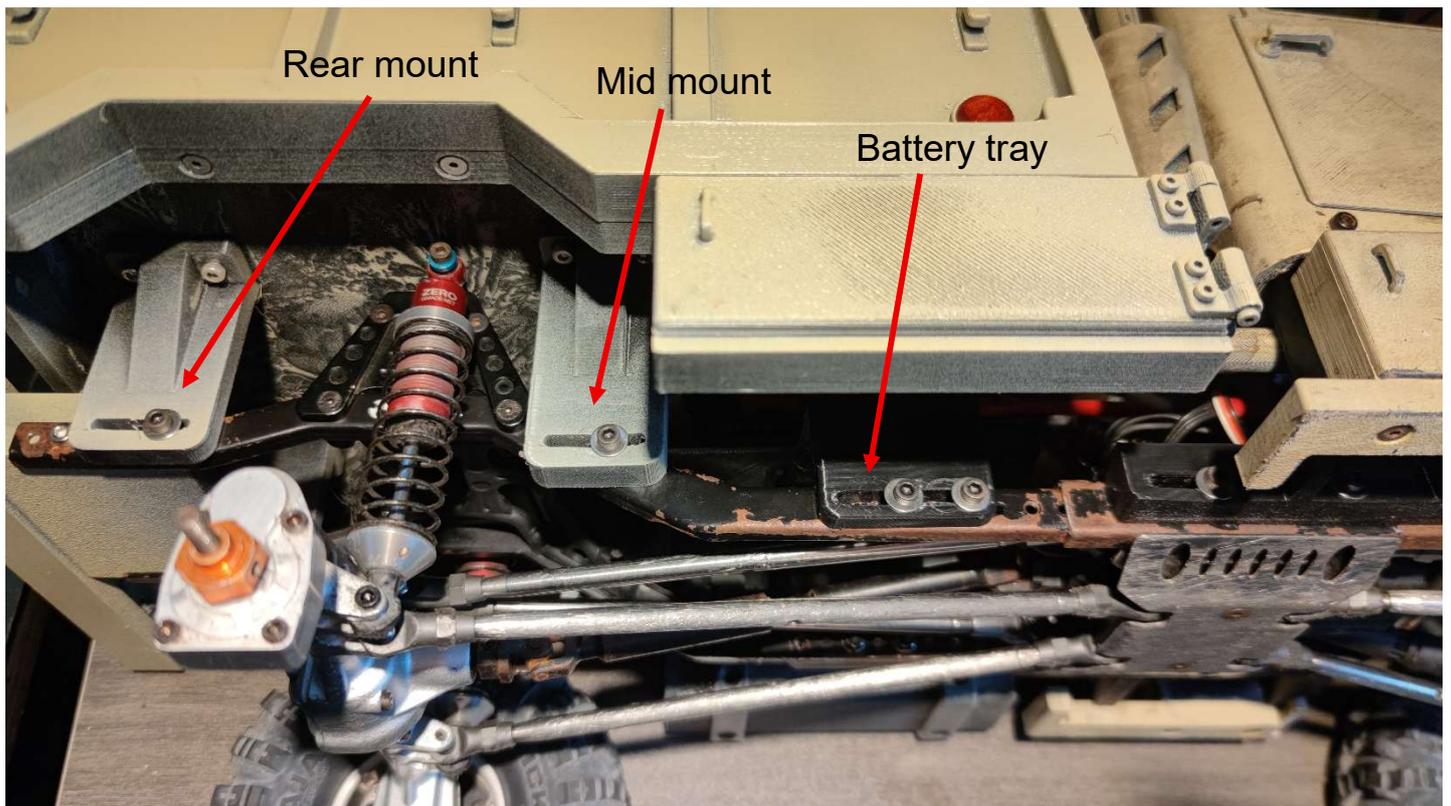

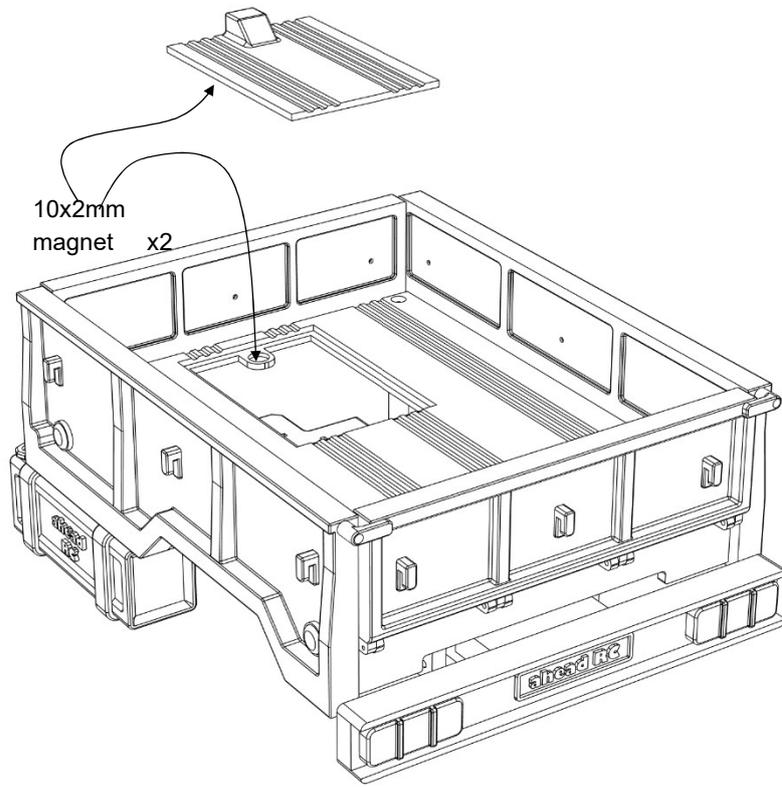

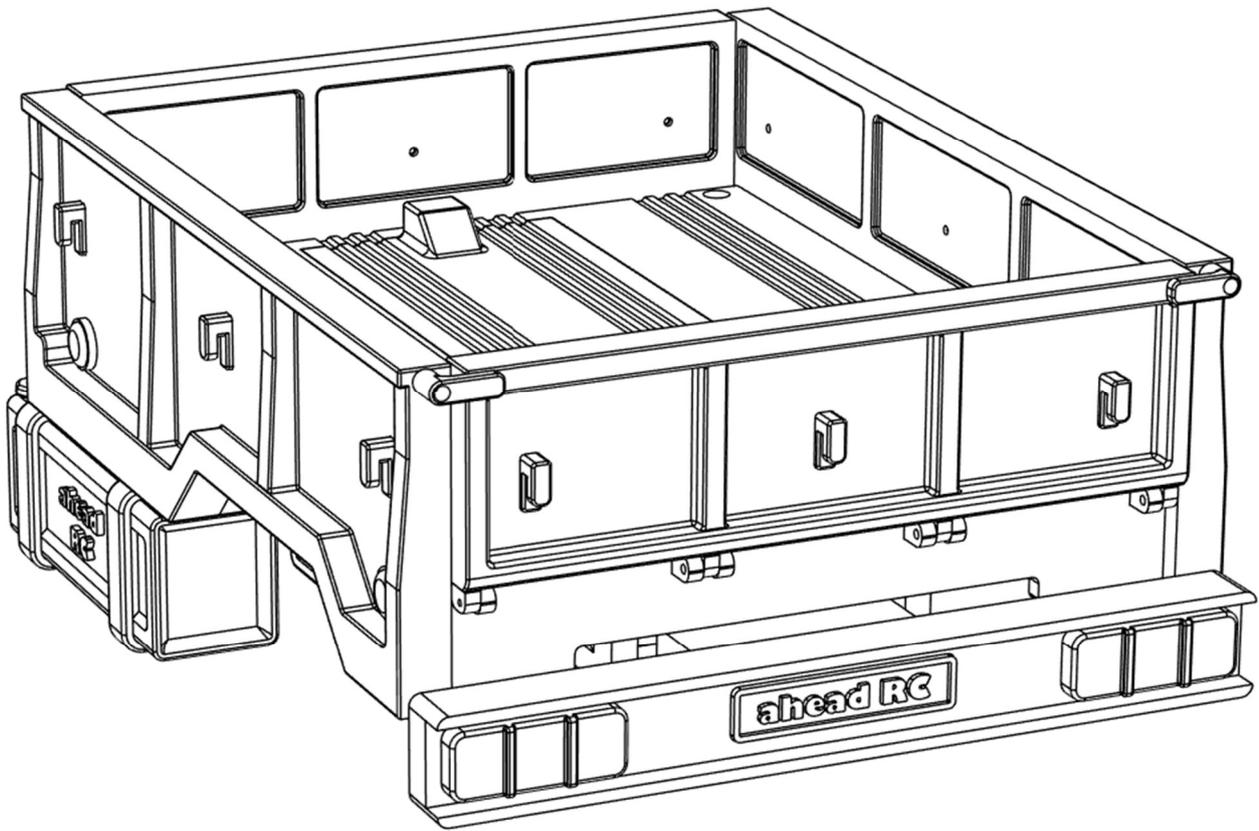

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

[aheadrc@gmail.com](mailto:aheadrc@gmail.com)

or visit us at:

[www.aheadrc.com](http://www.aheadrc.com)