


ahead RC Crawler Assembly Manual

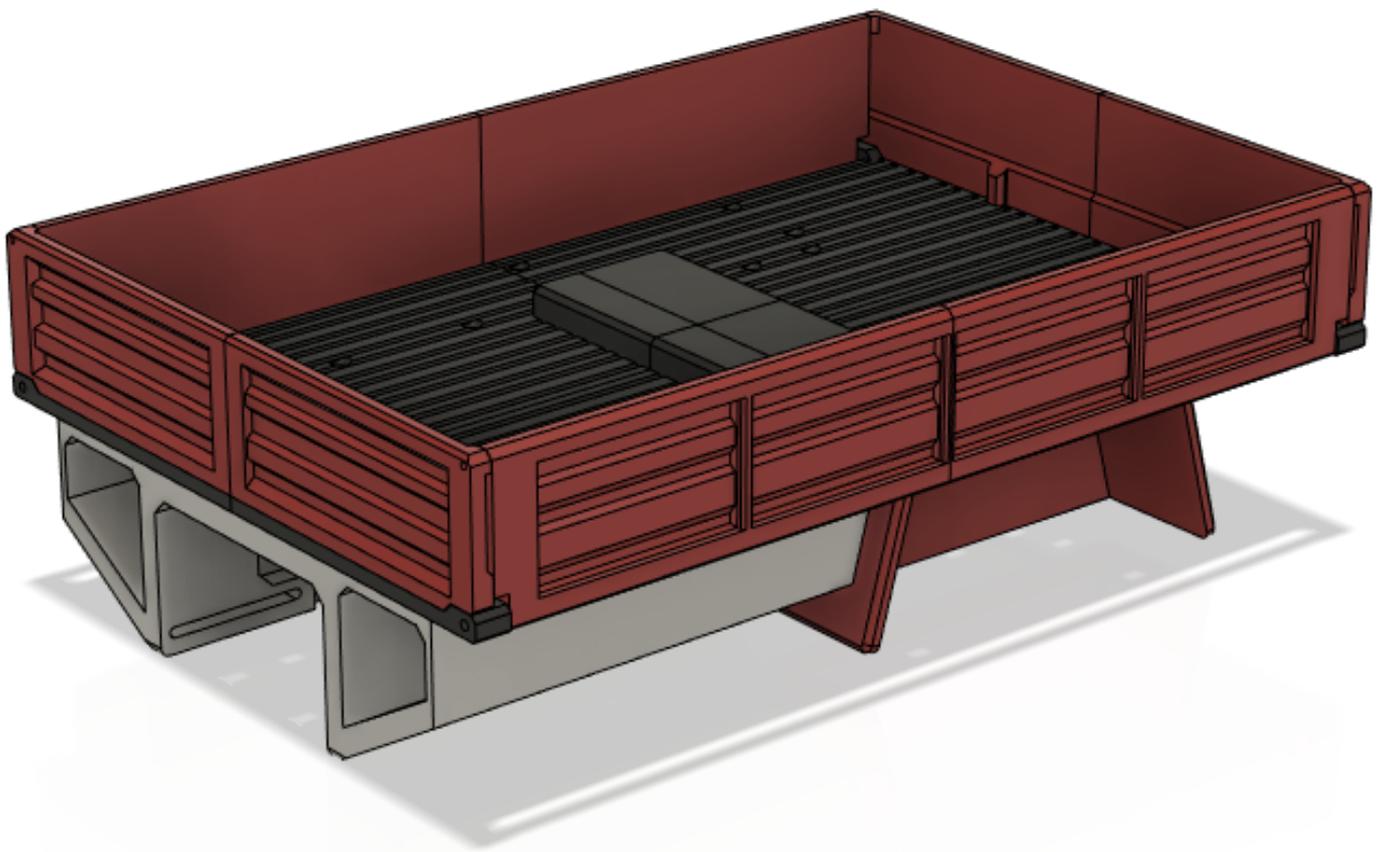

Required tools and hardware

Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

Electronics

- 5mm Orange LED x2
- 5mm Red LED x2
- 5mm White LED x2

Hardware



Hardware	Quantity	Check ✓
M2*10 Socket head	4	
M3*10 Socket head	4	
M3*10 Countersunk (CS)	8	
M3*15 Countersunk (CS)	20	
M3*15 Socket head	10	


Before you begin

- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling

Tip: It will help to paint all of the parts before final assembly

Assembling the floor, front and rear boards

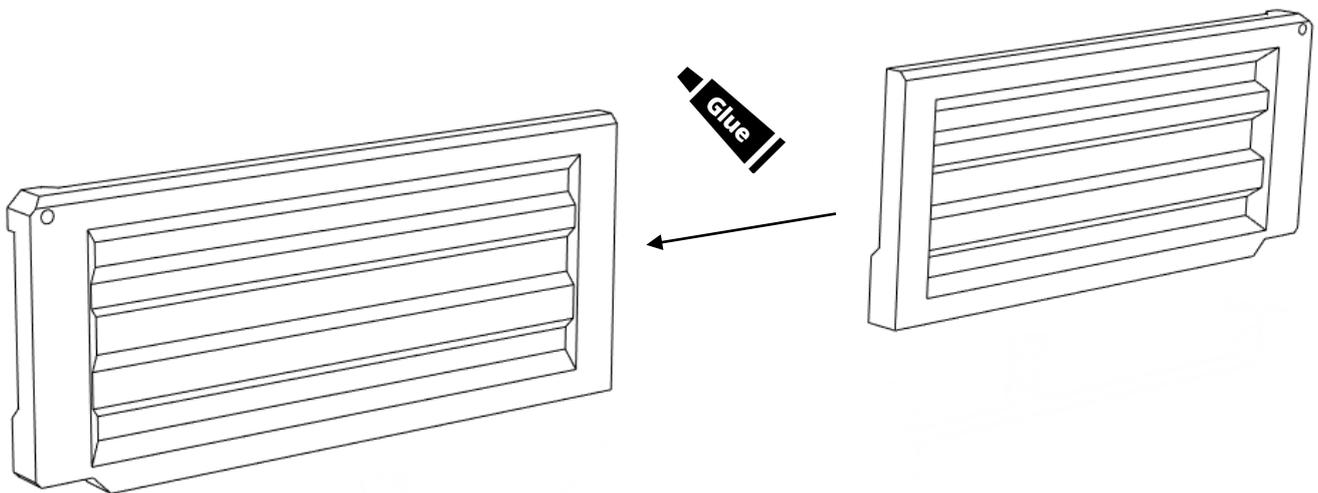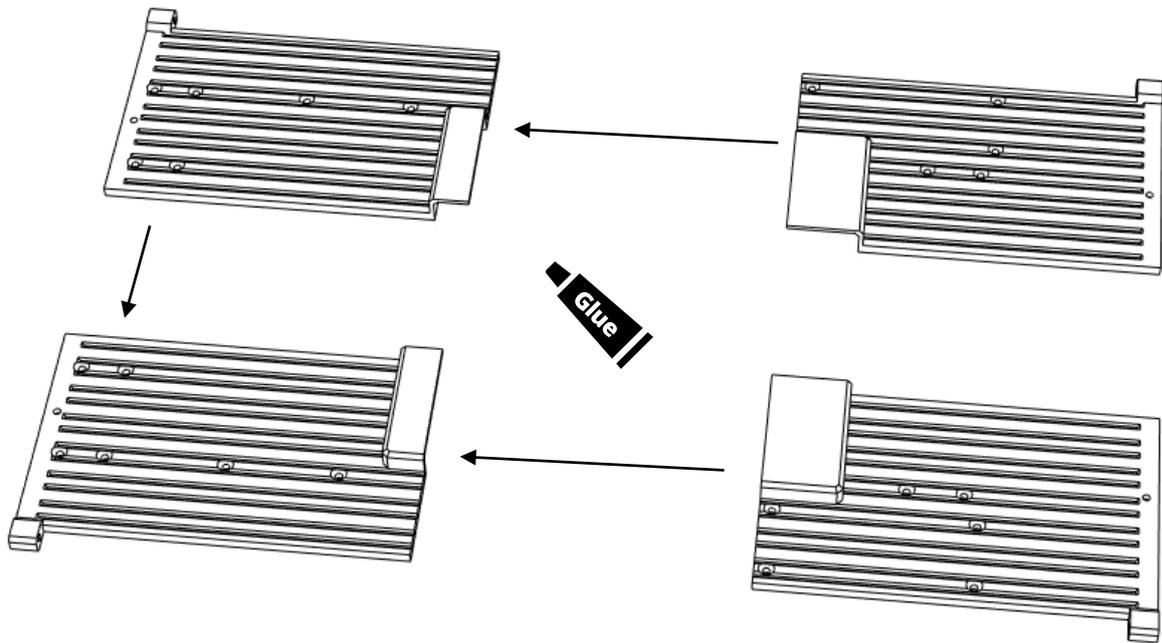


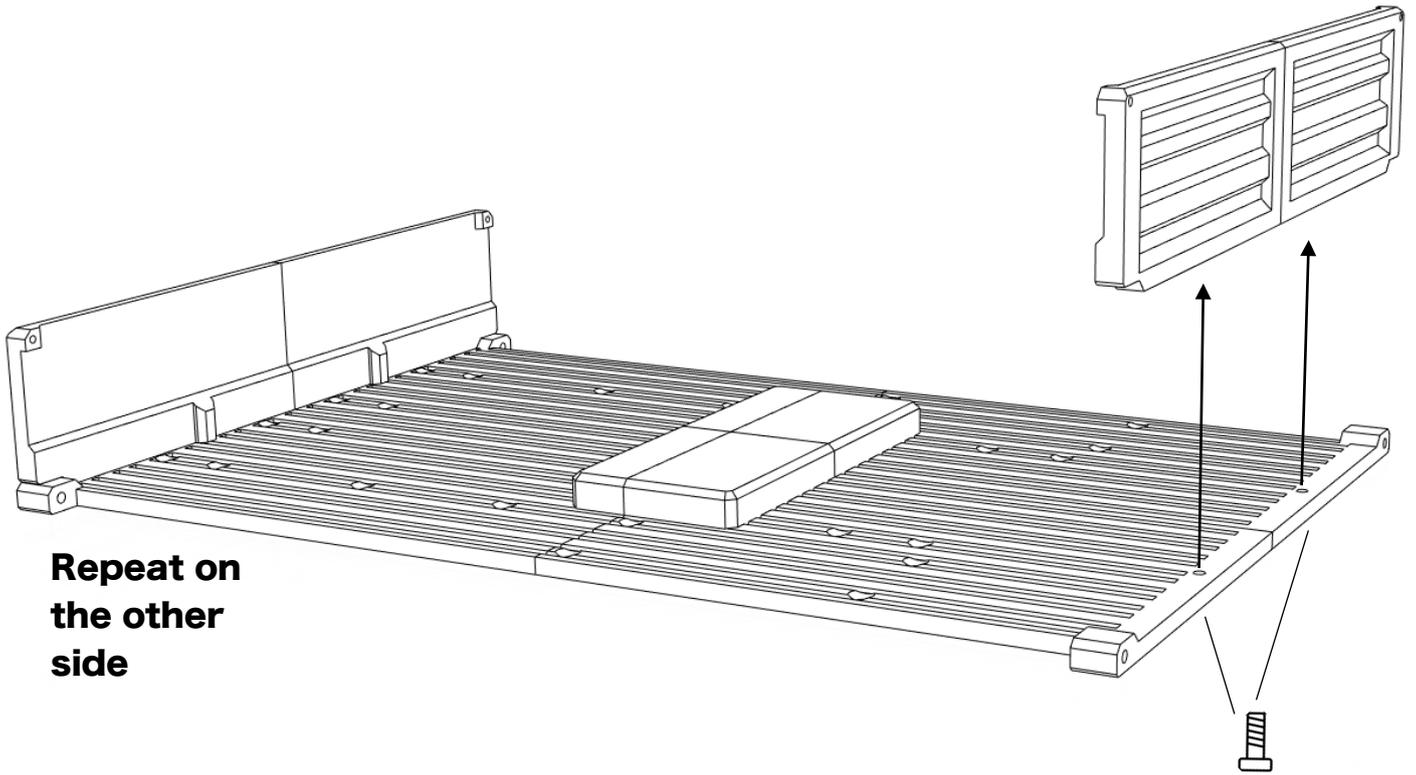


**Repeat on
the other
side**

**M3x15mm CS
x4**

Assembling sideboards

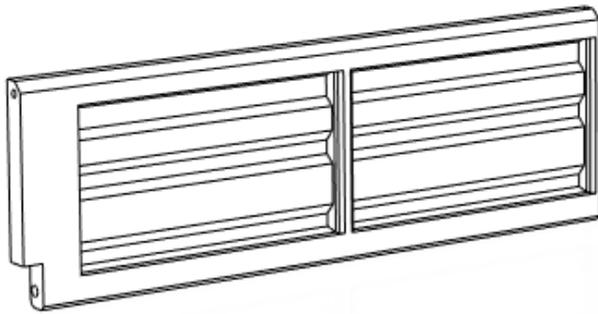


Glue

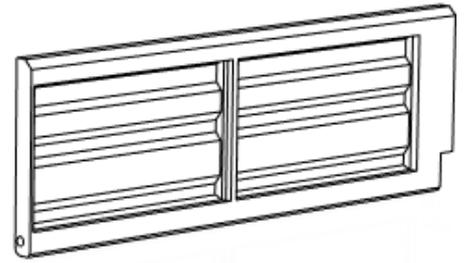



Repeat on the other sideboard

Repeat on the other side

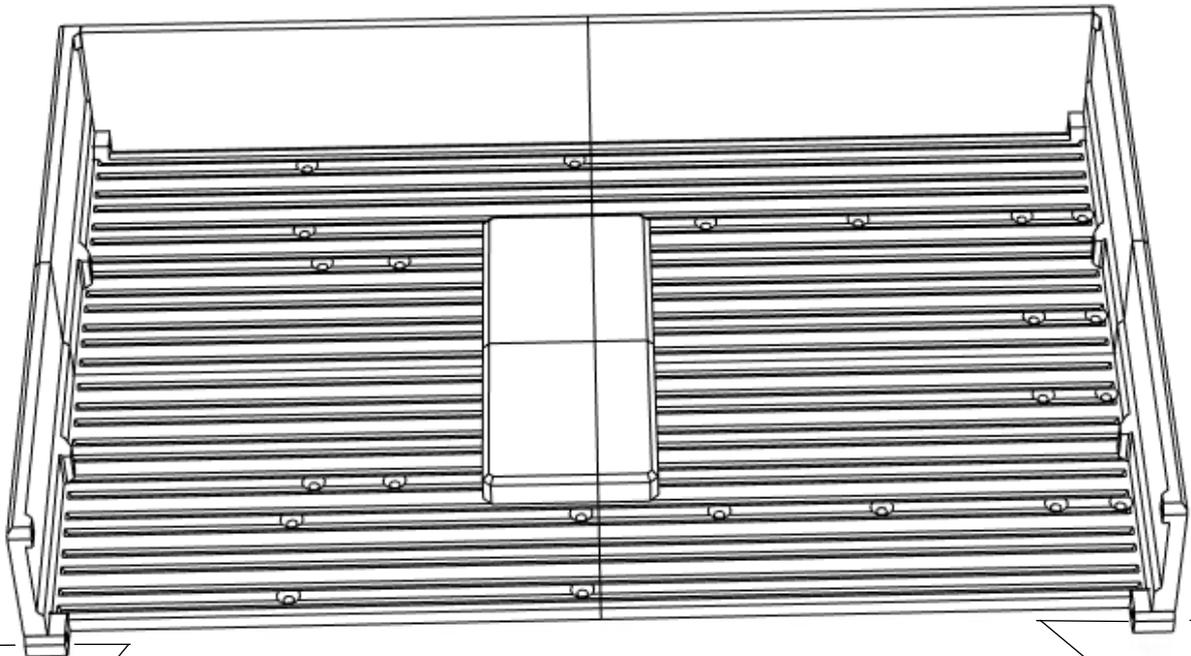

M3x20mm x4

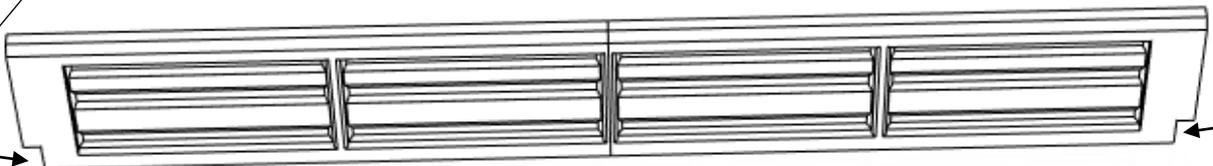


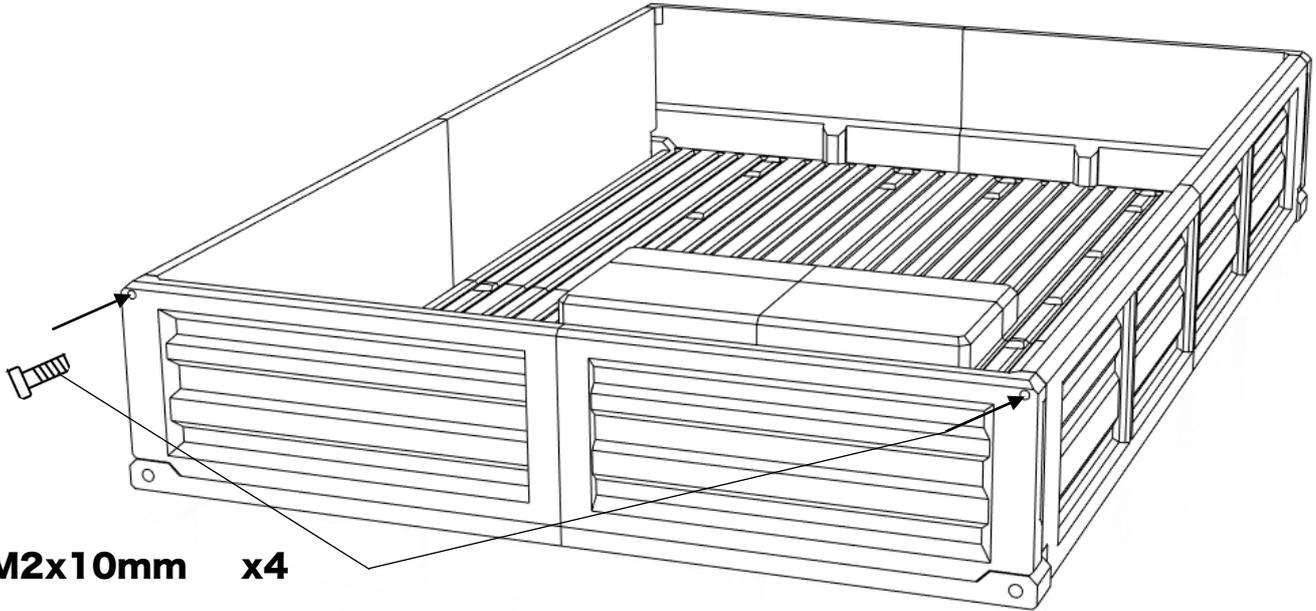

M2x10mm x4

**Repeat on
the other
side**


Attaching the mounts

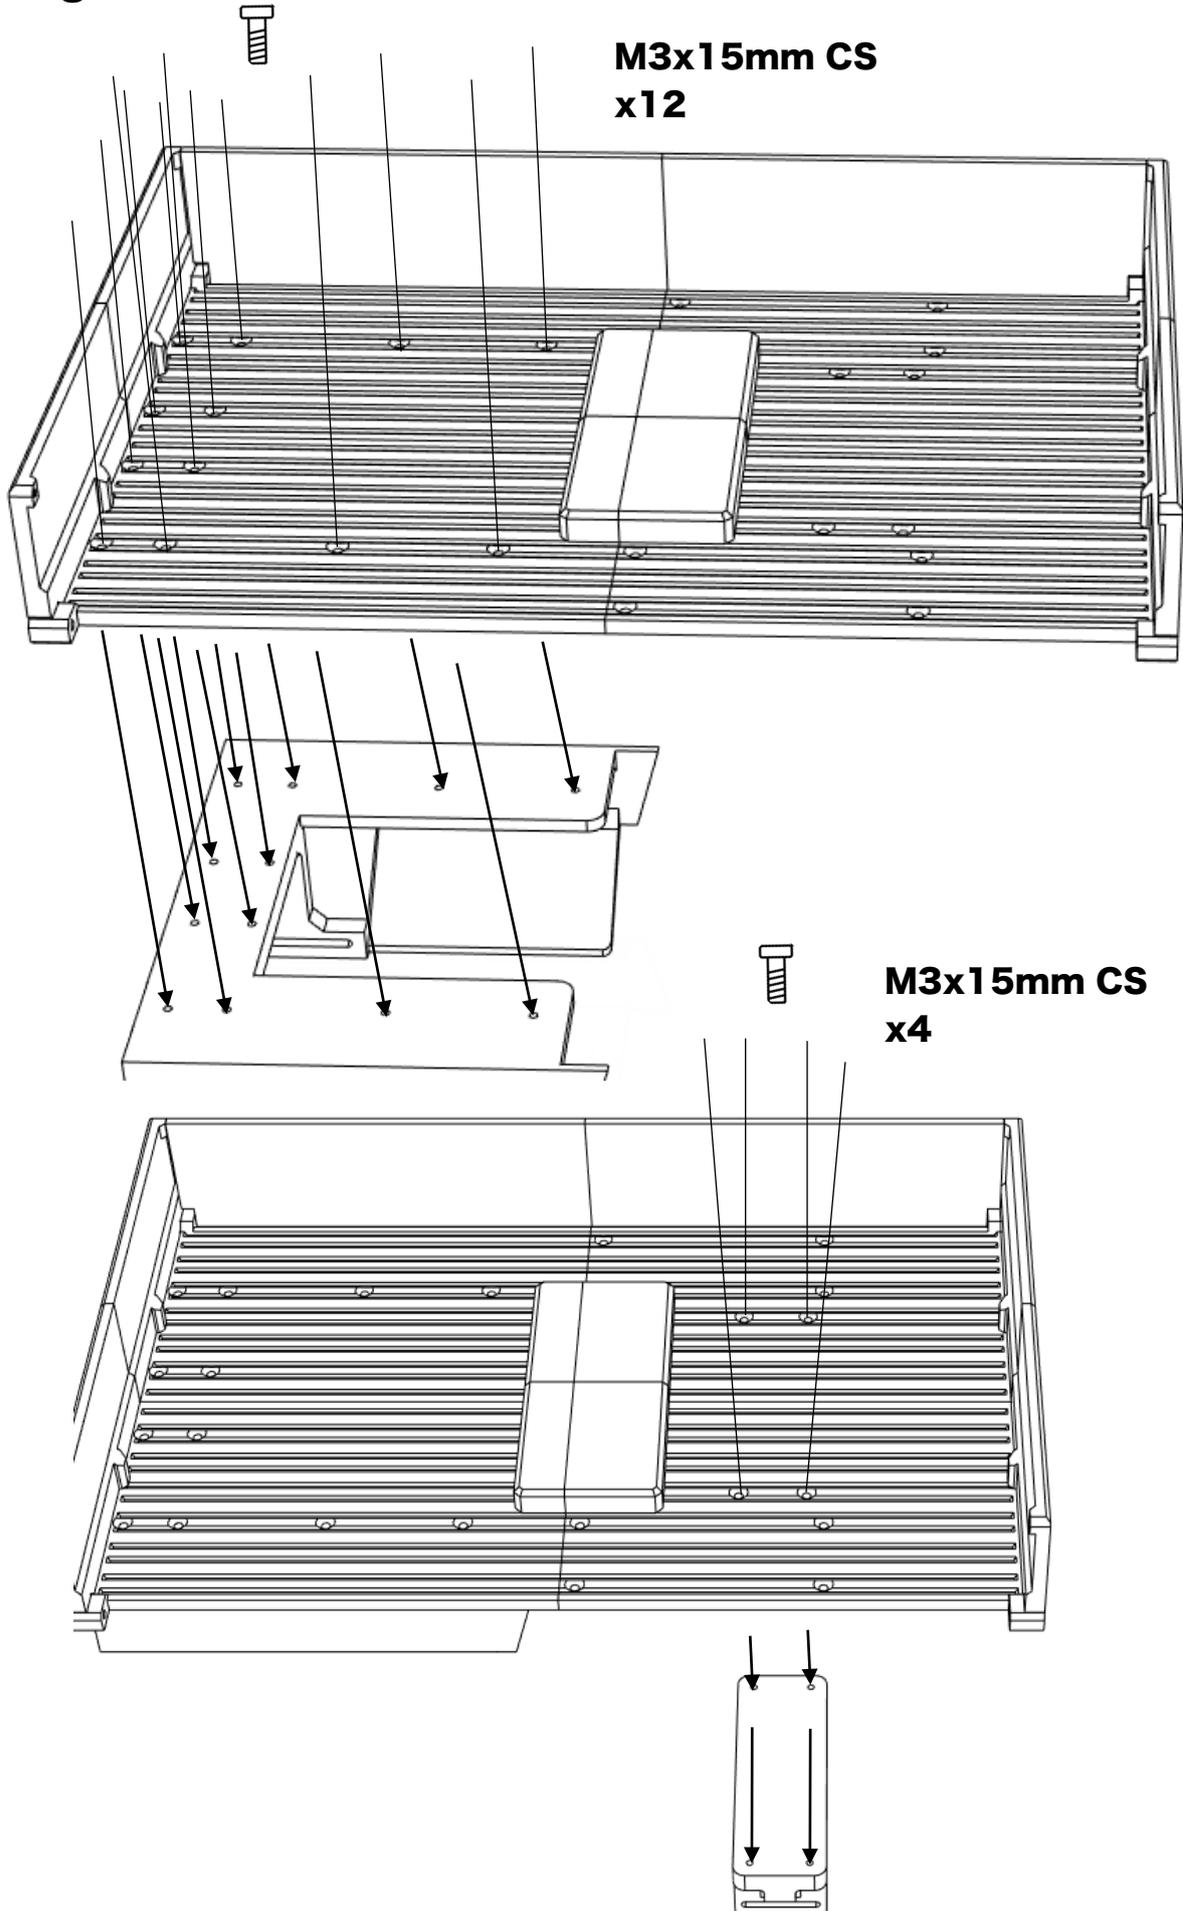


Attaching the fenders





M3x10mm CS
x8

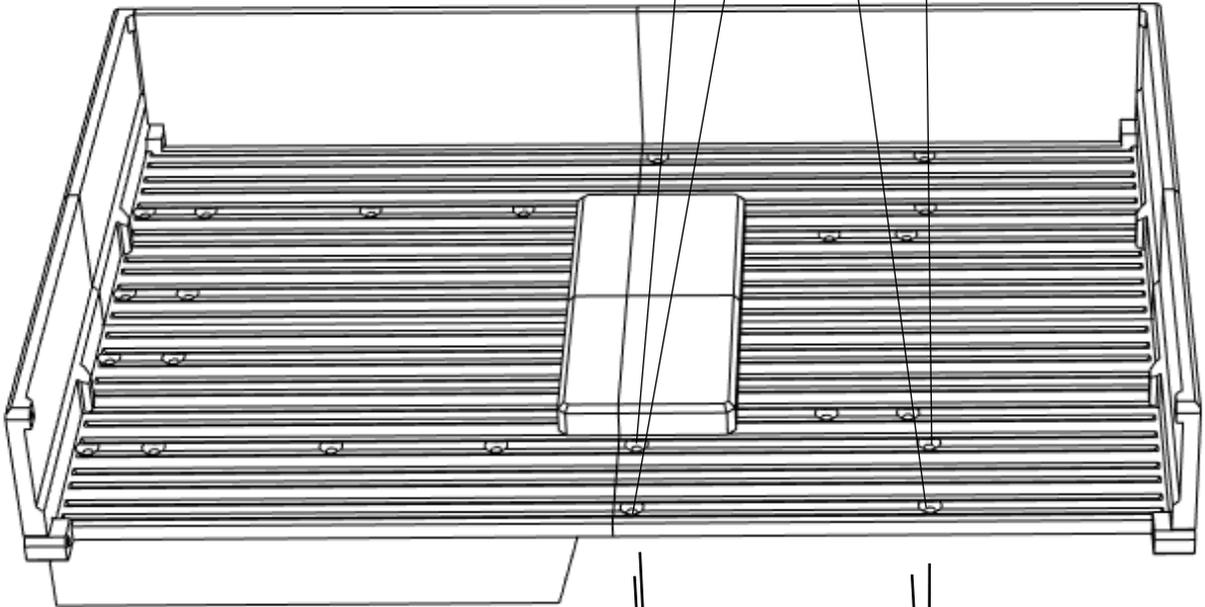



Repeat on
the other
side

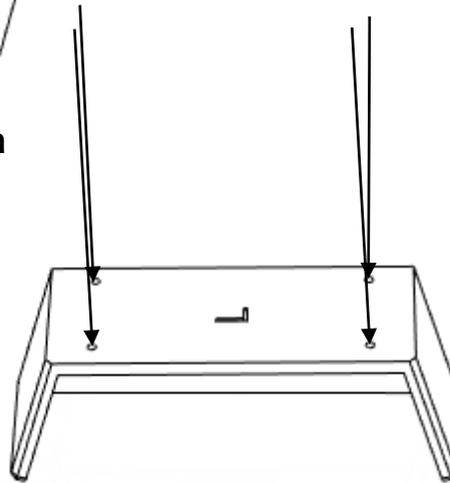

Assembling and mounting the bumper

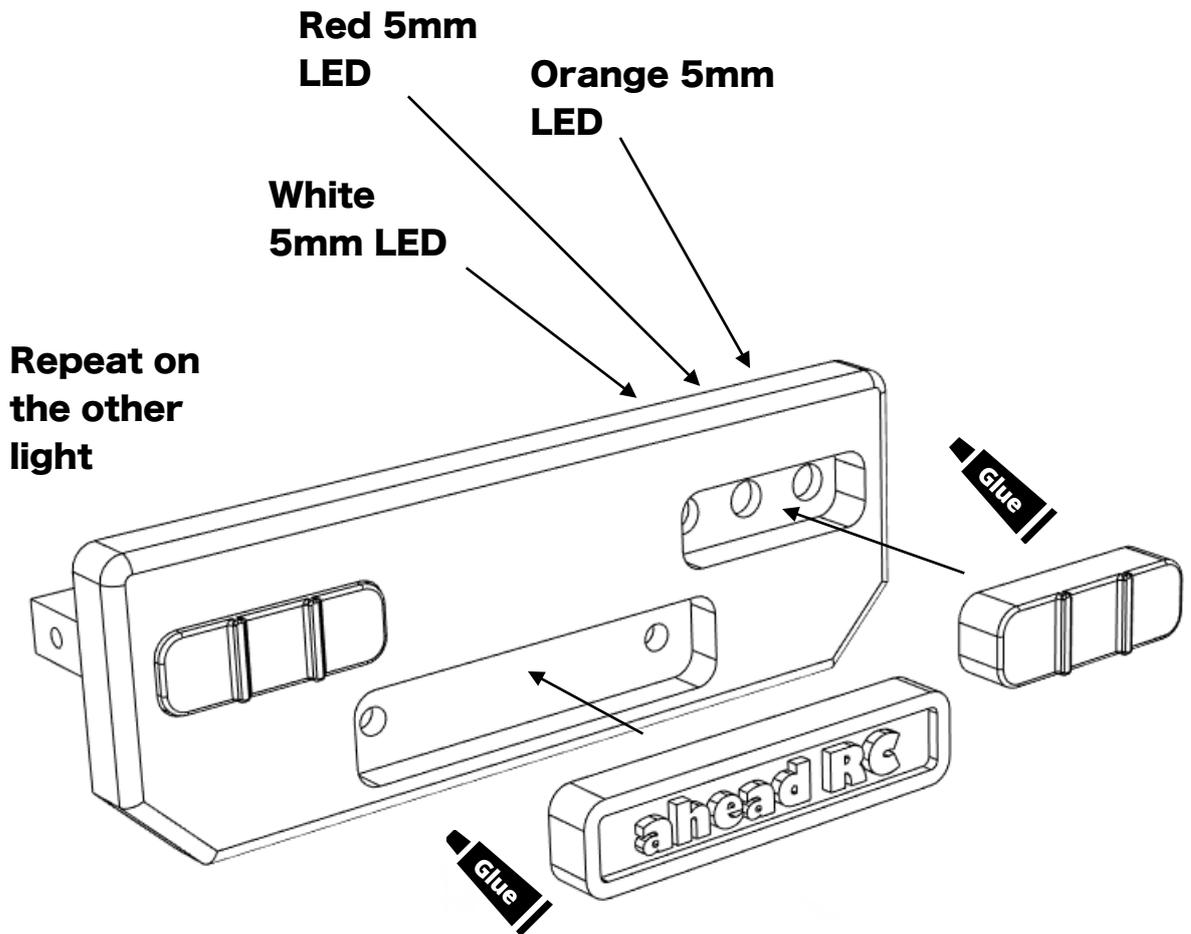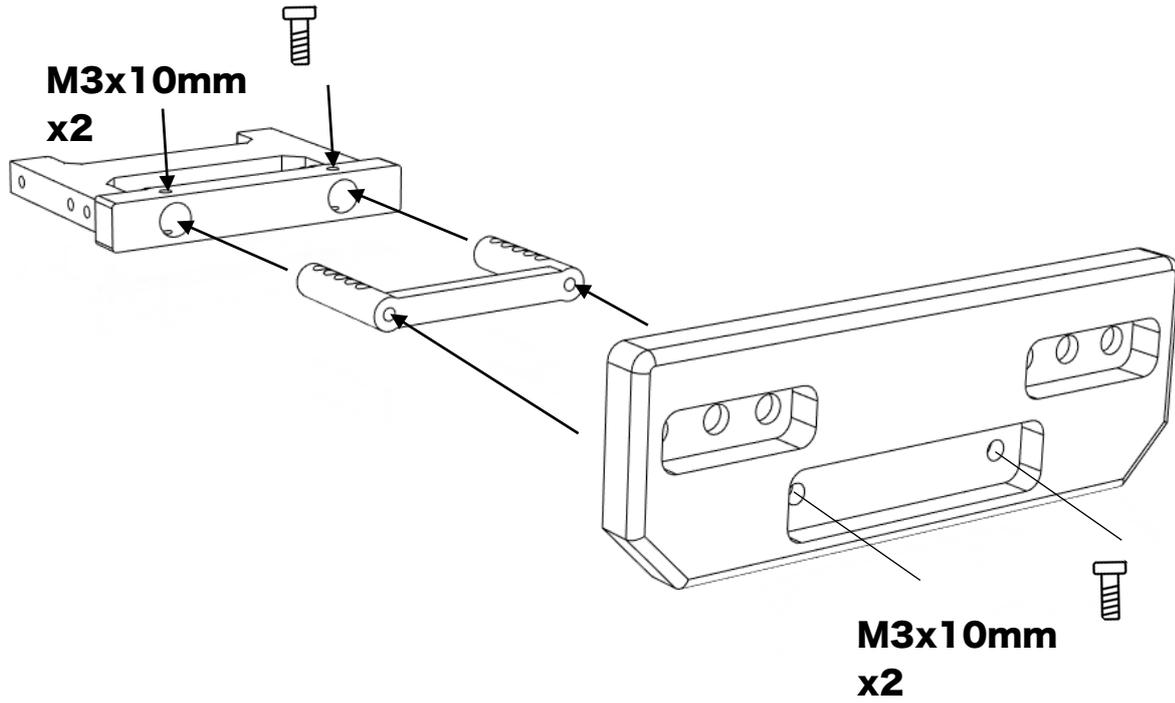

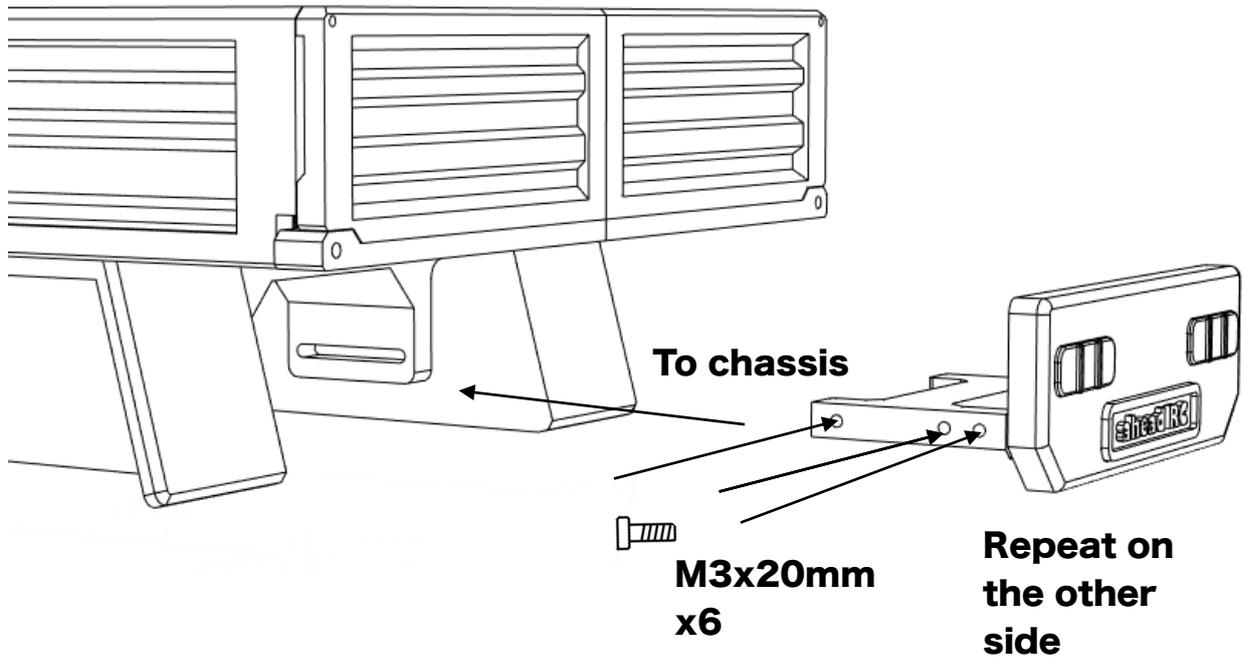

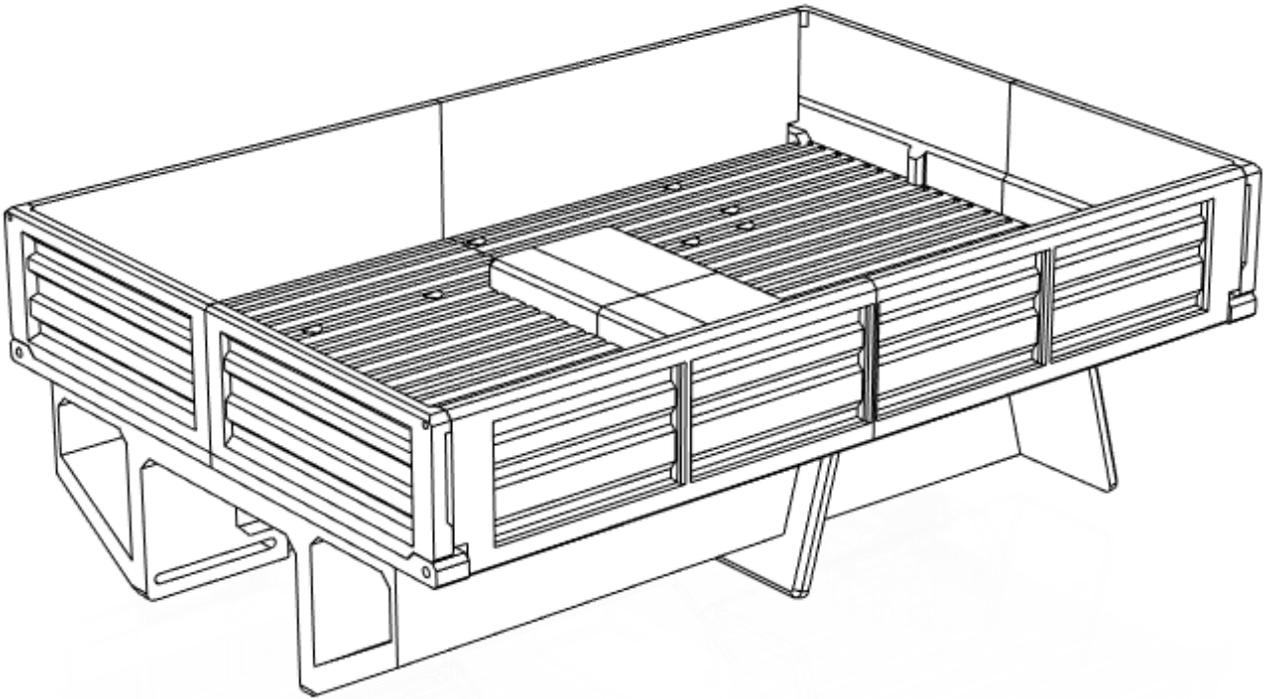

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

aheadrc@gmail.com

or visit us at:

www.aheadrc.com

Best of luck with your build!