

# **ahead RC** Crawler

## U452 Cab

### Assembly Manual



## Required tools and hardware

### Tools

- 1.5mm Hex Driver
- 2.0mm Hex Driver
- 2.5mm Hex Driver
- Needle Nosed Pliers
- Instant Glue
- Hot Glue

### Electronics

- 5mm LED White x2
- 3mm LED Orange x4


### Hardware


Hardware	Quantity	Check
M2*5 Socket head	12	
M2*8 Socket head	14	
M2*10 Socket head	20	
M3*8 Socket head	6	
M3*10 Socket head	4	
M3*16 Socket head	2	
M3*5 Grub screw (GS)	1	
M3*10 Grub screw (GS)	4	
10x2mm Magnet	4	

## Before you begin


- Be sure to read through the manual and familiarise yourself with the instructions
- Visualise a plan to assemble all the pieces
- Make sure you have all of the hardware and tools
- Be sure to have enough instant glue
- Dry fit all parts before painting and assembling

Tip: It will help to paint all of the parts before final assembly


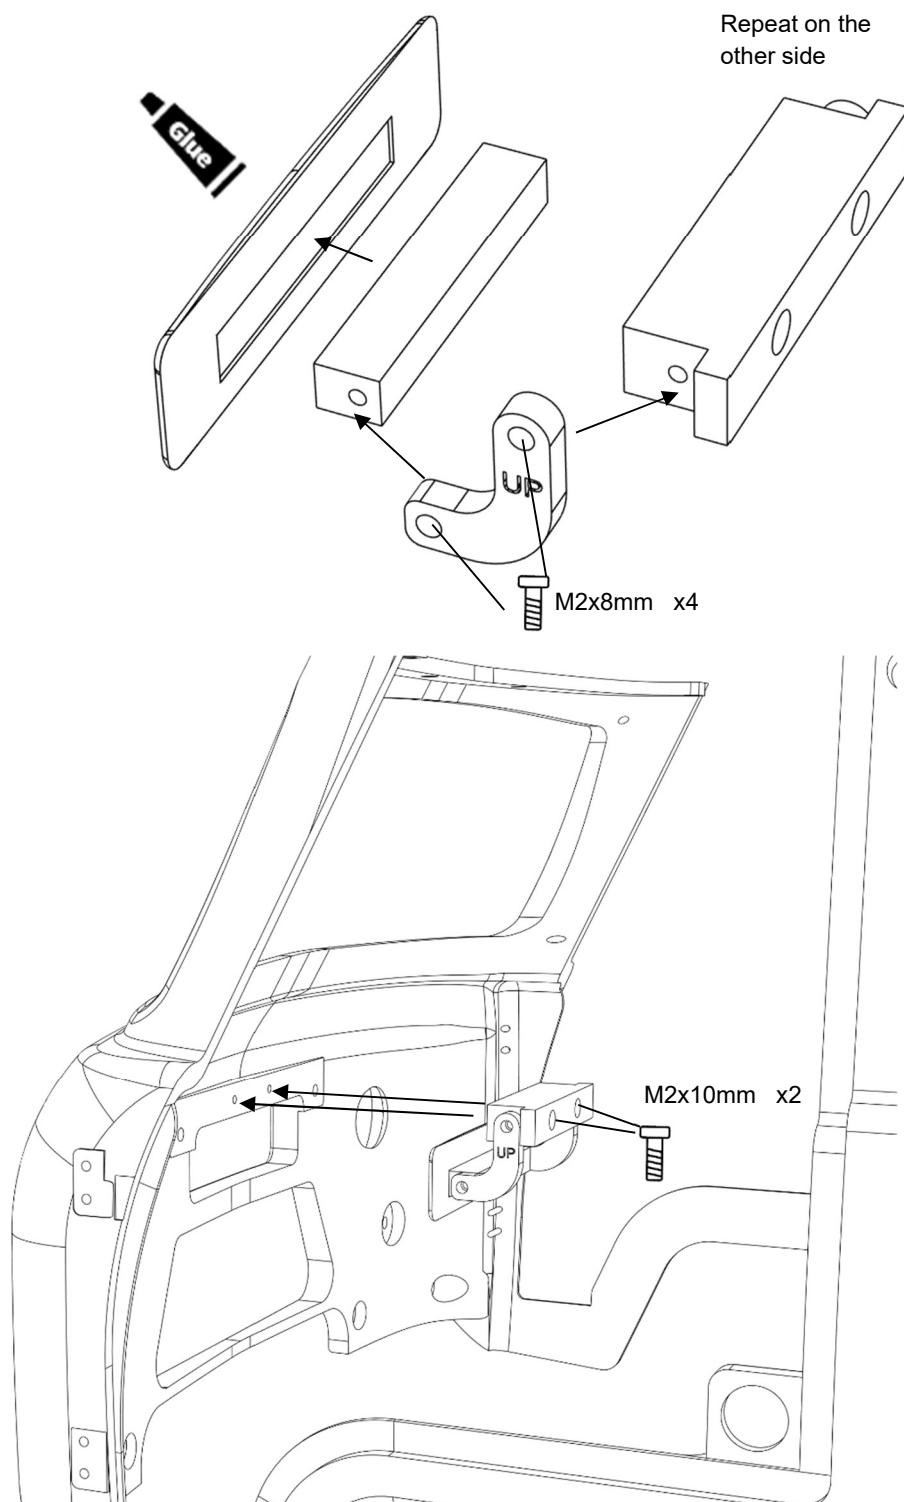


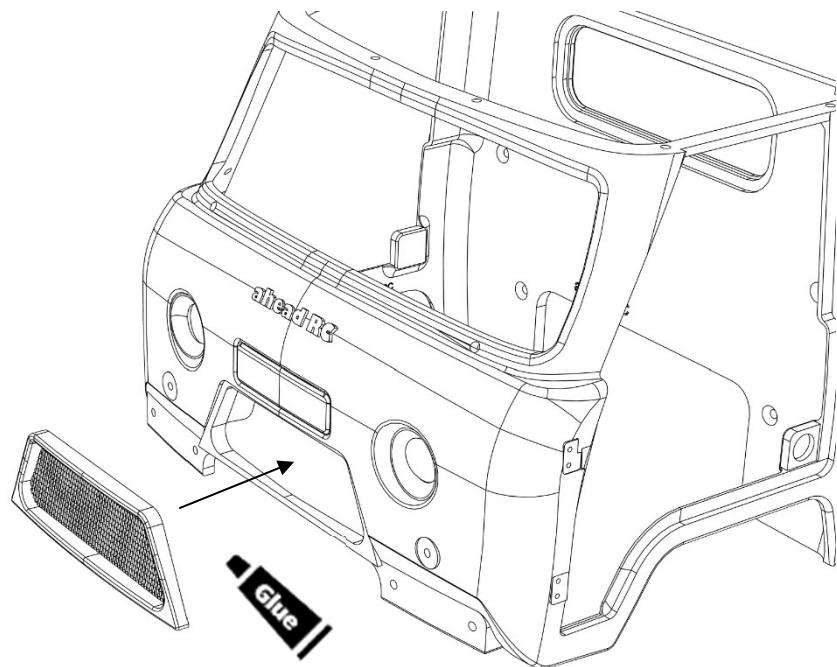


## Bumper type 1



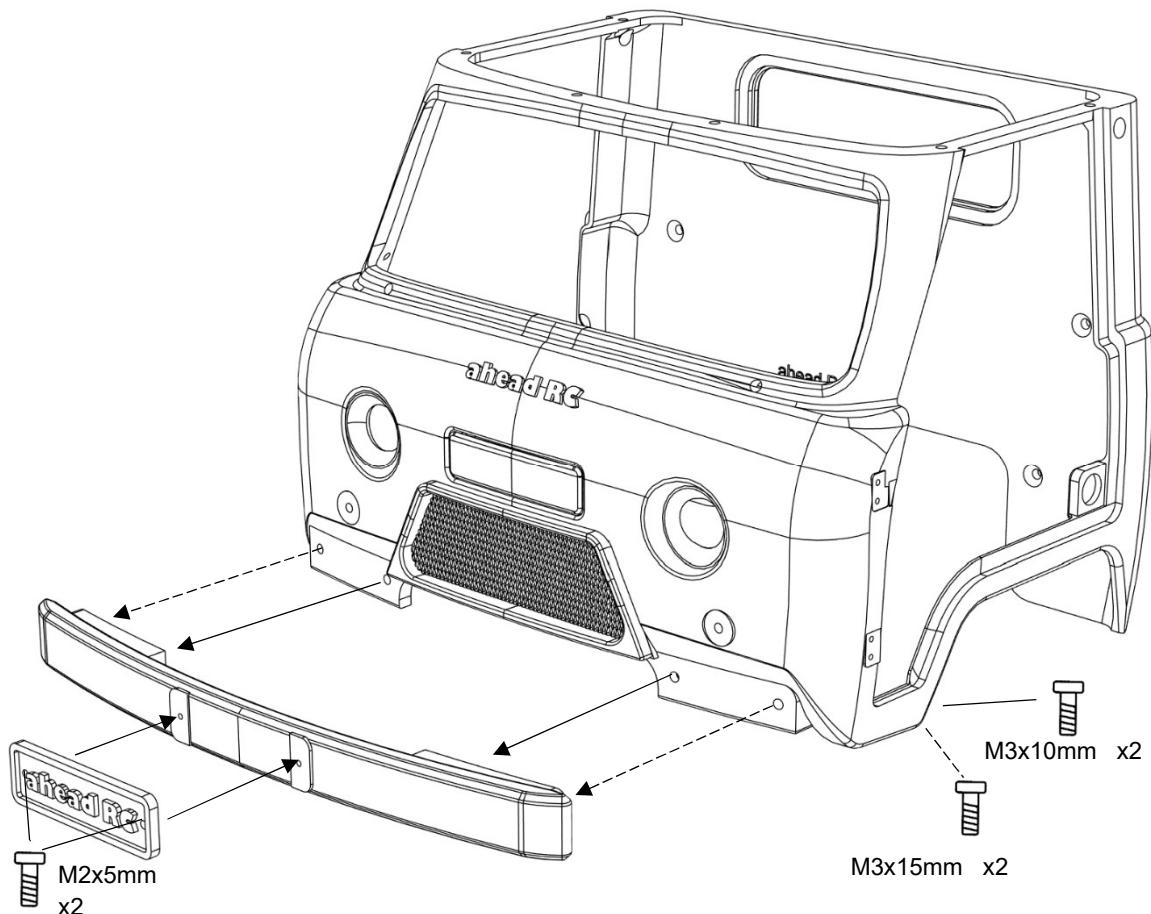




## Bumper type 2

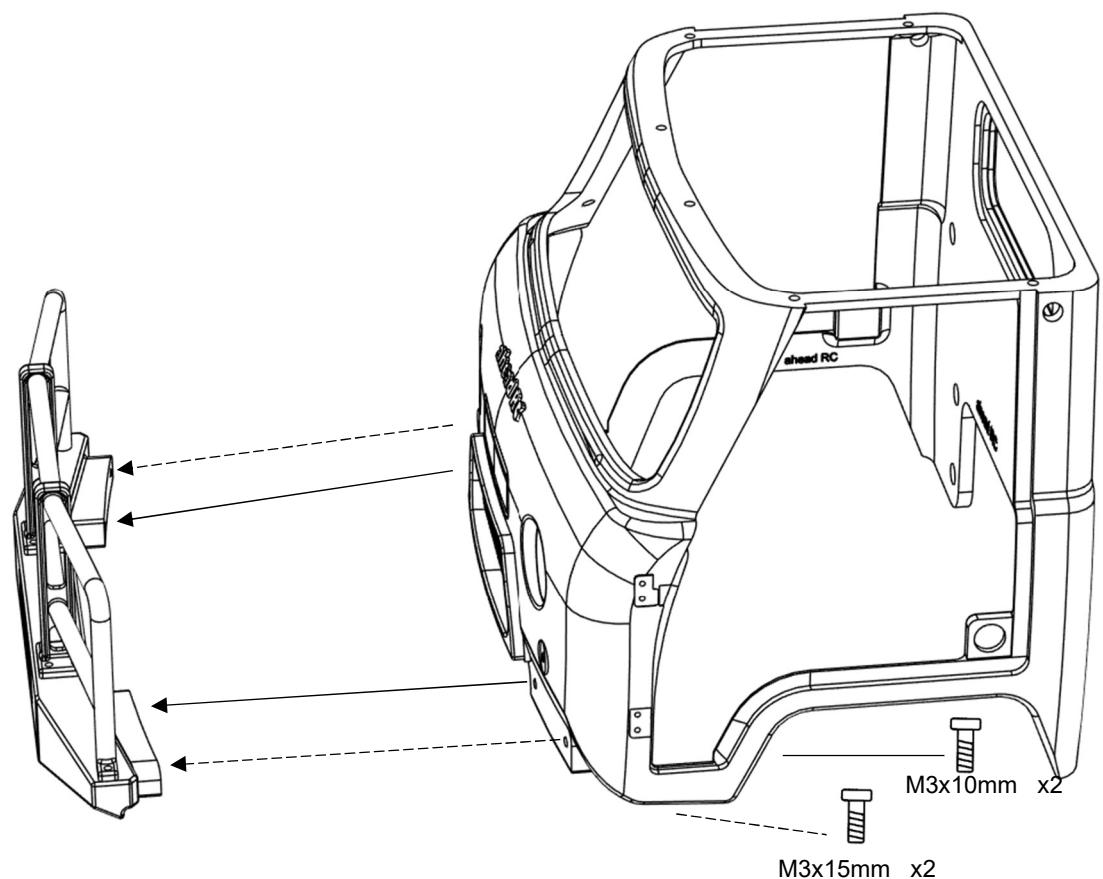
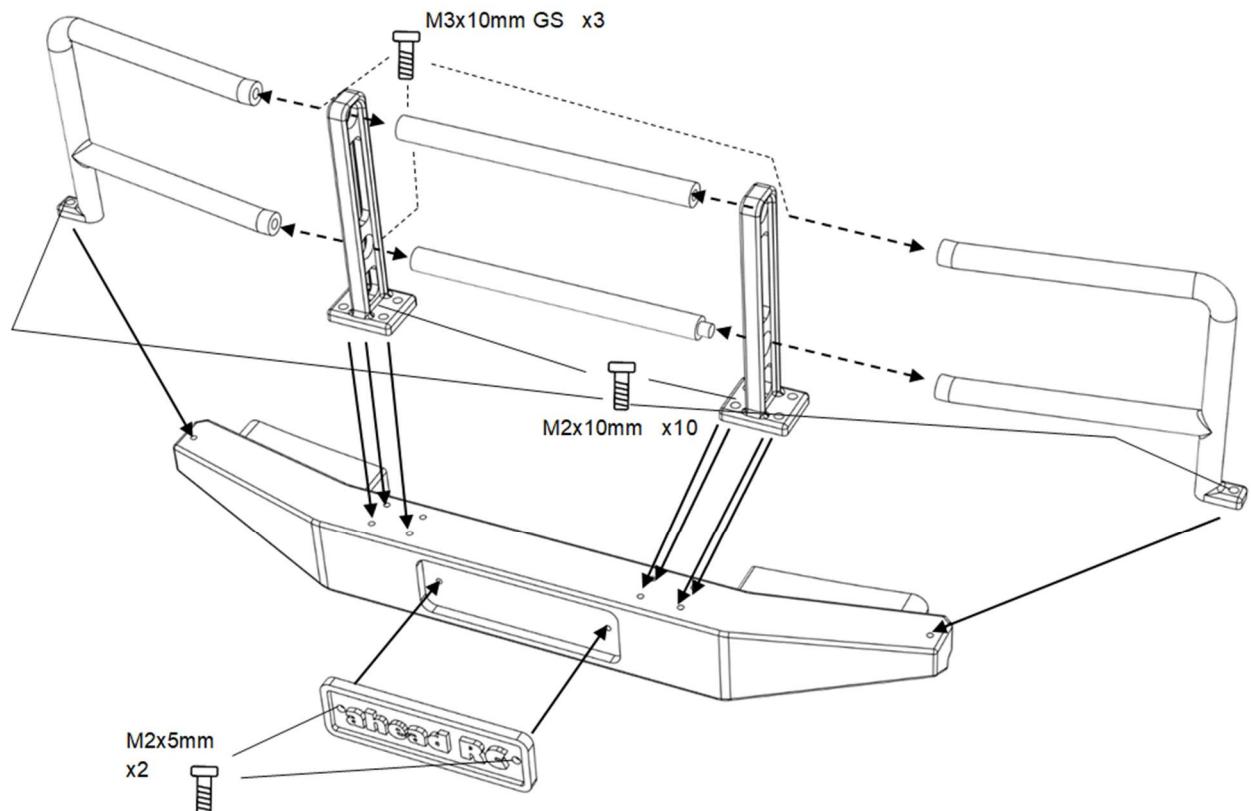




## Bumper type 3

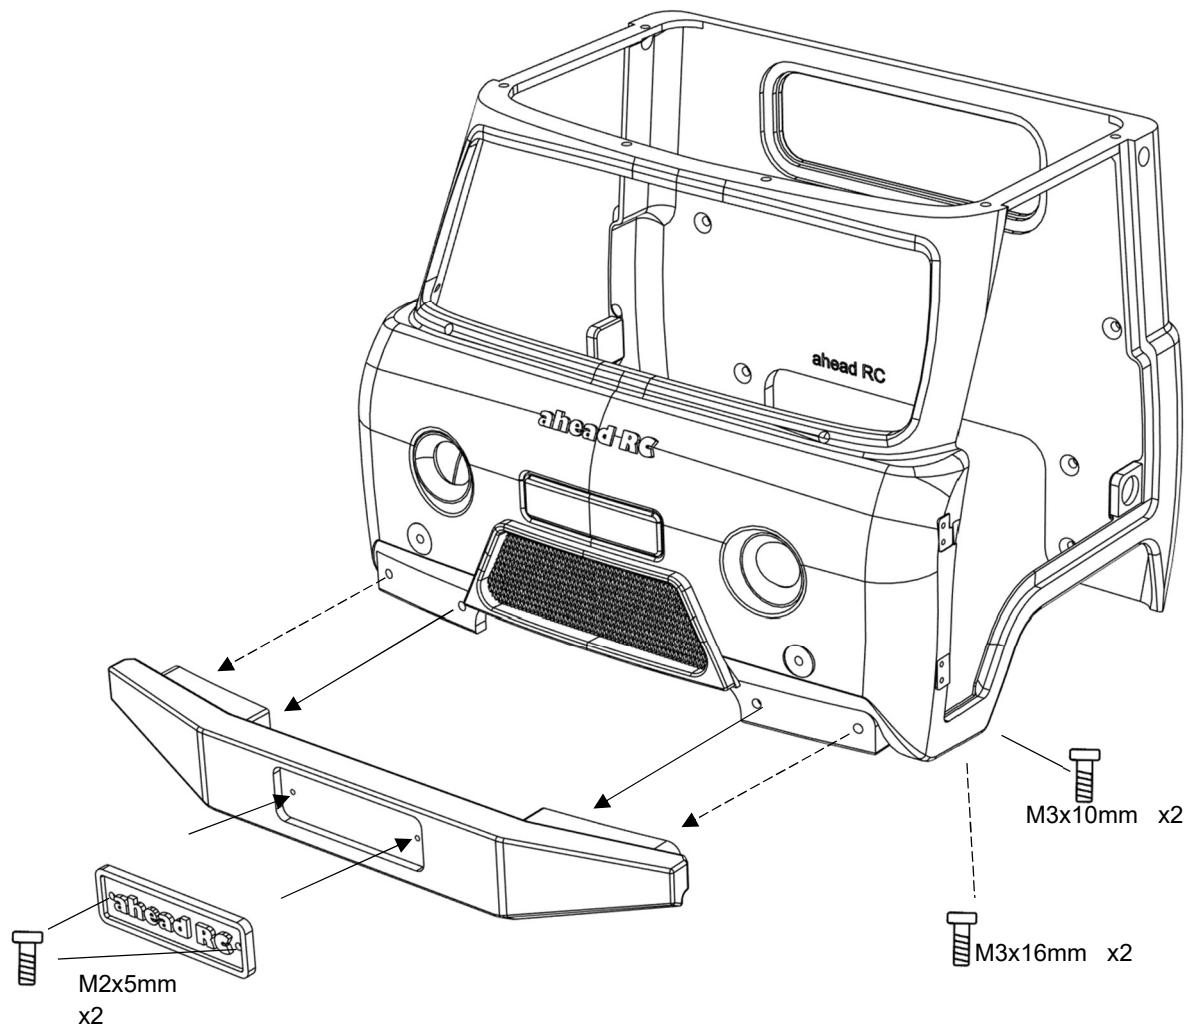


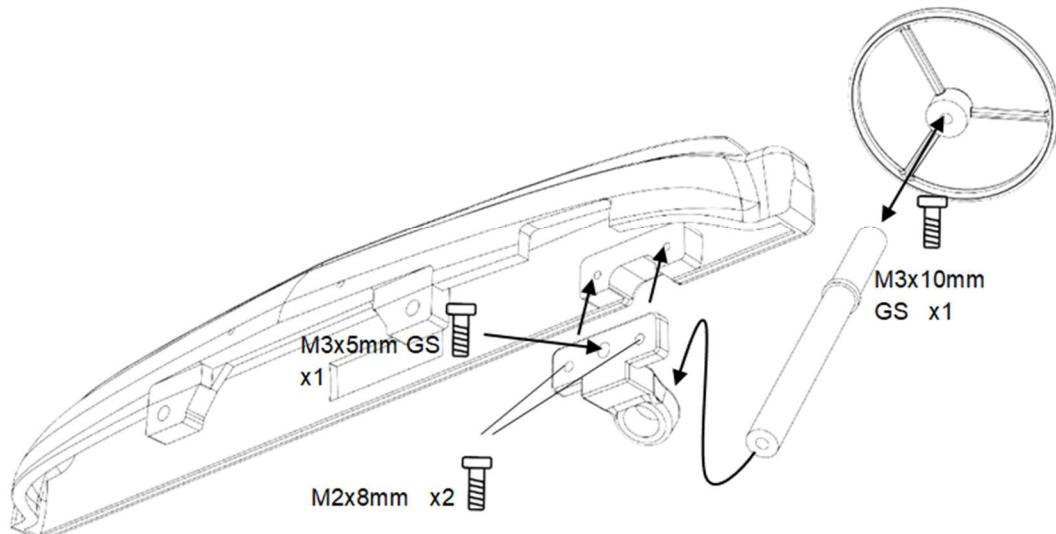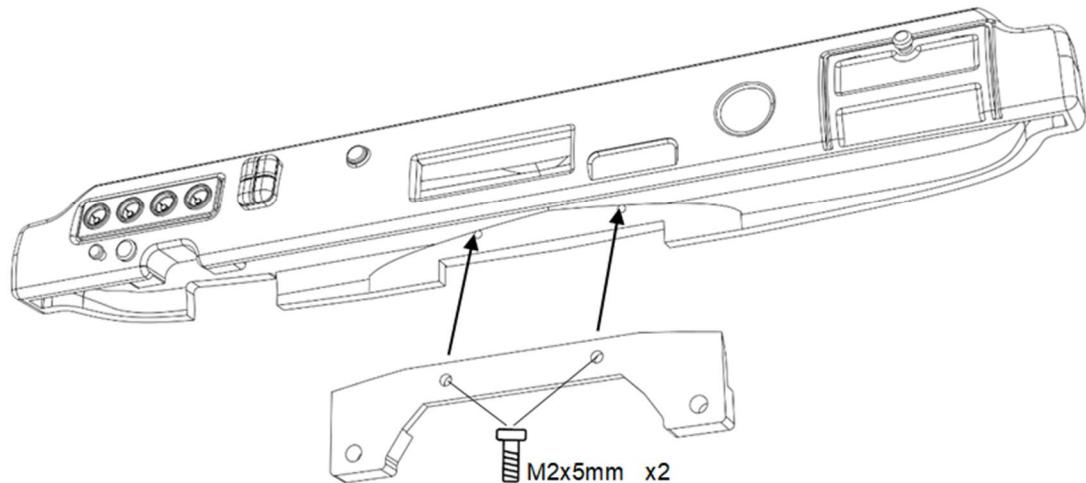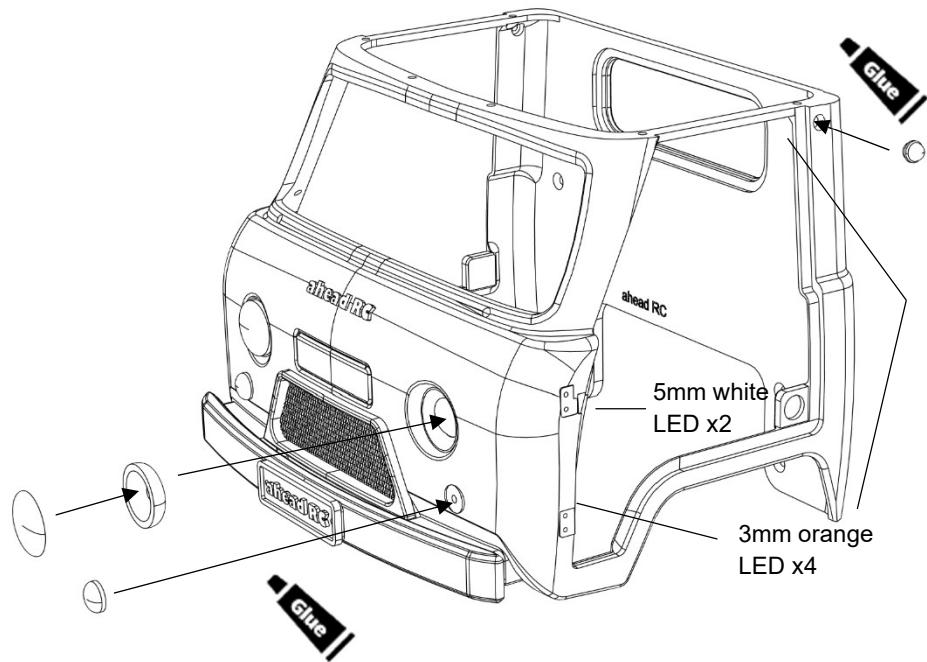

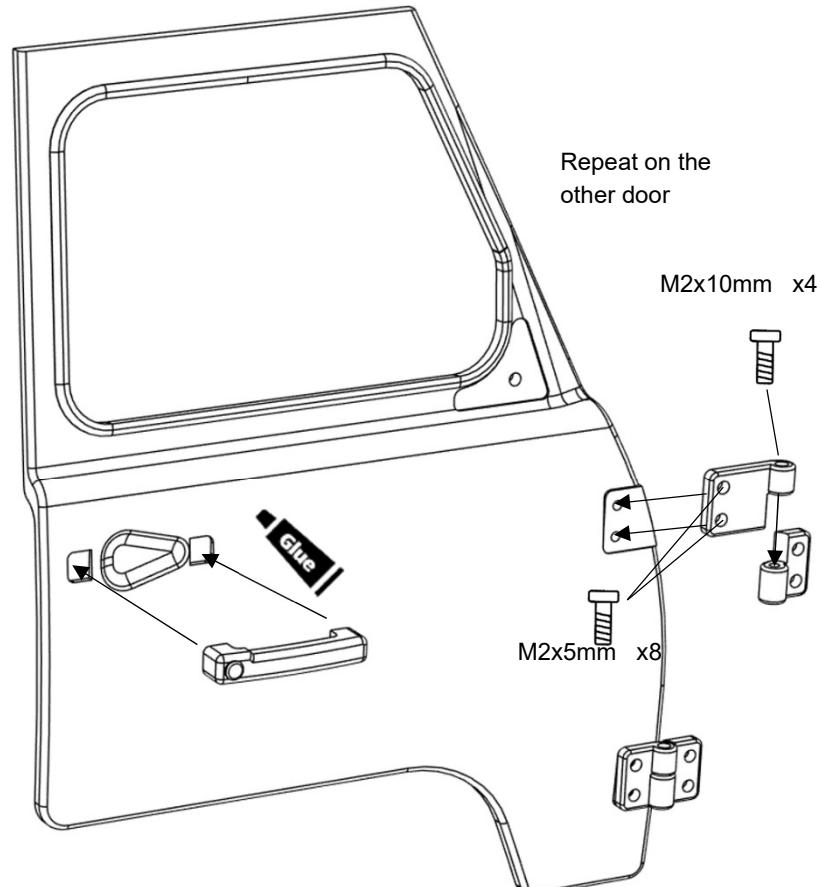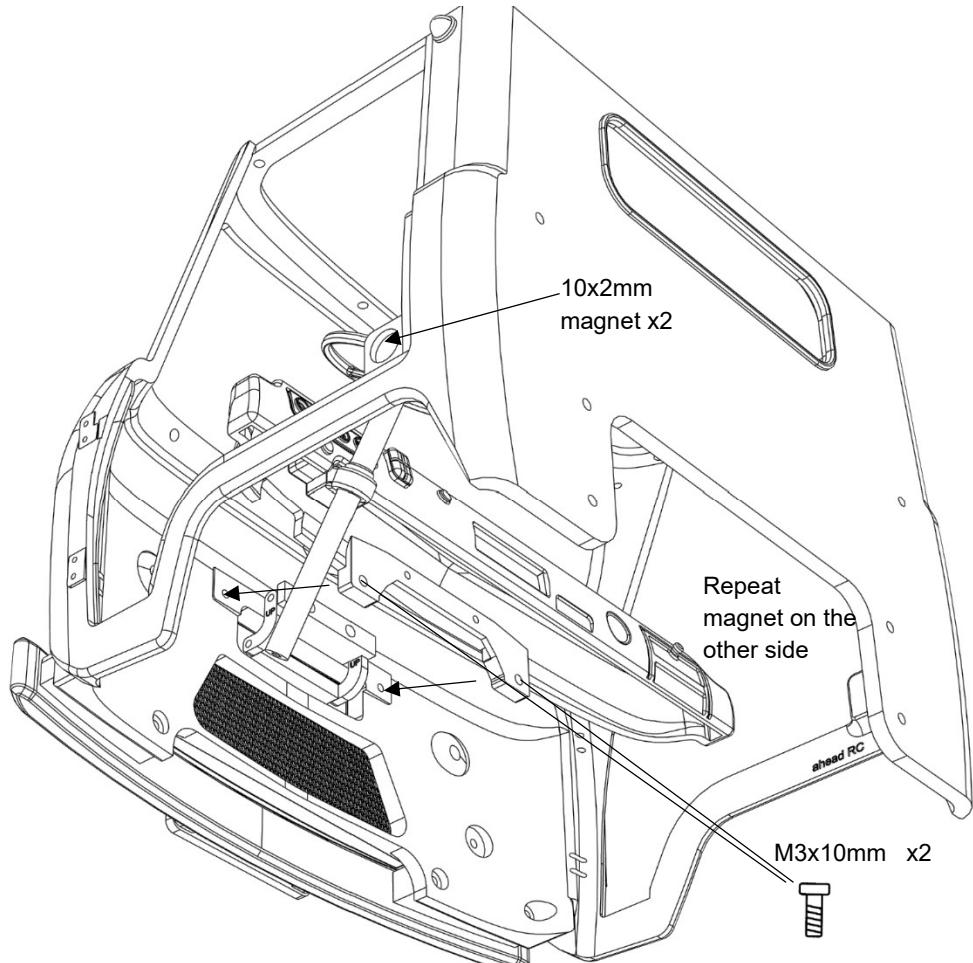

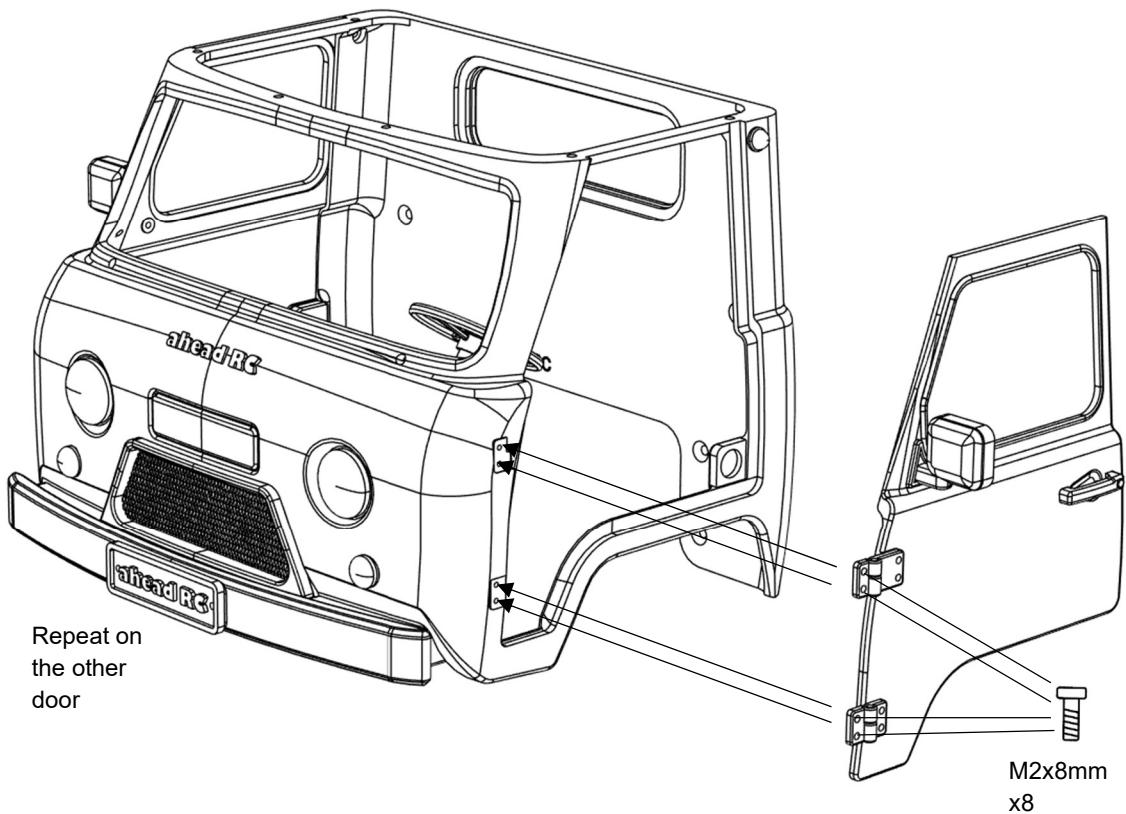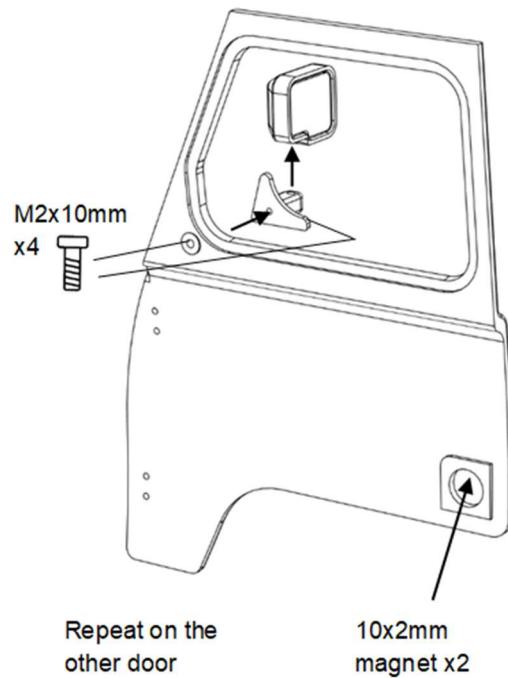

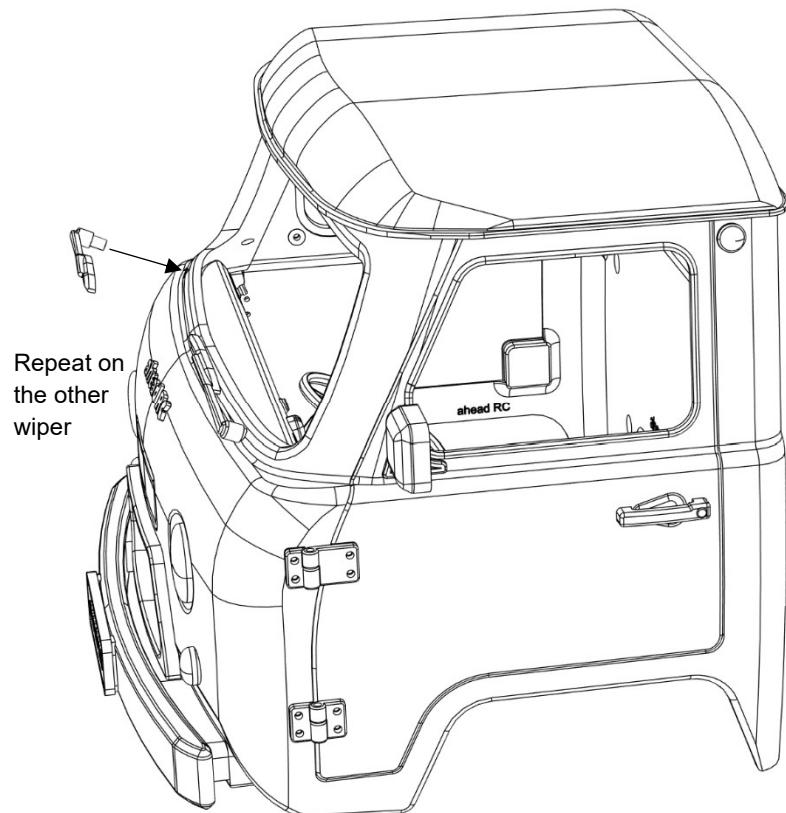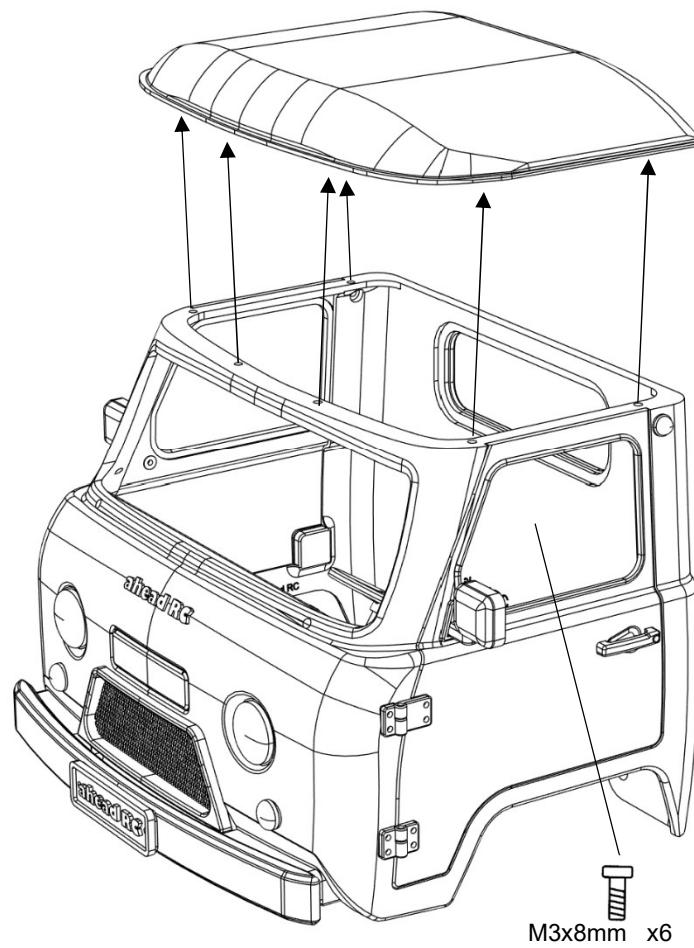

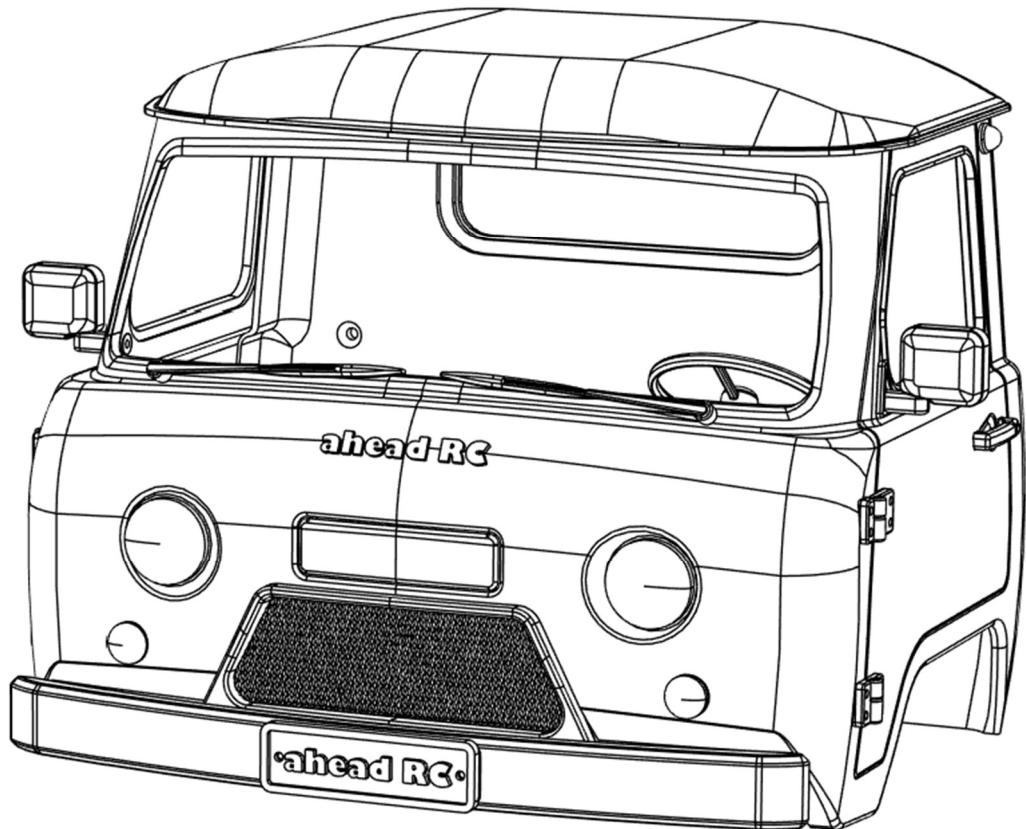

Body is now fully complete. Thank you for selecting ahead RC products.

If you have any questions or need help with the assembly, please do not hesitate to contact us at:

[aheadrc@gmail.com](mailto:aheadrc@gmail.com)

or visit us at:

[www.aheadrc.com](http://www.aheadrc.com)